

MECHANISM PARTS LOCATION (RAA0919)

1

2

3

4

Note:

When changing mechanism parts, apply the specified grease to arrow indicated areas shown in the drawing.

A

B

C

D

E

F

