

**Note:**  
When changing mechanism parts,  
apply the specified grease to arrow  
indicated areas shown in the drawing.

Ref No.	Part No.
A	SZZ0L18
B	SZZ0L05
C	RZZ0L02

