


7-2. FRONT PANEL SECTION

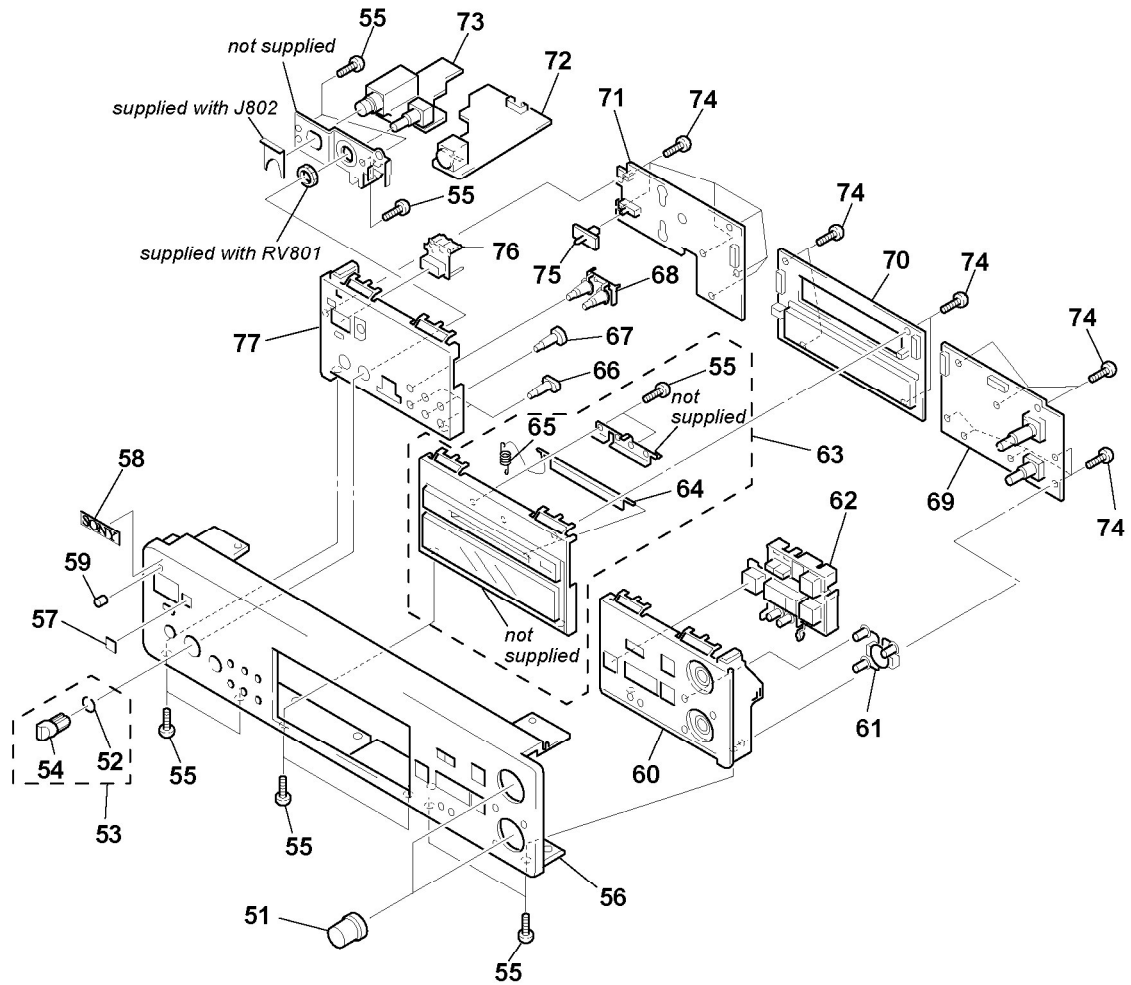

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	A-4672-978-A	KNOB(AMS)ASSY (BLACK)		63	X-4952-930-1	BASE(M) ASSY, PANEL (SILVER)	
51	A-4672-997-A	KNOB(AMS)ASSY (SILVER)		64	4-230-848-21	LID(MD)(SILVER)	
52	3-354-981-01	SPRING (SUS), RING		64	4-230-848-01	LID(MD)(BLACK)	
53	A-2003-693-A	KNOB(DIA. 10) ASSY (BLACK)		65	4-228-630-11	SPRING (LID), TENSION COIL	
53	A-4672-996-A	KNOB(DIA. 10) ASSY (SILVER)		* 66	4-615-354-01	SPACER	
54	3-354-931-01	KNOB(DIA.10) (BLACK)		67	4-228-517-01	BUTTON (EDIT) (BLACK)	
54	3-354-931-41	KNOB(DIA.10) (SILVER)		67	4-228-517-11	BUTTON (EDIT) (SILVER)	
55	4-951-620-01	SCREW (2.6X8), +BVTP		68	X-4953-057-1	BUTTON (SF) ASSY (BLACK)	
56	4-227-839-41	PANEL, FRONT (BLACK) (AEP,UK)		68	X-4953-058-1	BUTTON (SF) ASSY (SILVER)	
56	4-227-839-51	PANEL, FRONT (SILVER)(AEP)		69	A-4725-114-A	SW BOARD,COMPLETE	
56	4-227-839-71	PANEL, FRONT (BLACK) (US,CND)		70	A-4725-110-A	DISP BOARD,COMPLETE	
57	4-228-518-01	WINDOW (RM)		71	A-4725-111-A	PSW BOARD,COMPLETE	
58	4-942-568-41	EMBLEM (NO.5), SONY (BLACK)		72	1-678-501-11	KEY BOARD	
58	4-942-568-61	EMBLEM (NO.5), SONY (SILVER)		73	1-677-836-11	HP BOARD	
59	4-998-607-01	INDICATOR (POWER)		74	4-951-620-01	SCREW (+BVTP 2.6X8)	
60	4-227-183-01	BASE(R), PANEL (BLACK)		75	4-971-774-01	KNOB(TIMER) (BLACK)	
60	4-227-183-11	BASE(R), PANEL (SILVER)		75	4-971-774-31	KNOB(TIMER) (SILVER)	
61	4-228-512-01	BUTTON (SUB) (BLACK)		76	4-228-513-01	BUTTON (POWER) (BLACK)	
61	4-228-512-11	BUTTON (SUB) (SILVER)		76	4-228-513-11	BUTTON (POWER) (SILVER)	
62	4-227-833-01	BUTTON (PLAY) (BLACK)		77	4-227-832-01	BASE(L), PANEL (BLACK)	
62	4-227-833-11	BUTTON (PLAY) (SILVER)		77	4-227-832-11	BASE(L), PANEL (SILVER)	
63	X-4952-929-1	BASE(M) ASSY, PANEL (BLACK)					