

PCM-R700

SERVICE MANUAL

Ver 1.1 2002.01

US Model
Canadian Model
AEP Model
UK Model



Model Name Using Similar Mechanism	PCM-2800
Tape Transport Mechanism Type	DATM-58

SPECIFICATIONS

Recording section

Tape	Digital audio tape
Recording head	Rotary head
Recording time	Standard: 120 minutes Long-play: 240 minutes (DT-120)
Tape speed	Standard: 8.15 mm/s Long-play: 4.075 mm/s
Drum rotation	Standard: 2,000 rpm Long-play: 1,000 rpm
Error correction	Double-encoded Reed Solomon code

Tape section

Track pitch	13.6 μ m (20.4 μ m)
Sampling frequency	48 kHz, 44.1 kHz, 32kHz
Modulation system	8-10 modulation
Transfer rate	2.46 Mbit/sec
Number of channels	2 channels, stereo
D/A conversion (quantization)	Standard: 16-bit linear Long-play: 12-bit non-linear

General section

Power requirements	
Where purchased	Power requirements
U.S.A./Canada	120 V AC, 60 Hz
Europe/U.K.	230 V AC, 50/60 Hz
Power consumption	34 W
Dimensions	Approx 482 $\times$ 145 $\times$ 355 mm (w/h/d) (19 $\times$ 5 $\frac{3}{4}$ $\times$ 14 inches) (not including rack mount adaptor)
Weight	Approx 7.3 kg (16 lb 2 oz)

Remote commander RM-D757 (supplied)

Remote control system	Infrared control
Power requirements	3 V DC, with two size-AA (R6) batteries
Dimensions	Approx 45 $\times$ 210 $\times$ 26 mm (w/h/d) (1 $\frac{13}{16}$ $\times$ 8 $\frac{3}{8}$ $\times$ 1 $\frac{1}{16}$ inches)
Weight	Approx 100 g (3.5 oz) incl. batteries

Input connectors

Analog Input			
Connector	Type	Input impedance	Rated input level ^{a)}
ANALOG (UNBALANCE)	Phono-plug jack	47 kilohms	-12 dBs
ANALOG (BALANCE)	XLR-3 (FEMALE)	10 kilohms or more (balanced)	+4 dBs (factory setting)
Digital Input			
Connector	Type	Input impedance	Rated input level
AES/EBU	XLR-3 (FEMALE)	110 ohms (balanced)	-
COAXIAL	Phono-plug jack	75 ohms	0.5 Vp-p

– Continued on next page –

DIGITAL AUDIO TAPE DECK

SONY®

Output connectors

Analog Output

Connector	Type	Output impedance	Rated output level ^{a)}	Load impedance
ANALOG (UNBALANCE)	Phono-plug jack	1 kilohm	−12 dBs	47 kilohms
ANALOG (BALANCE)	XLR-3 (MALE)	100 ohms (balanced)	+4 dBs (factory setting)	10 kilohms or more
PHONES	Stereo phone-plug jack	100 ohms	0.36 mW	32 ohms

Digital Output

Connector	Type	Output impedance	Rated output level	Load impedance
AES/EBU	XLR-3 (MALE)	35 ohms (balanced)	−	110 ohms
COAXIAL	Phono-plug jack	75 ohms	0.5V p-p	75 ohms

Variable range of analog (BALANCE) input/output reference level ^{a)}
+4 dBs to −12 dBs

Maximum analog (BALANCE) output level
+24 dBs

Remote switch connectors

DIN connector (8-pin, parallel)
Monaural minijack (serial)

Audio characteristics

Frequency response ^{b)}	Standard: 20-20,000 Hz (±0.5 dB) Long-play: 20-14,500 Hz (±0.5 dB)
Signal-to-noise ratio ^{b)}	90 dB or more (20 kHz LPF, A-weight filter ON)
Total harmonic distortion ^{b)}	Standard: 0.05% or less Long-play: 0.3% or less (1 kHz, Reference level ^{a)} 20 kHz LPF ON)
Wow and flutter	Below measurable limit (± 0.001 % W. PEAK)

a) The reference level corresponds to −20 dB on the peak level meters.

b) During analog input with the SBM function off

Supplied accessories	AC power cord (1) Remote commander (remote) RM-D757 (1) Size-AA (R6) batteries (2) Screws (M5 × 12) (4) Decorative washers (4) Operating instructions (1) Warranty card (U.S.A. and Canadian models only) (1)
----------------------	---

Design and specifications are subject to change without notice.

SERVICING NOTES

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 ° C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering .

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Discard used batteries according to the manufacturer's instructions.

ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

ADVARSEL

Ekspløsjonsfare ved feilaktig skifte av batteri.
Benytt samme batteritype eller en tilsvarende type
anbefalt av apparatfabrikanten.
Brukte batterier kasseres i henhold til fabrikantens
instruksjoner.

VARNING


Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent typ som
rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens instruktion.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

MODEL IDENTIFICATION

– Model Number label (Printed in Back Panel) –

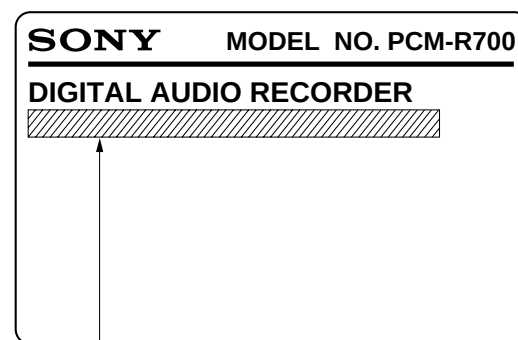

US, Canadian model : AC 120 V 60 Hz 34 W
AEP, UK Model : AC 230 V ~ 50/60Hz 34 W

SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

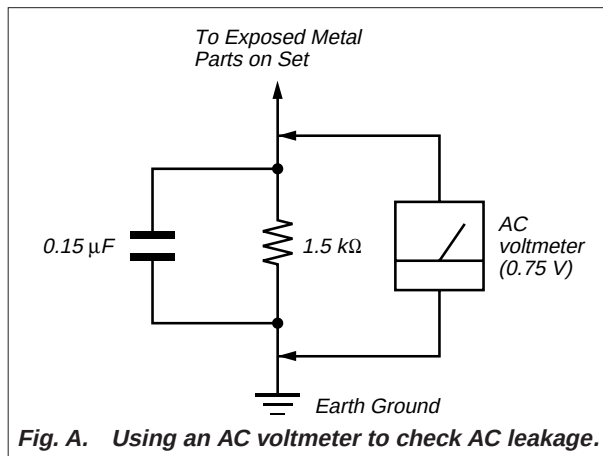

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

1. GENERAL	4
2. DISASSEMBLY	18
3. ADJUSTMENTS	22
4. DIAGRAMS	
4-1. Block Diagrams	
– Digital Audio Section –	29
– Analog Audio Section –	31
– System Control Section –	33
– Power Section –	35
4-2. Printed Wiring Board – RF Section –	40
4-3. Schematic Diagram – RF Section –	43
4-4. Printed Wiring Boards – MD Section –	46
4-5. Schematic Diagram – MD Section –	49
4-6. Printed Wiring Boards – DIGITAL Section –	53
4-7. Schematic Diagram – DIGITAL Section –	57
4-8. Schematic Diagram – AUDIO Section –	61
4-9. Printed Wiring Boards – AUDIO Section –	65
4-10. Printed Wiring Boards – DISPLAY Section –	69
4-11. Schematic Diagram – DISPLAY Section –	73
4-12. IC Pin Function Description	76
5. EXPLODED VIEWS	88
6. ELECTRICAL PARTS LIST	96

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


Unpacking

Check that you have received the following supplied items:

- AC power cord (1)
- Remote commander (remote) RM-D757 (1)
- Size-AA (R6) batteries (2)
- Screws (M5x12) (4)
- Decorative washers (4)
- Operating instructions (1)
- Warranty card (U.S.A. and Canadian models only) (1)

Inserting batteries into the remote

Insert two size-AA(R6) batteries, matching the + and - on the batteries with the markings inside the battery compartment.

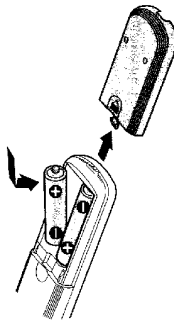

Before using the remote

Set REMOTE on the front panel to WIRELESS.



When to replace the batteries

With normal use, batteries should last for about 6 months. When the remote no longer operates the deck, replace both batteries.


Notes

- Do not leave the remote near an extremely hot or humid place.
- Do not drop any foreign matter into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct sunlight or illumination as doing so may cause malfunction.
- When not using the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.


Rack Mounting

You can install your deck in a 19-inch 3U-size rack. Be sure to disconnect the deck from the wall outlet before you install it.

- 1 Remove the four feet from the deck.

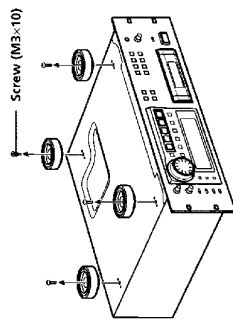

- 2 Insert the deck into the rack and secure it with the supplied decorative washers and screws (M5x12).

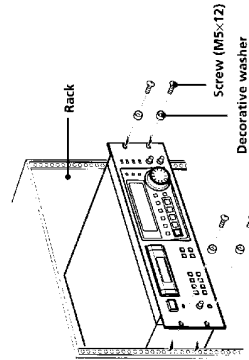


Note

Do not reattach the screws directly after removing the four feet. Put the screws and the feet in a safe place for reattachment in the future. Using longer or shorter screws may damage the internal circuit board.

Hooking Up the System

This section describes how to hook up your deck to an amplifier, stereo mixer, or other digital audio components. Be sure to turn off the power to each component before making the connections.

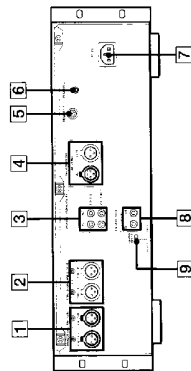

- 1 ANALOG(BALANCE) IN connectors/ANALOG(BALANCE) IN LEVEL controls

- 2 ANALOG(BALANCE) OUT connectors/ANALOG(BALANCE) OUT LEVEL controls

- 3 ANALOG(UNBALANCE) IN/OUT connectors

- 4 DIGITAL AES/EBU IN/OUT connectors

- 5 REMOTE 1 connector (For parallel remote)

- 6 REMOTE 2 connector (For serial remote)

- 7 AC IN socket

- 8 DIGITAL COAXIAL IN/OUT connectors

 
- 9 DIGITAL IN/OUT switch

Analog connections

For connections through the ANALOG(BALANCE) IN/OUT connectors

Use XLR balanced cables.

ANALOG(BALANCE) IN/OUT pin polarity



The analog input/output reference level adjustment

The analog input/output reference level during recording or playback is factory set to +4 dBs within a range of -20 dB to the full bit level for both input and output.

To lower the reference level, use a screwdriver to adjust the ANALOG(BALANCE) IN/OUT LEVEL controls on the rear panel for both CH-1 (L) and CH-2 (R). You can adjust the reference level in a range of +4 dBs to -12 dBs. Make sure to set the REC LEVEL CH-1 (L)/2(R) controls on the front panel to the center point before making this adjustment.

For connections through the ANALOG(UNBALANCE) IN/OUT connectors

Use phono-plug audio connecting cords.

 
Digital connections

Use the DIGITAL IN/OUT switch on the rear panel to select the input/output connectors for digital signals. Set the switch to AES/EBU to select the DIGITAL AES/EBU IN/OUT connectors; set it to COAXIAL to select the DIGITAL COAXIAL IN/OUT connectors.

For connections through the DIGITAL AES/EBU IN/OUT connectors

Use XLR balanced cables for digital connections.

AES/EBU IN/OUT pin polarity



For connections through the DIGITAL COAXIAL IN/OUT connectors

Use coaxial digital connecting cords.

Other connections

To connect a switch box through the REMOTE 1 connector

Refer to "Remote Control Function Using a Parallel Remote Connector" on page 26.

To connect the optional remote through the REMOTE 2 connector

Refer to "The Optional Remote RM-E750" on page 26.

Connecting AC power cord

Connect the AC power cord (supplied) to the AC IN socket on the rear panel and connect the plug on the other end to a wall outlet.

Where do I go next?

Now you're ready to use your deck.

For basic operations, go to pages 9 to 11; for advanced operations, go to pages after 12.

Digital Interface

Digital input and output connectors

- The following table shows signal formats that correspond to the input and output connectors on the deck.
- The DIGITAL COAXIAL IN connector accepts not only the consumer version of the IEC-958 international digital audio interface standard, but also the broadcasting studio version of the IEC-958 standard used by such DAT decks as the PCM-2300, PCM-2700 or PCM-2700A.

Type	Input connector	Output connector
DIGITAL AES/EBU	AES/EBU format	AES/EBU format
DIGITAL COAXIAL	IEC-958 for consumer use IEC-958 for broadcasting studio use	IEC-958 for consumer use

Copy information during recording

- Copy information that is recorded on tape during recording varies according to the input connector used and the signal format, as shown in the table below.
- In the case of AES/EBU and the IEC-958 for broadcasting studio use, the digital signal carries no copy information.
- As for the IEC-958 for consumer use, three types of copy information exists: copying possible, first-generation copy permitted, and copying prohibited (Serial Copy Management System).

Input connector	Signal format	Copy information carried by digital signal	Recording capability on this digital signal deck	Copy information recorded on tape
DIGITAL AES/EBU	AES/EBU	None	None	Possible
DIGITAL COAXIAL	IEC-958 for broadcasting studio use	None	None	Possible
	IEC-958 for consumer use only	First-generation only	Permitted	Possible
		Prohibited	Prohibited	Prohibited (ID 6+10)
				Determined by menu setting (page 24)

Writing start IDs automatically during recording

- When "AUTO" appears in the display during recording, the automatic writing of start IDs takes place according to the input connector used and the signal format, as shown in the table below.
- The condition for the automatic writing of start IDs differs according to the category code in the digital signal, such as an audio input level signal, a DAT start ID code, or a Q-code from a CD track (see pages 24 and 25).

○: automatic writing possible
×: automatic writing prohibited

Input signal	Signal format (Category code)	Automatic writing according to audio input level ^{a)}	DAT start ID ^{b)}	Q-code from a CD track
DIGITAL AES/EBU	AES/EBU	○	○ ^{c)}	×
	IEC-958 for broadcasting studio use	○	○ ^{d)}	×
DIGITAL COAXIAL	IEC-958 (DAT) for consumer use	○	○	×
	(CD)	○	×	○ ^{e)}
	(Other)	○	×	×
ANALOG	—	○	×	×


- a) If the input level remains under the level set in the "L-SY TIT" menu longer than the time set in the "L-SY BK" menu (see page 24), the deck writes a start ID when the input level rises above that level.
- b) DAT skip IDs are automatically written in the same way.
- c) Only when connected to the PCM-2600, PCM-2800, PCM-R500 or PCM-R700. When the connected decks consist of a PCM-R500 or PCM-R700, select "on" in the "AFS S-ID" menu of the playback deck.
- d) Only when connected to the PCM-2300, PCM-2700, or PCM-2700A.
- e) Some CD players do not output track information (Q-code) in the digital signal.

Digital signal lock range

- The lock range of a digital signal (signal reception range) is about $\pm 0.1\%$ for a sampling frequency of 48 kHz, 44.1 kHz, or 32 kHz. Variable pitch signals are not receivable.
- When the digital input sampling frequency information does not match the actual sampling frequency, it is possible to record that signal if you change the REC MODE switch on the front panel to the actual sampling frequency of the signal.

Setting the Clock

Your deck has a built-in clock to keep track of the current date and time. Once you set the date and time by the menu settings, this information will be recorded on the tape along with the audio signal during recording, allowing you to check the recording date time of the tape during playback at a later time.

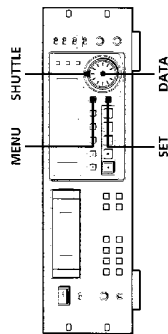

- 1 With the deck stopped, press MENU. The menu appears in the display.
- 2 Turn SHUTTLE to display the "CLK-SET" menu.
- 3 Turn DATA to display "on" and press SET. The year indication flashes.
- 4 Turn DATA to decrease or increase the displayed year, then press SET. The year indication stops flashing and the month indication begins to flash.
- 5 Repeat step 4 until all items have been set. After setting the seconds, press SET to start the clock.

'96 3:00:19 SA

The day of the week is set automatically and is displayed as follows:

Sunday: "SU", Monday: "MO", Tuesday: "TU",
Wednesday: "WE", Thursday: "TH", Friday: "FR",
Saturday: "SA".

To display the date or time

See "About the Display" on page 16.

You can specify the format (12-hour or 24-hour) for the time display, and display order for the date display. For details, see "ORDER" or "DATE/HOUR" on page 25.


For more accurate time recordings

Adjust the clock once a week.

Notes

- When you first set the clock after unpacking the deck, "----:--:--" will appear when you press the SET button in step 3. This is normal. Set the clock according to the procedures above.
- Your deck uses a back-up battery to keep the clock running when the power is turned off. The life of the battery under normal use is approximately seven years. When the battery starts to run down, the clock will stop operating normally. When this occurs, have the battery replaced (for a fee) at your dealer or nearest Sony Service Center.


Playing a Tape

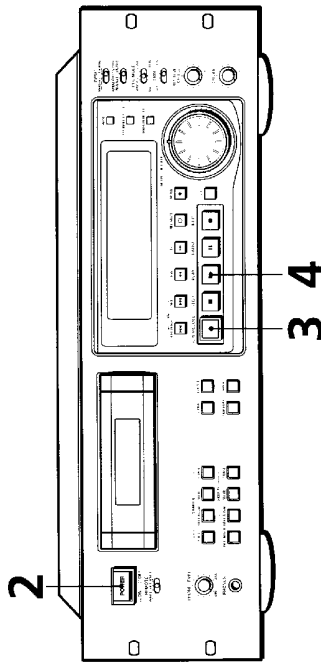

See pages 5 and 6 for hookup information.

- 1 Turn on the amplifier and set the source selector to the position for DAT.
- 2 Press POWER. Make sure that the KEY PROTECT switch is set to OFF (PCM-K700 only) (see page 28).

- 3 Press OPEN/CLOSE and insert a cassette.

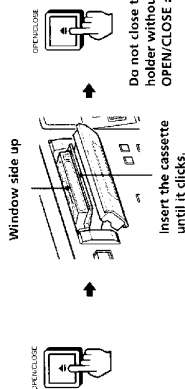

Do not close the cassette holder without pressing OPEN/CLOSE.


- 4 Press PLAY. The deck starts playing. Adjust the volume on the amplifier.

To	Press
Stop playing	STOP ■
Pause playing	PAUSE ■■ Press the button again or press PLAY ► to resume play.
Go to the next track or the preceding track	NEXT ►► or PREVIOUS ◄◄
Fast-forward or rewind	FF ►► or REW ◄◄ when the deck is stopped
Fast-forward or rewind while monitoring the sound	FF ►► or REW ◄◄ during playback. Release the button to resume normal playback.
Take out the cassette	OPEN/CLOSE ► after stopping playing

To use headphones

Connect them to the PHONES connector. Use PHONE LEVEL to adjust the volume.

Recording on a Tape

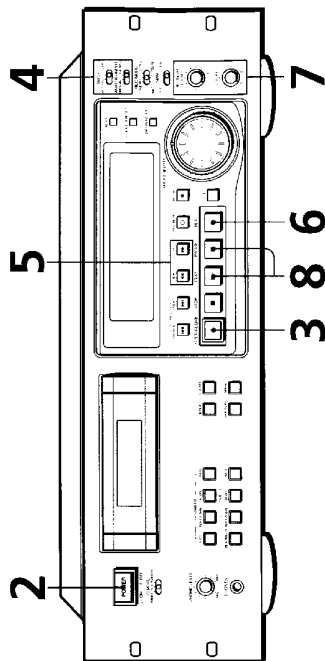


See pages 5 and 6 for hookup information.

1 Turn on the amplifier and play the program source you want to record.

2 Press POWER.
Make sure that the KEY PROTECT switch is set to OFF (PCM-R700 only) (see page 28).

3 Press OPEN/CLOSE Δ and insert a cassette.

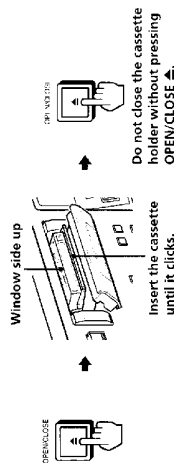

4 Use INPUT, ANALOG INPUT, and DIGITAL IN/OUT to select the corresponding input connectors.

Positions of the switches			
To record through	INPUT	ANALOG INPUT	DIGITAL IN/OUT*
ANALOG (BALANCE) IN	ANALOG	BALANCE	—
ANALOG (UNBALANCE) IN	ANALOG	UNBALANCE	—
DIGITAL AES/EBU IN	DIGITAL	—	AES/EBU
DIGITAL COAXIAL IN	DIGITAL	—	COAXIAL

* The DIGITAL IN/OUT switch is located on the rear panel (see page 5).

5 Locate the position where you want to start recording.

To record from the beginning of the tape

Press REW $\blacktriangleleft$ to rewind the tape to its beginning.

To record from the end of the recorded portion

1 Press REW $\blacktriangleleft$ to rewind the tape to its beginning.

2 Press FF $\blacktriangleright$.

The deck locates the end of the recorded portion on the tape and stops automatically.

6 Press REC $\bullet$.

The deck changes to recording pause.

Recording does not start yet.

7 When recording an analog input signal, adjust the recording level with REC LEVEL CH-1(L)/2(R).

The recommended recording level is the center point.

8 Press PAUSE $\blacksquare$ or PLAY $\blacktriangleright$.

Recording starts.


9 Start playing the program source.

When the tape reaches the end, the deck rewinds it automatically to its beginning and stops (Auto Rewind).

To	Press
Stop recording	STOP $\blacksquare$
Pause recording	PAUSE $\blacksquare$. Press the button again or press PLAY $\blacktriangleright$ to resume recording.
Take out the cassette	OPEN/CLOSE Δ after stopping recording

To prevent accidental erasure

 Slide the record-protect tab to the left as shown in the illustration below.




If "UNLOCK" appears in the display

The program source is not connected to the deck properly or is not turned on. Make sure that the program source is properly connected or turned on.

To adjust the recording level more accurately

 While monitoring the sound, turn REC LEVEL CH-1 (L)/2 (R) so that the recording level on the peak level meters is at maximum level without entering the OVER range.



The segments of the peak level meters corresponding to the maximum signal strength remain lit longer than normal. The MARGIN indication shows the margin between maximum signal strength and 0dB, changing each time a stronger signal.

If the level exceeds 0dB

The segments under "OVER" light up, and "0.0dB" flashes in the display. If these segments light steadily, sound distortion may occur. To avoid this, keep the recording level between -12dB and 0dB.

To reset the margin indication

Press MARGIN RESET. The margin indication changes to "-. dB".


Things You Should Know Before Recording

The difference between a blank section and a sound-muted section

The deck distinguishes between two kinds of silent sections, which are respectively called a "blank section" or "sound-muted section".


Blank section

This is a section on which no signal has ever been recorded.

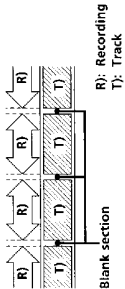

Sound-muted section

This is a section on which a signal has been recorded but at a level that is not audible.

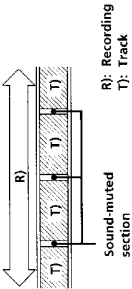

Important

Make sure no blank sections are created while you are recording. The existence of blank sections within recorded material will make search operations using the PREVIOUS/NEXT buttons impossible or destroy the continuity of the absolute time codes.

Absolute time codes

The absolute time indicates the elapsed time from the beginning of the tape. Once recorded, the absolute time codes cannot be re-written.


For accurate recording of absolute time codes

- If the tape is blank, make sure to start recording from the beginning of the tape.
- Use the Record Muting function (see page 14) to insert spaces between tracks. Do not advance the tape with the PLAY ► or FF ►► button.
- To start recording from the middle of a tape, use the End Search function (see page 14) to locate the end of the recorded portion. This will prevent the creation of blank sections.

Lead-in area

When the deck is loaded with a new cassette tape and it detects the leader tape, the deck can create a lead-in area depending on the menu setting as shown in the figure below. "BB" appears in the display for about 1 second at this time. The lead-in area can be inadvertently erased on another DAT deck if you press the REC ● button to start recording from the beginning of the tape without closing the cassette holder first. To prevent this, press the OPEN/CLOSE button to close the cassette holder before you start recording.

For details on selecting the automatic creation of the lead-in area and the frequency of the signals to be recorded, see "BB-WRT" and "BB-FS" on page 25.

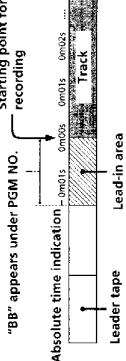

If "EMPHASIS" appears in the display

The deck is recording a digital signal with emphasis (in the higher frequencies). The recording will also contain the same emphasis.

If the deck is left in recording pause for more than 10 minutes

Recording pause will be released automatically and the deck will stop for the sake of tape protection. "SOURCE" will appear in the display of the PCM-R500. To resume recording, press the REC ● button. The deck will change to recording pause.



The counter in long-play mode

The displayed tape running time, absolute time and remaining time on the tape are for standard-play mode. Double the time to obtain the corresponding times for long-play mode.


Note

Do not change the INPUT or REC MODE setting while recording. This may cause an error in the "PCM TIME" display.

Setting the Recording Mode

You can select between two recording modes, standard or long, in the following cases:

- When recording an analog input signal with the INPUT switch set to ANALOG
- When recording a digital input signal with a sampling frequency of 32 kHz with the INPUT switch set to DIGITAL

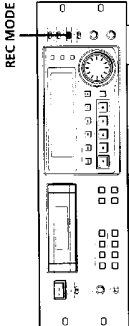

Set REC MODE to select the recording mode.


The following table shows the selectable recording modes and corresponding REC MODE position and sampling frequency for various input signals.

Input signal	REC MODE position	Recording mode
Analog	STANDARD (48k)	Standard play (48kHz)
	STANDARD (44.1k)	Standard play (44.1kHz)
	LONG	Long play (32kHz)
Digital (32kHz)	STANDARD (48k)	Standard play (32kHz)
	STANDARD (44.1k)	Standard play (32kHz)
	LONG	Long play (32kHz)
Digital (44.1kHz)	STANDARD (48k)	Standard play (44.1kHz)
	STANDARD (44.1k)	Standard play (44.1kHz)
	LONG	Standard play (44.1kHz)
Digital (48kHz)	STANDARD (48k)	Standard play (48kHz)
	STANDARD (44.1k)	Standard play (48kHz)
	LONG	Standard play (48kHz)

The recording time in long-play mode (the REC MODE switch set to LONG) is twice as long as standard-play mode.

Using the SBM (Super Bit Mapping) Function

The SBM function uses the principles of human hearing and noise-shaping technology to reduce quantizing noise within the frequency band. You can use the SBM function to record on analog input signal only when the INPUT switch is set to ANALOG and the REC MODE switch to STANDARD (either 48kHz or 44.1kHz).

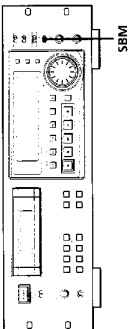


Set SBM to ON. "SBM" appears in the display during recording using the SBM function.

Note

The SBM function operates only during recording. The improved sound produced by the SBM function, however, can be enjoyed during playback, regardless of the SBM switch position or the DAT deck being used.

Locating the End of the Recorded Portion (End Search)

When recording from the middle of a tape, use End Search to locate the end of the recorded portion. This will prevent the creation of a blank section on the tape.

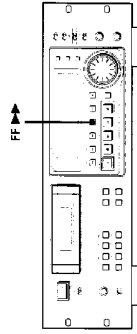

Press **FF** with the deck stopped.

The deck locates the end of the recorded portion (the beginning of the blank portion or the position of the end ID), then stops.

The deck stops at the beginning of any blank section that is 9 seconds or longer, or fast-forwards to the end of the tape if the tape is blank.

When you press the REC button while in a blank section


The deck rewinds the tape to the beginning of the blank section and changes to recording pause. "BLANK" and "WAIT" appear in the display while the deck is searching for the beginning of the blank section.

Note

End Search does not operate if you press the **FF** button while in a blank section.

Inserting a Sound-Muted Section While Recording (Record Muting)

Use Record Muting to insert a space of about 0.5 to 9.5 seconds between tracks. For details on setting the duration of the blank space, see "REC MUTE" on page 24.

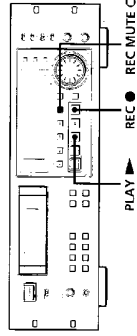

Press **REC MUTE** where you want to insert a space while the deck is recording or in recording pause. "REC" in the display starts flashing and tape transport continues, but no signal is recorded. After inserting a space, **II** in the display stays on and the deck changes to recording pause.

To insert a blank space (of a duration different from that preset by menu setting)

Hold down the **REC MUTE** button as long as you want. When you release the **REC MUTE** button, **II** stays on and the deck changes to recording pause.

When the preset duration has passed, "REC" begins to flash faster and the MARGIN indication shows how long the **REC MUTE** button has been pressed.

To insert a blank space of a duration shorter than the preset value


Press **REC** while "REC" is flashing. The deck starts recording again.

Note

If you do not create a sound-muted section at the beginning of a tape, you may not be able to move or erase a start ID (see page 19) that is recorded within 2 seconds from the beginning of the tape.

Monitoring the Recorded Sound (Record Monitoring)

You can compare the recorded sound with the sound of the program source while recording.

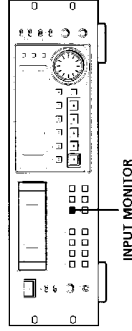

While recording, press **INPUT MONITOR** to turn off "INPUT" in the display.

The recorded sound is output.



Turns off.

To listen to the program source

Press **INPUT MONITOR** to turn on "INPUT" in the display.

You can listen to the program source even when not recording

Press **INPUT MONITOR** to turn on "INPUT" in the display.

The program source is output when:

- the deck is stopped.
 - the cassette is ejected.
- The program source is not output when "INPUT" is turned off.

Note

If you do any of the following operations while listening to the program source, "INPUT" turns off and output of the program source stops, and "INPUT" will not go on even you press the **INPUT MONITOR** button:


- Start playback by pressing the **PLAY** button.
- Pause playback by pressing the **PAUSE** button.
- Press the **REW** button.
- Press the **FF** button.

Fade-in/Fade-out Recording (Fader)

You can use the fader to fade-in the beginning of a recording or fade-out the end of a recording. It's useful when you want to start or end a recording in the middle of a song.

You can specify the fade-in and fade-out durations of 0.5 to 9.5 seconds through the menu settings.

For details, see "FADE IN" and "FADE OUT" on page 25.

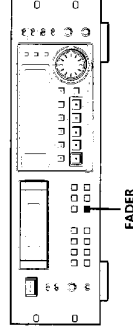

Fading in


Press **FADER** while the deck is in record pause mode. "FADE IN" appears in the display and the time display counts backward to "0.0s" as the fade-in takes place.

Fading out


Press **FADER** while the deck is recording. "FADE OUT" appears in the display and the time display counts backward to "0.0s" as the fade-out takes place. After fading out, the deck automatically enters record pause mode.

About the Display

You can use the display to show the tape running time, absolute time, playing time of the track, remaining time on the tape, date and time of recording, and current date and time.

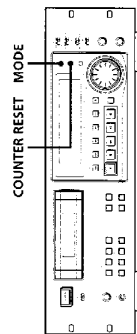


Press MODE repeatedly. Each time you press the MODE button, the displayed information changes as follows.

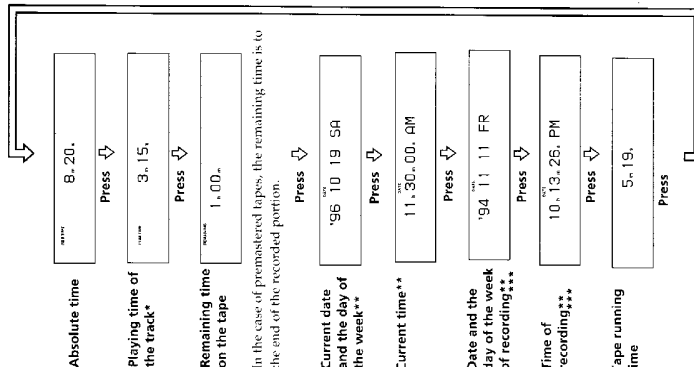

Locating a Point (Shuttle Play/Mark & Locate)

You can locate a specific point by playing back at a different speed or recording the absolute time code at the point to be located later.

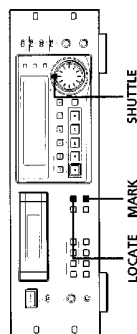

To locate	Do the following:
A track using variable speed play (Shuttle Play)	While the deck is playing, stopped, or paused, turn SHUTTLE.
If the deck was playing or stopped, the deck starts play again when you release the SHUTTLE button.	
If the deck was paused, the deck resumes when you release the SHUTTLE dial.	
A particular point on a tape (Mark & Locate)	1 While the deck is playing or stopped, press MARK. The absolute time of the point where you pressed the button appears and flashes three times. 2 Press LOCATE. The deck locates the point and stops.

Playback speed during Shuttle Play

During Shuttle Play, you can vary the playback speed from $\times 0.5$ to $\times 8$ times the normal playback speed, depending on the angle and direction of the SHUTTLE dial. Turn the dial clockwise for forward playback or counterclockwise for reverse playback. The playback speed will be $\times 8$ times normal speed playback when you turn the dial to the left or right fully.

Note


Shuttle Play should be used only when necessary since prolonged use may damage the tape and drum.

The point memorized using the Mark & Locate function will be erased when:

- you take out the cassette.
- you turn off the deck.

Locating a Track (AMS*/Direct Access)

You can locate the tracks in a number of ways, but only after you have recorded start IDs on the tape (see pages 19 to 23). To use Direct Access, program numbers must be recorded on the tape (see pages 19 and 23).

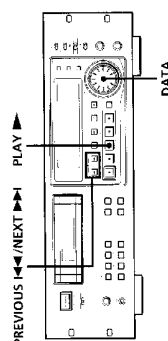

To locate	Do the following:
The beginning of the next or succeeding tracks (AMS)	Press NEXT $\blacktriangleright$ as many times as you want while playing. For example, to locate the second track ahead, press twice.
The beginning of the current track (AMS)	Press PREVIOUS $\blacktriangleleft$ once while playing.
The beginning of preceding tracks (AMS)	Press PREVIOUS $\blacktriangleleft$ as many times as you want while playing. For example, to locate the second track behind, press three times.
By specifying the program number of a track (Direct Access)	1 While the deck is playing or stopped, turn DATA on the front panel until the program number you want appears in the display (or enter the program number with the number buttons on the remote). 2 Press PLAY $\blacktriangleright$.

* AMS = Automatic Music Sensor

If you enter the wrong program number during Direct Access

If you haven't pressed the PLAY $\blacktriangleright$ button, turn the DATA dial on the deck (or press the CLEAR button, then enter the correct number on the remote).

If the deck detects a blank section of 9 seconds or more, end ID, or the end of the tape

The deck rewinds the tape automatically to its beginning and stops (Auto Rewind).

You can make the deck start playing automatically from the beginning of the tape after rewinding (Auto Play)

Press the PLAY $\blacktriangleright$ button while holding down the REW $\blacktriangleleft$ button.

- The playing time of the track will not be displayed when the "P-TMDS" menu is set to "off" (see page 25).
- The date and time of recording and the current date and time will not be displayed when the "DATEDISP" menu is set to "off" (see page 23).
- If this information is not recorded on the tape, nothing will appear.

To reset the tape running time
Press COUNTER RESET.

When "DATE" appears in the display

"DATE" remains lit when the date and day of the week or time of recording appears, and flashes when the current date and time appears.

Notes

- When playing certain types of premastered tapes, "BB" may appear momentarily in the display at the beginning of the tape.
- The playing time of the track does not appear in the following cases:
 - When you start playing from the middle of the track
 - During rewinding
 - In standard-play mode, the remaining time on the tape appears about 16 seconds after you start playing.
 - The displayed remaining time may vary somewhat from the actual remaining time, depending on the tape.

If "EMPHASIS" appears in the display

The deck is playing an audio signal recorded with emphasis (in the higher frequencies). The deck, however, plays the signal while automatically deemphasizing it (with attenuation proportional to the degree of emphasis).

"ERR" appears in the display for 5 seconds or more


- The head is dirty. Clean the head with the DAT cleaning cassette (see page 29).
- The cassette is defective or damaged.



Advanced Playback Operations

Playing Tracks Repeatedly (Repeat Play)

You can play a specific track or all the tracks on the tape repeatedly.

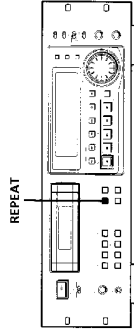

Playing all tracks repeatedly

Press REPEAT repeatedly while playing a track until "REPEAT" appears in the display.

The deck will play all tracks 5 times, then stops.

If the deck detects either of the following during Repeat Play, it will rewind the tape to its beginning and start playing again.

- A blank section of 9 seconds or more
- The end of the tape or the end ID

To stop playing all tracks repeatedly

Press REPEAT repeatedly until "REPEAT" disappears.

Note

Repeat Play of all tracks is canceled when you take out the cassette.

Playing a track repeatedly

Press REPEAT repeatedly while playing the track you want to repeat until "REPEAT 1" appears in the display.

The deck plays the current track 5 times and then stops.

If the deck detects any of the following during Repeat Play, it will rewind the tape to the start ID of the current track and starts playing again from that position.

- The next start ID
- A blank section of 9 seconds or more
- The end of the tape or end ID
- A skip ID with Skip Play activated

To stop playing a track repeatedly

Press REPEAT repeatedly until "REPEAT 1" disappears.

Note

Repeat Play of a single track is canceled when you take out the cassette.


Advanced Playback Operations

Fade-in/Fade-out Playback (Fader)

You can use the fader to fade-in the beginning of playback or fade-out the end of playback. It's useful when you want to record from DAT.

You can specify the fade-in and fade-out durations of 0.5 to 9.5 seconds through the menu settings.

For details, see "FADE IN" and "FADE OUT" on page 25.

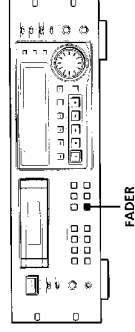

Fading in

Press FADER while the deck is in play pause mode.

"FADE IN" appears in the display and the time display counts backward to "0.0s" as the fade-in takes place.

Fading out

 
Press FADER during playback.

"FADE OUT" appears in the display and the time display counts backward to "0.0s" as the fade-out takes place. After fading out, the deck automatically enters play pause mode.

Writing Sub Codes

About Sub Codes

In the DAT format, control codes, or sub codes, such as start IDs, skip IDs, and end ID can be recorded on the tape with the audio signal. Since sub codes are written on the tape separately from the audio signal, they have no effect on the audio signal.



Start IDs

Start IDs indicate the start of a track, and therefore allow you to locate the position of a track precisely. The start IDs are 9 seconds in length (18 seconds in long-play mode) to enable easy detection during fast-forwarding or rewinding.

Program numbers

Program numbers serve as track numbers. Occupying the same position as start IDs, a program numbers allow you to locate specific tracks or play tracks in a specific order.

Skip IDs

Skip IDs indicate tracks or recorded portions that are to be skipped while playing. Skip IDs are 1 second in length (2 seconds in long-play mode).

End ID (when the optional remote is used)



An end ID indicates the end of a recording. An end ID is 9 seconds in length (18 seconds in long-play mode). When an end ID is detected during playback, playback stops and the deck rewinds the tape to its beginning. If an end ID is detected during fast-forwarding, the tape stops at that point and deck becomes ready for recording from that point.

You can write and erase an end ID only with the optional remote RM-DZ50. For details, see "Writing and Erasing an End ID" on page 27.

Notes

- The OPEN/CLOSE Δ STOP $\blacksquare$ and PAUSE II buttons do not work during the writing or erasing of sub codes.
- Writing and erasing of sub codes and renumbering of program numbers are impossible if the record-protect hole on the DAT cassette is open (see page 11).


Writing Start IDs During Recording

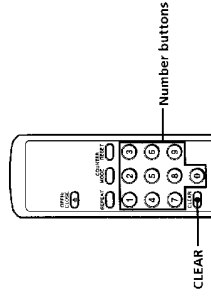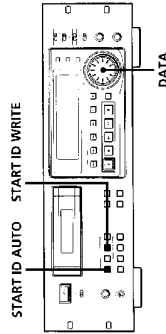

Writing start IDs manually during recording

Press START ID WRITE.

 "ID WRITE" appears in the display for a few seconds and the start ID is written on the tape. "START ID" flashes in the display during this time.



Note

The interval between start IDs must be more than 18 seconds (36 seconds in long-play mode). If the interval is less than 18 seconds (or 36 seconds), the deck may fail to detect the second start ID while playing a tape.

Writing start IDs automatically during recording

Press START ID AUTO repeatedly until "AUTO" appears in the display.

For details on the condition for the automatic writing of start IDs, see "Writing start IDs automatically during recording" on page 7, and "Menu Operations" on pages 24 and 25.

Writing program numbers during recording

Program numbers occupy the same positions as the start IDs and are determined by depending on the following conditions:

When a program number is displayed

The next program number rises by one above when the next start ID is written.

When no program number is displayed ("..." appears instead)

Program numbers are not written even when start IDs are written. To write program numbers, rewind the tape to the nearest start ID to display the program number, and then locate the position where you want to start recording.

Specifying the first program number to be assigned

- 1 Pause recording.
- 2 Press the number button(s) on the supplied remote, or turn DATA to input the first program number.
The number appears in the display.
To cancel the number, press the CLEAR button on the supplied remote.
- 3 Start recording.


A start ID and the assigned program number are written simultaneously.

Note

During automatic start ID writing the positioning of some start IDs may be inaccurately or inappropriately positioned away from the beginning of the track. If this happens, you can reposition or erase the start IDs later (see "Accurate positioning of sub codes" on pages 21 and 22, and "Erasing Sub Codes" on page 23).

Writing Sub Codes During Playback

You can write start IDs or skip IDs during playback.

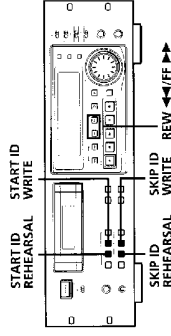

Press START ID WRITE or SKIP ID WRITE.
"ID WRITE" appears in the display for a few seconds and the specified ID is written on the tape at the point you pressed the button.


Accurate positioning of sub codes (Rehearsal function)

- 1 During playback, press REHEARSAL corresponding to the ID you want when you arrive at the proper position.
"REHRS" appears; the corresponding ID indication flashes in the display and the Rehearsal function repeats a 3-second portion containing the selected position. The repeated portion plays back 8 times, with the remaining number of times appearing to the right of the "REHRS". After 8 times, the deck stops.
In the case of a start ID, the 3-second repeated portion starts from the point where you pressed the REHEARSAL button.
In the case of a skip ID, the 3-second repeated portion ends at the point where you pressed the REHEARSAL button.


- 2 Press REW ◀◀ or FF ▶▶ to move the beginning of the repeated portion.
Each time you press the REW ◀◀ or FF ▶▶ button, the beginning of the repeated portion shifts backwards or forwards in 0.3-second increments, up to a maximum extent of about 2 seconds (4 seconds in long-play mode) in either direction.

(Continued)

When writing a start ID

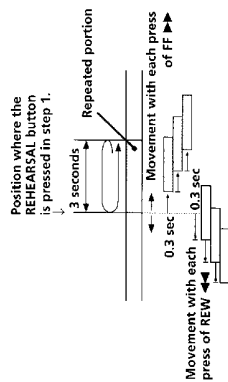


When writing a skip ID

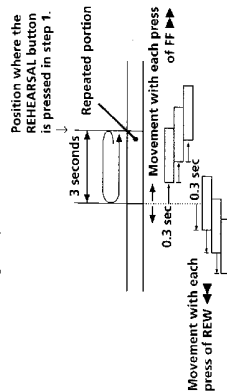

The time in the display shows the shift in position from the time the REHEARSAL button was pressed.

Positioning Start ID

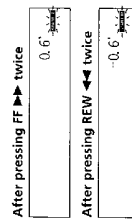


3 Press WRITE of the corresponding ID to write the ID.

"ID WRITE" appears for a few seconds and the ID is written on the tape at the selected position.


- Start IDs are 9 seconds long starting from the beginning of the repeated portion.
- Skip IDs are 1 second long starting from the end of the repeated portion.

 Newly written IDs positioned by the Rehearsal function



Adjusting the Position of an Existing Start ID

You can adjust the position of previously recorded start IDs.

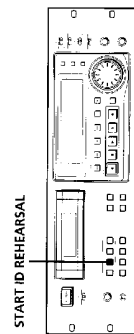

1 During playback, press START ID REHEARSAL when you arrive at the existing start ID you want to reposition.

The deck rewinds to the beginning of start ID and the Rehearsal function repeats a 3-second portion.

2 Do the steps 2 and 3 of "Accurate Positioning of sub codes" on pages 21 and 22.


You can move the start ID to a maximum extent of about 2 seconds (4 seconds in long-play mode) in either direction from its original position.

Notes

- Start IDs written within 10 seconds from the end of the tape may be difficult or impossible to move.
- Existing skip IDs cannot be moved.

Erasing Sub Codes

You can erase any start ID or skip ID.

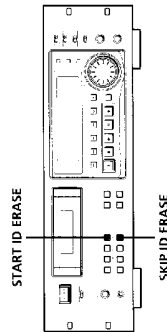

Press either START ID ERASE or SKIP ID ERASE when the ID you want to erase appears in the display.

"ERASE" appears in the display as the deck rewinds to the beginning of the ID, then "ID ERASE" appears as the deck erases the ID.

In the case of a skip ID if "SKIP ID" has disappeared by the time you press SKIP ID ERASE, the deck will still erase the skip ID.

- It takes 9 seconds to erase a start ID.
- It takes 1 second to erase a skip ID.
- Program numbers are erased together with start IDs.

Note

You can erase an ID even when it is not displayed. Just press the respective ERASE button. The tape is rewound, and the first ID detected is erased.


Note

A skip ID written at the same position of a start ID is erased when the start ID is erased.

Renumbering the Program Numbers Automatically (Renumbering Function)

The Renumbering function searches for each start ID from the beginning of the tape and assigns a new program number to each one starting with 1. Use the Renumbering function in the following cases:

- When you've added a start ID while playing the tape.
- When a program number is missing due to an erased start ID.
- When you began recording from the middle of the tape and wrote a program number that already exists, or when one of the start IDs has no program number.

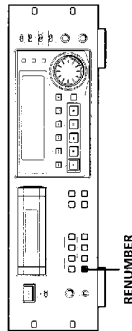

Press RENUMBER while the deck is stopped or playing.

"RENUMBER" flashes in the display and the tape is automatically rewound to its beginning. The deck then starts searching for each successive start ID writing a new program number for each one starting with 1.

"RENUMBER" stops flashing and "ID WRITE" appears in the display for a few seconds as the deck begins rewriting the program numbers.

After renumbering is finished, the deck rewinds the tape automatically to its beginning, then stops.

You can specify any number as the starting number for the renumbering of programs.

For details, see "FIRST (FCM No.)" on page 25.

Note

The Renumbering function may not function correctly when:


- A blank section exists on the tape.
- The interval between two start IDs is less than 18 seconds (36 seconds in long-play mode).
- A start ID exists within 10 seconds from the end of the tape.

Menu Operations

You can make various settings through menu operations. Settings made through menu are memorized even when the deck is turned off.

Note

You can do menu operations only when the deck is empty, stopped or paused.

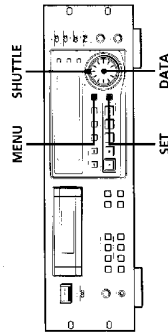

Making menu settings

- 1 Press MENU.
The MENU button lights up.
 - 2 Turn SHUTTLE to select the menu.
 - 3 Turn DATA to select the parameter.
The selected parameter flashes.
- When the parameter settings are "on" and "..." (off)**
Turn the DATA dial clockwise to select "on" or counter-clockwise to select "..." (off).
- 4 Press SET.
The selected setting lights up.
 - 5 Press MENU again.
The lit button goes off and the deck becomes ready for operation.

Menu descriptions

A brief explanation is given below for each menu, including their settings or setting range, factory setting, and reference pages.

SET ID6

Selects the copy information to be written on the tape when recording from the ANALOG/BALANCE/UNBALANCE) IN connectors or the DIGITAL AES/EBU IN connector.

Settings: 00 (copying permitted), 10 (copying prohibited), 11 (one generation copy only)
Factory setting: 00
Reference page: 6

REC MUTE (RECORD MUTE duration)

Sets the duration of the blank space created between tracks by the Record Muting function.

Setting range: 0.5 to 9.5 seconds (in units of 0.5 second)
Factory setting: 4 seconds
Reference page: 14

L-SY TH (Level-Sync Threshold)

Sets the reference input level for automatic writing of start IDs.

Setting range: -12 to -60 dB (in units of 1 dB)
Factory setting: -45 dB
Reference page: 20

L-SY BK (Level-Sync Blank time)

Sets the length of time that the input signal must remain below the reference level before automatic writing of start IDs begins.

Setting range: 1 to 10 seconds (in units of 1 second)
Factory setting: 3 seconds
Reference page: 20

IEC S-ID (IEC Start-ID)

Specifies if start IDs (or skip IDs) are automatically detected and written on the tape when recording from a DAT deck connected to the DIGITAL COAXIAL IN connector.

Settings: on (start IDs (or skip IDs) are automatically detected and written).

-- (writing of the start IDs (or skip IDs) is determined by the settings of the L-SY TH and L-SY BK menus)

Factory setting: on
Reference page: 7

IEC CD-Q (IEC CD-Q code)

Specifies if start IDs are written automatically whenever a Q code defined by the user's bits on the CD is detected while recording from a CD player connected to the DIGITAL COAXIAL IN connector.

Settings: on (a Q code is detected and written as a start ID automatically).

-- (writing of the start IDs is determined by the settings of the L-SY TH and L-SY BK menus)

Factory setting: on
Reference page: 7

AES S-ID (AES Start-ID)

Specifies if start IDs (or skip IDs) are automatically detected and written on the tape when recording from a DAT deck (for broadcast use) connected to the DIGITAL AES/EBU IN connector, and if start IDs (or skip IDs) are output through the DIGITAL AES/EBU OUT connector.

Settings: on (start IDs (or skip IDs) are detected and written automatically/start IDs (or skip IDs) are output).

-- (writing of start IDs (or skip IDs) is determined by the settings of the L-SY TH and L-SY BK menus/start IDs (or skip IDs) are not output)

Factory setting: --
Reference page: 7

Automatic writing of start IDs and menu settings during digital recording

The automatic detection and writing of start IDs are carried out according to the connector to which the program source is connected, the signal format, and the category code of the signal, as shown in the table below.

- A: Start IDs are detected and written automatically.
- B: Q codes are detected and written as start IDs automatically.
- C: The writing of start IDs is determined by the settings of the L-SY TH and L-SY BK menus.

Menu settings

Connector	AES/EBU	COAXIAL
Signal format	Broadcast studio use	Consumer use
Category	—	DAT CD Others
IEC S-ID on	—	A* A — C
IEC S-ID --	—	C C — C
IEC CD-Q on	—	— B C
IEC CD-Q --	—	— C C
AES S-ID on	A**	— — C
AES S-ID --	C	— — C

* Only when connected to the PCM-2000, PCM-2700, or PCM-2700A

** Only when connected to the PCM-2600, PCM-2800, PCM-R500 or PCM-R700.

When the connected decks consist of a PCM-R500 or PCM-R700, select "on" in the "AES S-ID" menu of the playback deck.

DATEDISP (DATE Display)

Specifies if the recording date and time and current date and time are displayed when the MODE button is pressed.

Settings: on (the recording date and time and current date and time are displayed), -- (the recording date and time and current date and time are not displayed)

Factory setting: --
Reference page: 16

ORDER (Date Order)

Specifies the display order of the year, month, and day indications.

Settings: YMD (year/month/day), DMY (day/month/year), MDY (month/day/year)

Factory setting: YMD
Reference page: 8

DATEHOUR (DATE HOUR)

Specifies either a 12-hour or 24-hour format for the time display.

Settings: 12 (12-hour format), 24 (24-hour format)
Factory setting: 12
Reference page: 8

P-TMDISP (Program Time Display)

Specifies if the track playing time is displayed when the MODE button is pressed.

Settings: on (the track playing time is displayed), -- (the track playing time is not displayed)

Factory setting: on
Reference page: 16

FIRST(PGM No.) (FIRST ProGram No.)

Specifies the first program number to be assigned to the first track when recording from the beginning of the tape or using the Renumbering function.

Setting range: 1 to 99
Factory setting: 1
Reference page: 23

TAPEID6 (ID6 on TAPE)

Displays the copy information of the tape currently inserted.

Indications: 00 (copying permitted), 10 (copying prohibited), 11 (one generation copy only)

Reference page: 6

CLK-SET (Clock SET)

Set to "on" to set the clock.

Reference page: 8

BB-WRT (WRITE "BB")

Specifies if a lead-in area is created automatically.

Settings: on (a lead-in area is automatically created), -- (a lead-in area is not automatically created)

Factory setting: --

Reference page: 12

BB-F5 (F5 in lead-in area)

Sets the lead-in area with the frequency of the signals to be recorded.

Settings: 48kHz, 44kHz, 32kHz
Factory setting: 48kHz
Reference page: 12

HOUR (HOURS meter)

Displays the total drum operating time.

Display range: 0 to 9999 hours (in units of 1 hour)

FADE IN (FADE IN time) (PCM-R700 only)

Specifies the fade-in time for fade-in recording and playback.

Setting range: 0.5 to 9.5 seconds (in units of 0.5 second)
Factory setting: 5.0 seconds
Reference pages: 15 and 19

FADE OUT (FADE OUT time) (PCM-R700 only)

Specifies the fade-out time for fade-out recording and playback.

Setting range: 0.5 to 9.5 seconds (in units of 0.5 second)
Factory setting: 5.0 seconds
Reference pages: 15 and 19

The Optional Remote RM-D750


You can do the following operations using serial remote control with an optional remote RM-D750 which may be either connected to the REMOTE 2 connector on the rear panel or not. For more information on other remote operations that are possible, refer to the Operating Instructions of the remote.

Note

Set REMOTE on the front panel to WIREID when the remote is connected to the deck. When using it remotely, set REMOTE to WIRELESS.

Playing tracks in the order you want (RMS* Play)

RMS Play allows you to specify the playback order of the tracks on the tape to create your own programs containing up to 60 tracks (using program numbers 1 to 99). To use RMS Play, however, you must first record start IDs and program numbers on the tape.

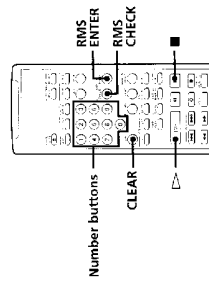

- 1 Enter the program number (1 to 99) of the track you want to play.
If you've entered the wrong number
Press CLEAR, then enter the correct number.
- 2 Press RMS ENTER.



- 3 Repeat steps 1 and 2.
- 4 Press ▷.
The deck starts playing the programmed tracks in sequence.

* RMS – Random Music Sensor


Writing and Erasing an End ID

- 3 After repositioning the beginning of the end ID, press END ID WRITE.
“ID WRITE” appears for a few seconds and the end ID is written on the tape after a duration of about 9 seconds after the end of the repeated portion.

Erasing the end ID

Press END ID ERASE.

“ERASE” appears in the display while the deck fast-forwards to the beginning of the end ID, then “ID ERASE” appears while the deck erases the end ID. It takes about 9 seconds (18 seconds in long-play mode) to erase an end ID.

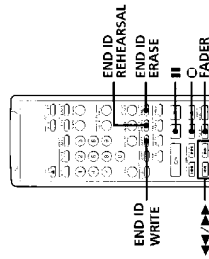

Writing an end ID during recording

- 1 When the recording of the program source comes to an end, press II, O, or FADER.
Recording is paused.
- 2 Press END ID WRITE.
“ID WRITE” or “EE” appears in the display while the end ID is being written.
When writing has finished, the record pause mode is canceled and the deck rewinds the tape to the beginning of the end ID.

To write an end ID during playback
Press END ID WRITE.

More accurate positioning of the end ID

- 1 During playback, press END ID REHEARSAL.
“REHSL” appears in the display, and the Rehearsal function repeatedly plays back a 3-second portion that ends at the point where you pressed the button. The repeated portion plays back 8 times, and the deck stops.
- 2 Press ◀◀ or ▶▶ to shift the position of the beginning of the repeated portion.
Each time you press ◀◀ or ▶▶, the beginning of the repeated portion shifts backwards or forwards by 0.3-second, up to a maximum extent of about 2 seconds (4 seconds in long-play mode) in either direction.
The display shows the amount the starting position has shifted from the time the END ID REHEARSAL button was pressed.

Checking the track order

You can check the order of tracks in your program by pressing the RMS CHECK button. Each time you press the RMS CHECK button, the track numbers appear in the order they were programmed.

Note

You cannot use the CLEAR button to cancel a programmed track while checking the track order.

To add a track to a program

Repeat steps 1 and 2 while the deck is stopped.

Note


You cannot add a track to a program after RMS Play has started.

To cancel an entire program

Press ■ repeatedly until “RMS” disappears.

Locating a track by scanning each track (Music Scan)

You can locate a track by scanning the first 8 seconds of each track.

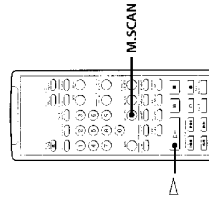

- 1 Press M.SCAN while the deck is stopped.
- 2 Press ▷.
The deck plays the first 8 seconds of each track in succession.
- 3 When you find the track you want, press M.SCAN.
The track continues playing.

You can use Music Scan while playing a track

If you press the M.SCAN button while playing a track, the deck will rewind the tape to its beginning, then play the first 8 seconds of each track on the tape in succession.

Remote Control Function Using a Parallel Remote Connector

 
You can operate the deck with a parallel remote control that uses a switch box connected to the REMOTE 1 connector on the rear panel.

Using the REMOTE 1 connector

When operating the deck with a parallel remote control, set the REMOTE switch on the front panel to WIRE.

The pin numbers and pin assignments for the REMOTE 1 connector on the rear panel are as follows:

DIN connector (8 pin)



Pin No	MODE1 (playback)	MODE2 (recording)
Inputs		
1	H-level constant	L-level constant
2	H-STOP/L-PLAY	L-STOP
3	L-STOP	L-START ID
		WRITE
4	L-PLAY	L-PLAY
5	L-REW	L-PAUSE
6	L-FF	L-REC
Status output		
7	H-STOP	H-REC-PAUSE
8	H-PLAY	H-REC
Case	GND	GND

Command inputs 1: OPEN (off impedance: 30 kilohms or more)


L: GND short (on impedance: 100 ohms

or less)

H: approx. 2V (I=15mA)

L: OPEN (high impedance)

Connection diagram (MODE 1)

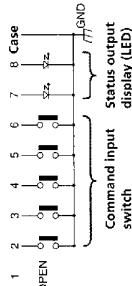


Notes

- When using MODE 2, use pin number 1 for GND.
- By keeping the input to pin number 1 constant at either H-level or L-level determines whether pin numbers 2 to 8 are in MODE 1 (playback) or MODE 2 (recording).
- In MODE 1, pin number 2 may be used for fader-start function.
- For pin numbers 2 to 6 pin, input to smaller numbers take priority.
- Anti-chattering measures should be taken for the command input switches.
- Status output (pin numbers 7 and 8) is specially provided for driving a single LED. If more current is needed, use an additional drive circuit or electric power supply.
- Do not switch input to pin number 1 (MODE 1 and MODE 2) while the deck is playing or recording. This may result in mis-operation of the deck.

Disabling Button Operations (Key Protect Function)

You can disable certain button operations so that the buttons do not work during, for instance, recording.

 KEY PROTECT



All of these buttons and dials are disabled.

Set KEY PROTECT to ON.

Cleaning

Cleaning the cabinet, panel and controls

Use a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

Cleaning the head and tape path

- Prolonged operation will cause contamination of the head. To obtain the best possible recording and playback sound, we recommend that you use the Sony DT-10CL cleaning cassette (not supplied) to clean the head after every ten hours or so of operation.
- Clean the head with the cleaning cassette when the deck has not been used for a long period of time. Contamination of the head may cause sound drop-out during playback.

Using the cleaning cassette

- Insert the cleaning cassette as you would a normal DAT cassette.
- Press PLAY $\blacktriangleright$. After 10 seconds, press STOP $\blacksquare$.
- Do not press the REC $\bullet$ or FF $\blacktriangleright$ button for cleaning. Remove the cleaning cassette without rewinding it. You should rewind the cleaning cassette only when it has reached the end.

Notes on cleaning

- After 10 hours of operation, "CLEANING" appears in the display for about ten seconds when you turn on the deck. It is recommended that you clean the head and tape path periodically, using this message as a guide.
- Due to the shortness of the cleaning cassette, the counter will not show the actual running time and remaining time of the cassette.

Precautions

On safety

- Do not disassemble the cabinet as this may result in an electric shock. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the cabinet, unplug the AC power cord before operating the unit any further.

On power sources

- Before operating the unit, check that its operating voltage is identical with your local power supply. The operating voltage is indicated on the nameplate at the rear of the unit.
- If you are not going to use the unit for a long time, be sure to disconnect the AC power cord (mains lead) from the wall outlet. To disconnect the cord, grasp the plug itself; never pull the cord.

On operation

If the unit is brought directly from a cold place to a warm place, or is placed in a very damp room, moisture may condense on the lenses inside the unit. "CAUTION" may appear in the display, and the unit may not operate. If this happens, remove the cassette and leave the unit turned on for about an hour until the moisture evaporates.

On placement

- Place the unit in a location with adequate ventilation to prevent heat build-up.
 - Do not place the unit:
 - on a soft surface such as a rug that might block the ventilation holes on the bottom.
 - near heat sources.
 - in direct sunlight.
 - in an inclined position.
 - in a place subject to excessive dust or mechanical shock.

On the DAT tapes

- After using a DAT tape, put it into its case and keep it where it will not be subject to sunlight, high temperature, moisture or dust.
- The DAT cassette shell is designed to keep out dust. Do not open the case to expose the tape.
- The hole at the back of the cassette is the detector slot. Do not cover this slot.

Regarding tapes of over 120 minutes

Do not use thin-tape cassettes (with a playing time of over 120 minutes) to record important materials since such cassettes are subject to the following problems:

- Improper threading of the tape after repeated AM/S, rewinding, fast-forwarding, or cueing operations.
- Incorrect writing and erasing of start IDs.
- Sound distortion.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Additional Information

Display Messages

The following table explains the various messages that appear in the display.

Message	Meaning
BLANK	The deck is searching for the beginning of the blank section on the tape.
CAUTION	A safety mechanism is operating because of condensation or other reasons.
CLEANING	Cleaning the head and tape path is recommended. After about 10 hours of deck use, this message appears for about 10 seconds whenever you turn on the deck.
(ERASE)	The ID ERASE function is on.
ID ERASE	A start ID or skip ID is being erased.
ID WRITE	A start ID, skip ID, or program number is being written.
MSCAN	The MSCAN button on the remote has just been pressed or Music Scan playback of the beginning of a track is about to start.
NO TAPE	A cassette is not inserted into the deck.
PROHIBIT	The program source you are about to record cannot be recorded through the digital input jacks or connectors.
PROTECT	The record-protect hole on the cassette is open and recording on the tape cannot be done.
REHEARS	Rehearsal function is on.
SOURCE	The deck has been in recording pauses for about 10 minutes, or you've pressed the REC ● button while the cassette is in the deck or the cassette is record-protected.
TAPE END	The tape has come to the end of the recorded portion.
TAPE TOP	The tape has reached its beginning.
UNLOCK	The digital signal being input to the deck or condensation is different from the one selected with the INPUT switch.
WAIT	The deck is searching for the beginning of the blank section on the tape.
(WRITE)	The ID WRITE function is on.

Troubleshooting

If you've experienced any of the following difficulties while using the deck, use this section as a guide to remedy the problem. Should any problem persist, consult your nearest Sony dealer.

- The cassette holder does not close.**
- Check that the cassette is inserted correctly (see pages 9 and 10).
- The function buttons do not work.**
- The deck has just been turned on and will not operate for about 4 seconds. Wait 4 seconds (10 seconds when "CLEANING" appears) before attempting any operation.
 - The PAUSE II button is activated. Press PAUSE II to cancel pause.
 - The tape has reached its end. Press REW ◀◀ to rewind the tape.
- No sound.**
- The deck is not properly connected. Make the proper connections (see pages 5 and 6).
 - The connected amplifier is not being operated properly. Operate the amplifier as required for the respective deck operation. (Refer to the operating instructions of the amplifier.)
- The deck does not record.**
- The record-protect hole on the cassette is open. Slide the record-protect tab to close the hole (see page 11).
 - The INPUT switch is incorrectly set. Set INPUT, ANALOG INPUT or DIGITAL IN/OUT to the correct position.
 - The REC LEVEL CH-(L)/2(R) controls are set at 0. Turn them clockwise to raise the recording level (only during analog recording).
- The OPEN/CLOSE ▲ button does not work.**
- The OPEN/CLOSE ▲ button does not function during recording. Press STOP ■ or PAUSE II to stop recording first, then press OPEN/CLOSE ▲.
- "CAUTION" appears and the deck cannot be operated.**
- A safety mechanism is operating because of condensation. Remove the cassette and leave the deck turned on for about an hour. Then turn the deck off, then on again (see page 29).


Additional Information

- The built-in clock does not keep proper time once the power is turned off.**
- The battery in the deck is weak.
 - Have the battery replaced by Sony service personnel (entails a service fee).
- After pressing REW ◀◀/FF ►► or PREVIOUS I◀◀/NEXT ►►, the tape stops momentarily before starting to move.**
- This is normal and is not a mechanical problem.
- The deck cannot be operated with the remote (supplied).**
- The battery is weak. Change both batteries.
 - Set the REMOTE switch to WIRELESS.
- The deck cannot be operated with the optional remote RM-D750.**
- Set the REMOTE switch according to the connection between the deck and the remote (see page 26).
- "SBM" does not appear in the display even though SBM is set to ON.**
- "SBM" appears only during the recording of analog input signals with a sampling frequency of 48 kHz or 44.1 kHz, not during the recording of a digital input signal, or an analog input signal with a sampling frequency of 32 kHz, or during playback.
- A particular operation cannot be done as you want.**
- Set the appropriate menu to its default setting.

- Writing or erasing of sub codes is not possible.**
- The record-protect hole on the cassette is open. Slide the record-protect tab to close the hole (see page 11).
- Start ID writing is not possible during recording.**
- The start ID cannot be written within 18 seconds (36 seconds in long-play mode) after the end of the previous start ID. Make sure at least 18 seconds (36 seconds in the long-play mode) has passed after the last start ID and before writing a new one.
- The search function does not stop at the specified track.**
- The specified program number does not exist on the tape. Press RENUMBER to renumber the program numbers (see page 23).
 - The program numbers are out of order. Press RENUMBER to renumber the program numbers (see page 23).
- The search function operates suddenly during playback.**
- Skip Play is on.
 - Press SKIP PLAY to turn off "SKIP PLAY" in the display and cancel Skip Play.
 - Repeat Play is on.
 - Press REPEAT repeatedly to turn off "REPEAT" or "REPEAT 1" in the display and cancel Repeat Play.
- The tape operation buttons do not function while writing or erasing a start ID, a skip ID or an end ID.**
- All buttons do not work during the 9 seconds the start ID or end ID is being written or erased (18 seconds in long-play mode) or during the 1 second the skip ID is being written or erased (2 seconds in long-play mode). Wait until the writing or erasing the start, skip or end ID finishes before operation.
- Absolute time codes writing is not possible.**
- Recording began within a blank section. Rewind the tape to its beginning, or locate the end of the recorded portion with Find Search before starting recording.
- Tape transport is excessively loud during fast-forwarding or rewinding.**
- The noise is caused by the cassette and is not a mechanical problem.
- The tape stops suddenly.**
- The cassette is defective or damaged. Press OPEN/CLOSE ▲ and replace the cassette with a new one.


SECTION 2 DISASSEMBLY

• This set can be disassembled in the order shown below.

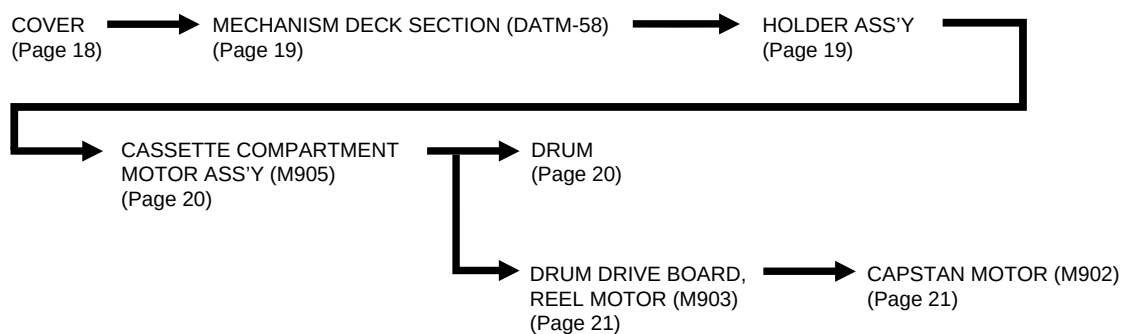


Note: Follow the disassembly procedure in the numerical order given.


COVER

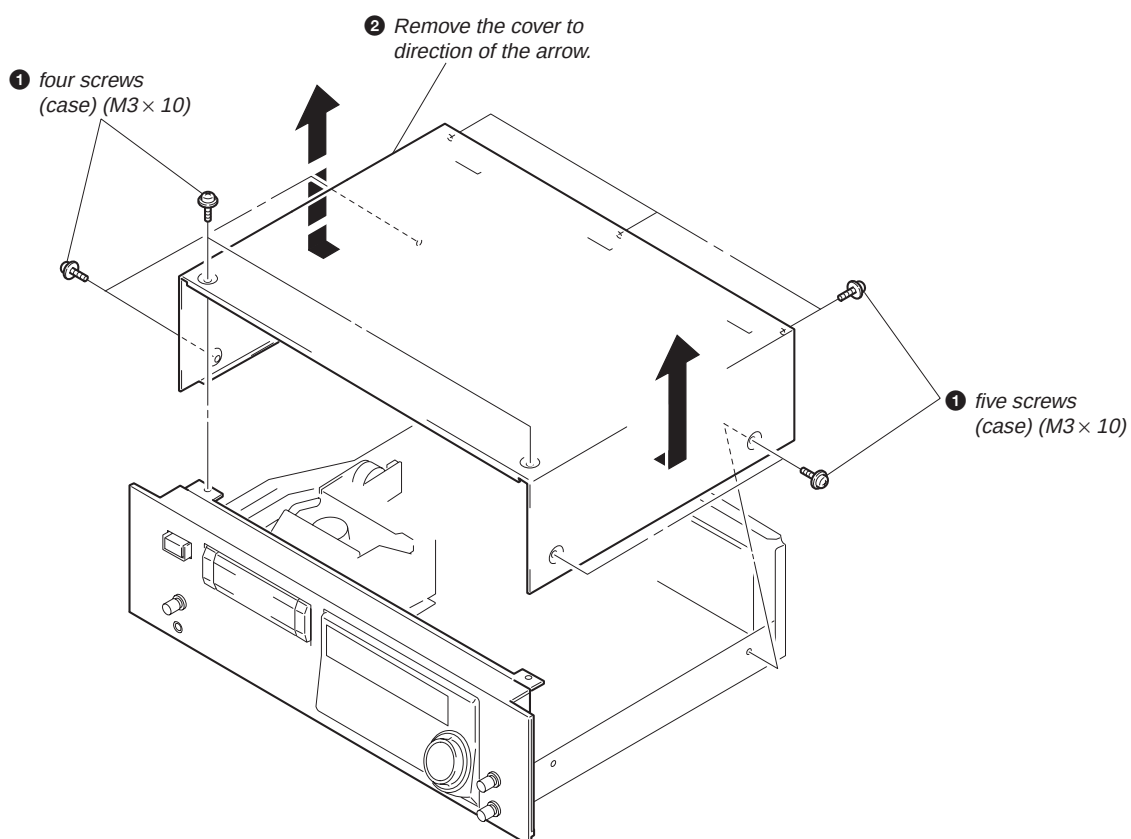


MECHANISM DECK SECTION (DATM-58)

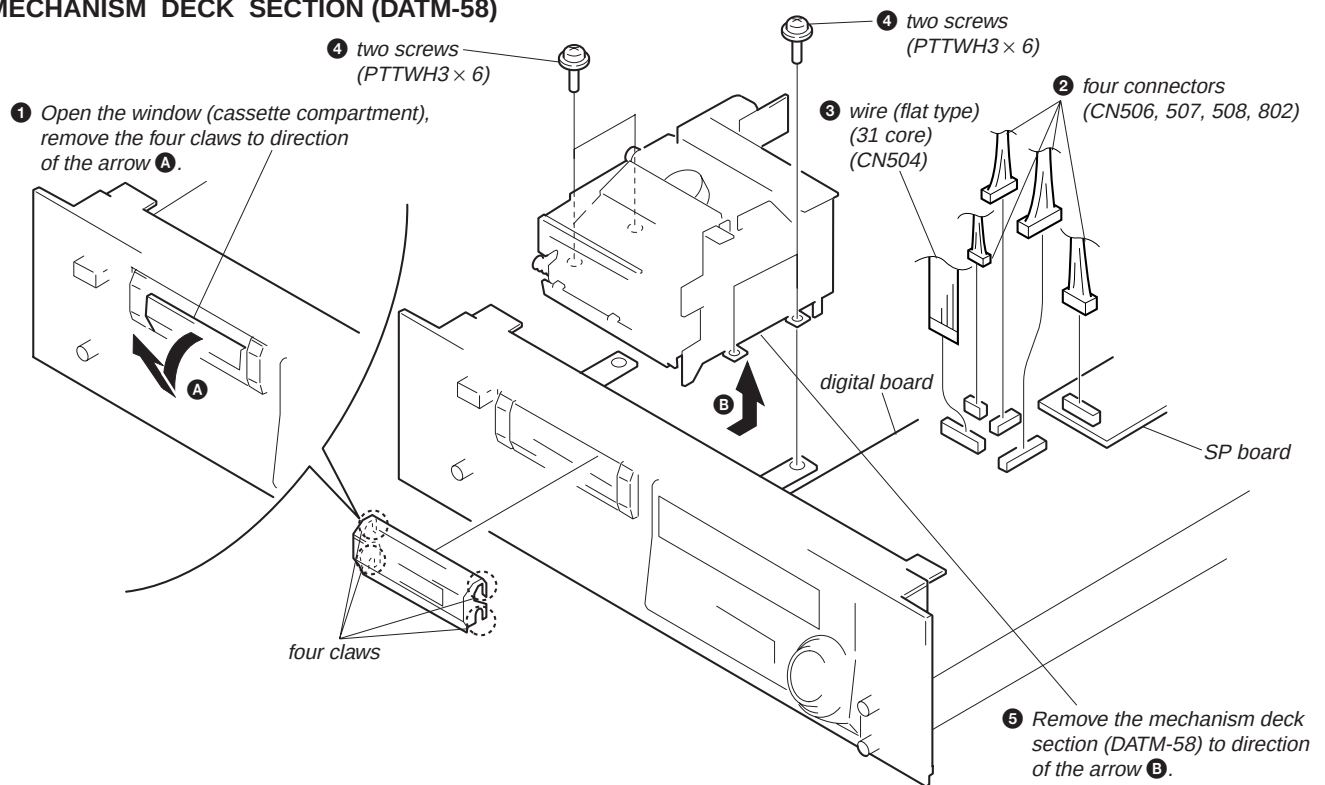


HOLDER ASS'Y

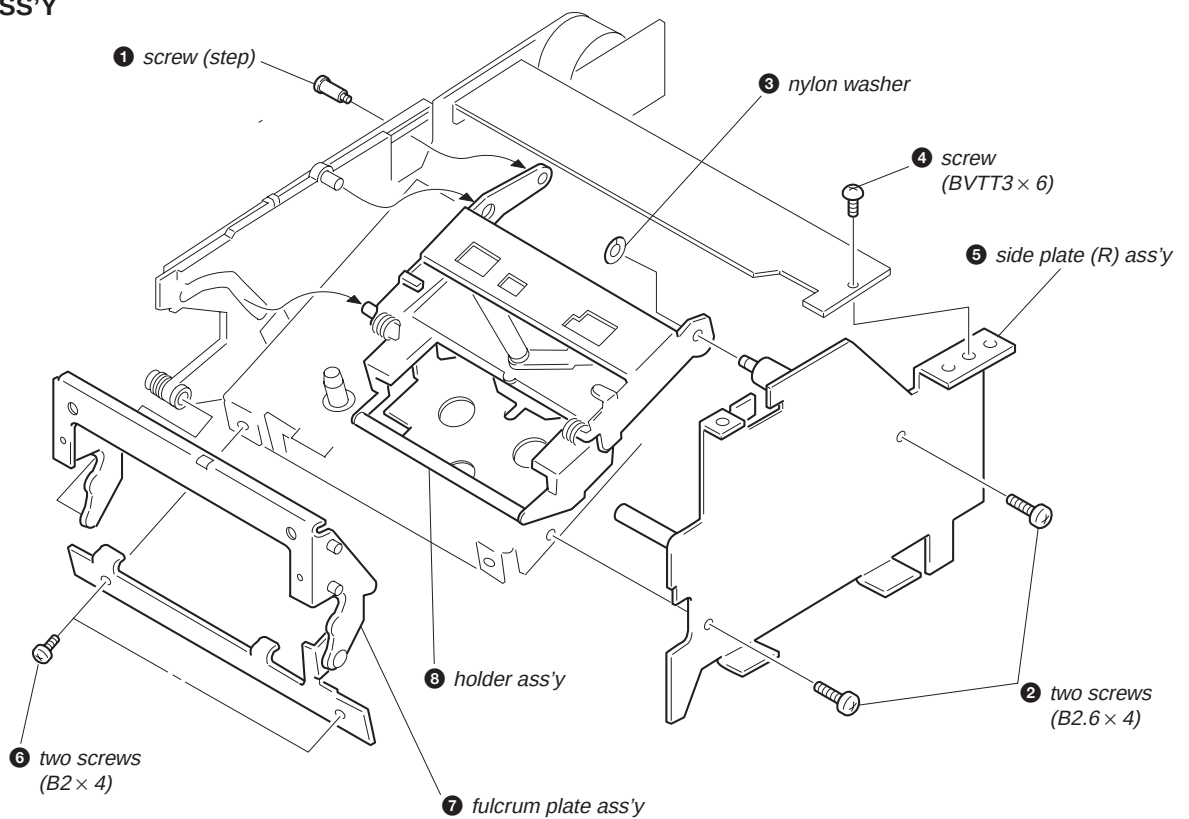


CASSETTE COMPARTMENT MOTOR ASS'Y (M905)

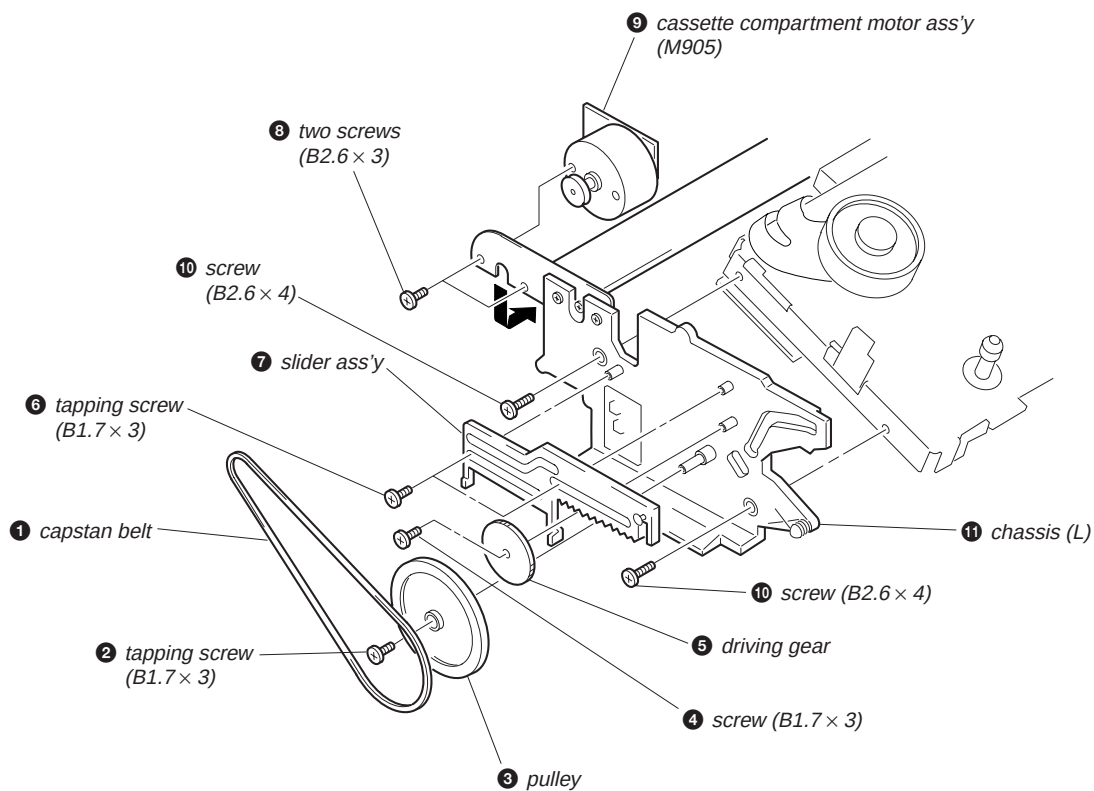


DRUM

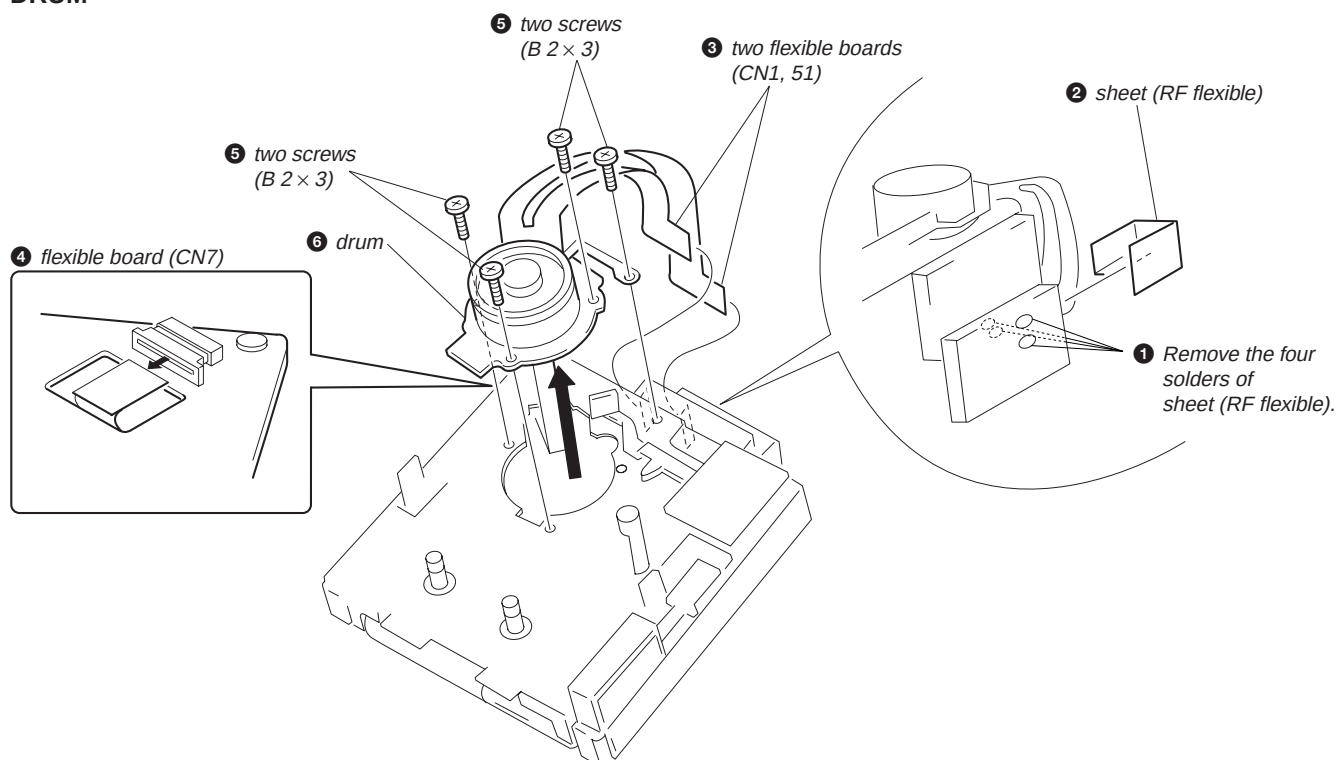

DRUM DRIVE BOARD, REEL MOTOR (M903)

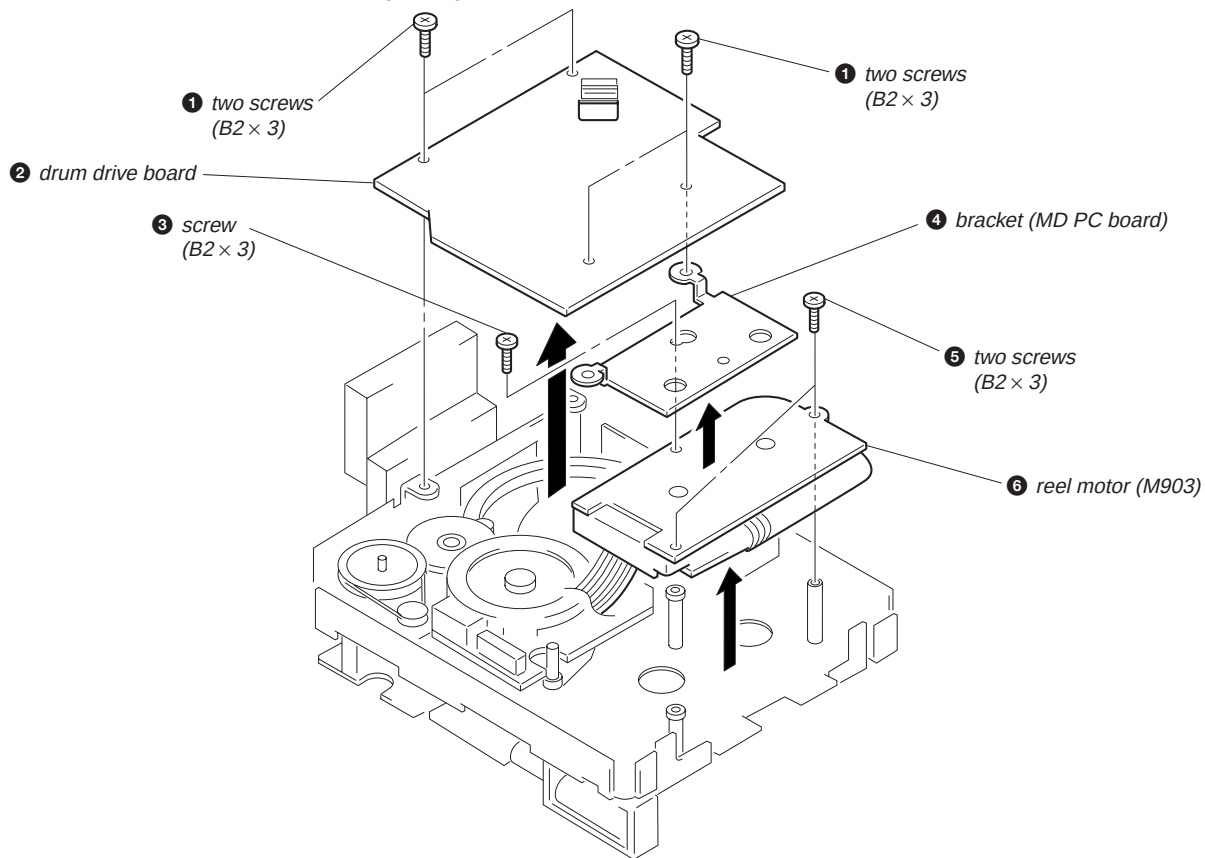


CAPSTAN MOTOR (M902)

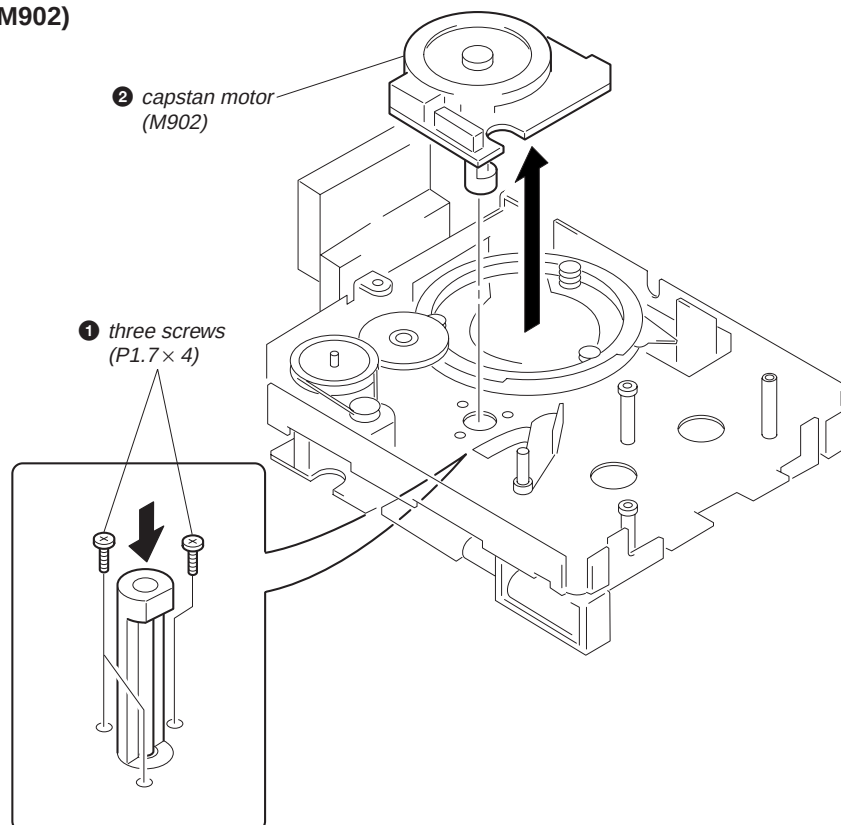


SECTION 3 ADJUSTMENTS

PRECAUTION

- The adjustments are performed in the sequence that they are described.
- The required test tapes are:
 TY-7111 (8-909-812-00) Level
 TY-7252 (8-909-822-00) Tracking
 TY-7551 (8-909-814-00) Function
 TY-30B (8-892-358-00) Blank
 The required torque meter is:
 TW-7131 (8-909-708-71) FWD
- Switch and Control Settings
 REMOTE switch : OFF
 REC MODE switch : 48k (STANDARD)
 REC LEVEL control : Minimum
 PHONE LEVEL control : Minimum
- Preparation of End Sensor Cassette
 (1) Push the slider locks of a cassette tape and slide the slider in the direction of the arrow.

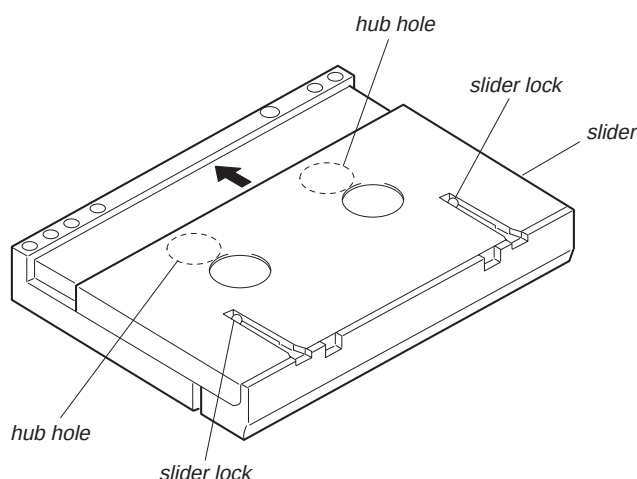


- Open the cassette lid and cut tape.

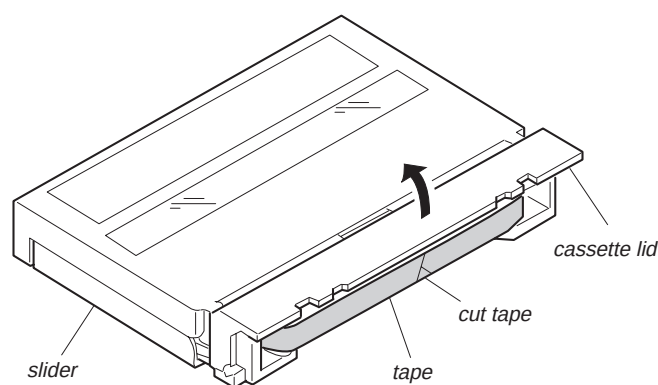

- Turn the hubs to take-up tape (for both T and S sides).
 The end sensor cassette tape for end sensor adjustment is now prepared.

- Take care never to turn RV1 and RV2 within the RF AMP board of the cassette compartment section.

- When adjusting tape pass and each guide, as shown below, it is a good practice to remove the holder assy and use the DAT cassette holder (J-8000-002-A). This facilitates adjustment work.
 - When removing and installing the holder assy, turn the pulley counterclockwise and set loading OUT condition for easy removal and installation.
 - When adjusting, turn the pulley clockwise and turn on the CASSETTE TABLE IN switch (S2) to set loading IN condition. Then, set the test tape.

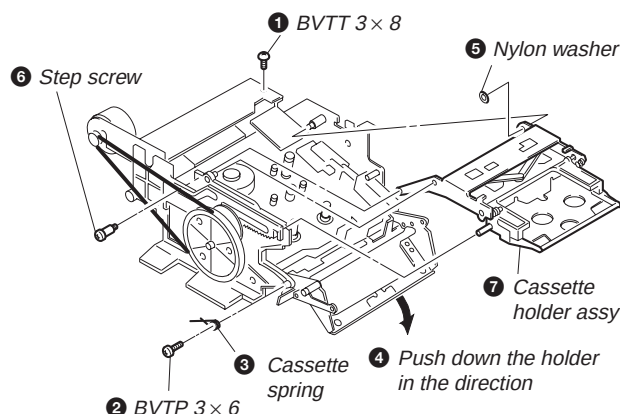

- Test Mode

- To enter the test mode, short between TP (MAIN-TEST) and the GND on the DIGITAL board, then turn on the power. The meter scale within the fluorescent indicator tube (FL701) will flash.

Press the OPEN/CLOSE ▲ key and set the test tape. (The specified tape should be used for each adjustment.)

Test Mode (Short between TP (MAIN-TEST) and GND)

- Have "DPG" display lit in the fluorescent indicator tube. (Press the AMS ►► key.)
 - S2, T2 and F Guide Adjustments
 - End Sensor Adjustment
 - Tape Pass Fine Adjustment (×1.5FWD mode)
 - DPG Adjustment
- Have "TR" display lit in the fluorescent indicator tube. (Press the ► key.)
 - FWD Torque Adjustment
 - FWD Back Tension Adjustment
 (Torque measurement mode)

- To release the test mode, remove the short between TP (MAIN-TEST) and GND. After necessary adjustment is completed, be sure to release the test mode.


8. After adjustment is completed, perform the following checks to verify the tape speed.

- (1) Check that with the REC MODE switch set to STANDARD 48k, tape is normally recorded and played back. (×1)
- (2) Check that with the REC MODE switch set to LONG, tape is normally recorded and played back. (×0.5)
- (3) Check that in performing the CUE (▶ + ►►) or REVIEW (▶ + ◀◀) operation, “kyur kyur” sound is heard. (×3, ×8)

(4) Check that after performing the FF (►►) or REW (◀◀) operation, the time display is appropriate. (×16)

(5) Check that the AMS (►►◀, ◀◀►) operation is normal.

Adjustment Location: mechanism deck block

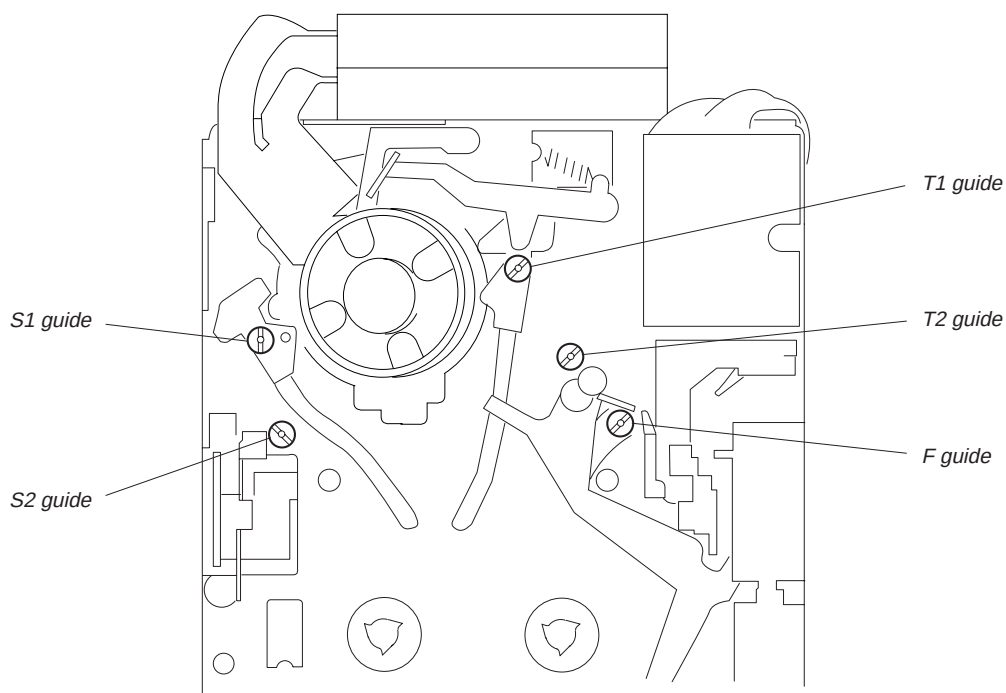

3-1. MECHANICAL ADJUSTMENTS

When replacing any drum related parts, after S2, T2 and F guide adjustments have been made, tape pass fine adjustment ($\times 1.5$ FWD mode) in Electrical adjustment should be performed.


S2, T2 and F Guide Adjustments

Adjustment Method:

1. Enter the Test Mode ① (see page 22.) and set the test tape TY-7252 (8-909-822-00).
2. Set the REC MODE switch to STANDARD 48k and press the AMS $\blacktriangleright\blacktriangleright$ key.

While in FWD mode, check that there is no curl on the upper and lower flanges of the S2, T2 and F guides.

If any curl is present, put the S2, T2 and F guide of concern back in the high position and adjust by adjusting the direction of tightening.

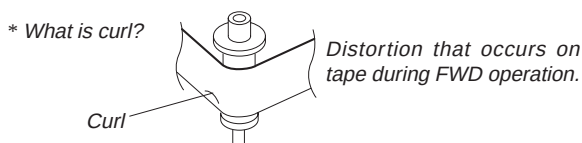

3-2. ELECTRICAL ADJUSTMENTS

End Sensor Adjustment

When removing the holder assy and when replacing the mechanism deck block, this adjustment should be performed.

Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (S-END) and the CH-2 terminal to TP (T-END) on the DIGITAL board.
2. Enter the Test Mode ① (see page 22.) and set the end sensor cassette tape (see page 22.)
3. Set the STOP (■) mode.
4. Adjust RV502 (S-END) and RV501 (T-END) on the DIGITAL board so that the respective peak to peak values of the waveforms on the oscilloscope are 1.2 Vp-p.



Adjustment Location: See page 26.

FWD Torque Adjustment

Adjustment Method:

1. Enter the Test Mode 2 (Torque Measurement Mode) (see page 22.) and set the torque meter TW-7131 (8-909-708-71).
2. Press the PLAY ($\blacktriangleright$) key.
3. Press the $\blacktriangleright\blacktriangleright$ key or $\blacktriangleleft\blacktriangleleft$ key and adjust so that the FWD torque value (T side take-up torque) is within the range of 11 to 13 g $\cdot$ cm.
4. When the torque meter is circulating around, check the indicated value.

FWD Back Tension Adjustment

Adjustment Method:

1. Enter the Test Mode ② (Torque Measurement Mode) (see page 22.) and set the torque meter TW-7131 (8-909-708-71).
2. Press the PLAY ($\blacktriangleright$) key.
3. Press the AMS $\blacktriangleright\blacktriangleright$ key or $\blacktriangleleft\blacktriangleleft$ key and adjust so that the back tension (S side) is within the range of 8.5 ± 0.5 g $\cdot$ cm.
4. When the torque meter is circulating around, check the indicated value.
5. Verify that the maximum value is less than 19.5 g $\cdot$ cm.

REV Torque Check and REV Back Tension Check

Check Method:

1. After FWD torque adjustment and FWD back tension adjustment are completed, press the PLAY ($\blacktriangleright$) key again and set REV ($\blacktriangleleft$) mode.
2. Check that the REV torque value is within the range of 13.5 to 17.5 g $\cdot$ cm and that the REV back tension value is within the range of 7.5 to 11.5 g $\cdot$ cm.


Tape Pass Fine Adjustment ($\times 1.5$ FWD Mode)

When replacing any drum related parts, be sure to perform this adjustment.


Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (RF) and the CH-2 terminal to TP (SWP) on the DIGITAL board.
2. Enter the Test Mode ① (see page 22.) and set the test tape TY-7252 (8-909-822-00).
3. Press the AMS ($\blacktriangleright\blacktriangleright$) key.

Role of each switch in test mode.

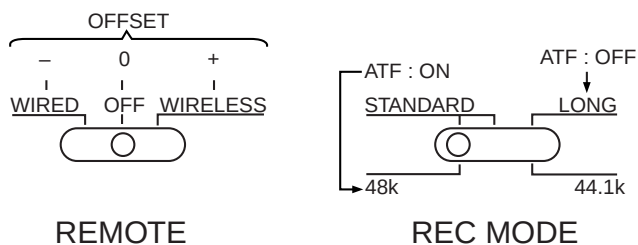


4. Put the REC MODE switch to the LONG (ATF: OFF) position and put the REMOTE switch to either the WIRED or WIRELESS position (OFFSET: - or +), fine adjust both the S1 guide and T1 guide so that the RF signal waveform of the oscilloscope repeatedly contracts and expands in vertical directions as it has the same shape.

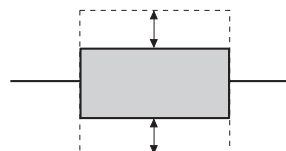


* Adjust the direction of tightening to complete this adjustment. If there is curl on any of the upper and lower flanges of the S2, T2 and F guides, adjust the guide of concern.

5. Put the REC MODE switch to the STANDARD 48k (ATF: ON) position and put the REMOTE switch to either the WIRED or WIRELESS position (OFFSET: – or +), then check the RF signal waveform.

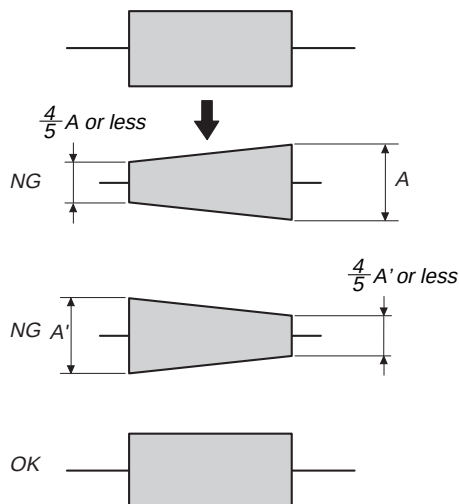

6. Put the REC MODE switch to the STANDARD 48k (AFT: ON) position and put the REMOTE switch to the OFF position (OFF-SET: 0), then check the RF signal waveform.
 - (1) Verify that the peak value (B) of the RF signal waveform is 60mV or more.
 - (2) Verify that the flat position of the RF signal waveform has undershoots of 10% or less.

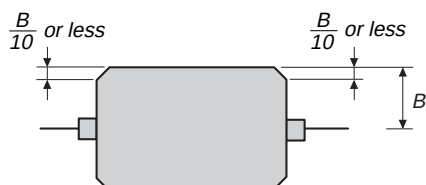

7. If any of the specified values are not satisfied, repeat items 3 to 6.

Adjustment Location: See page 23.


DPG Adjustment

When replacing any drum related parts, be sure to perform this adjustment.

Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (RF) and the CH-2 terminal to TP (SWP) on the DIGITAL board.
2. Enter the Test Mode ① (see page 22.) and set the test tape TY-7252 (8-909-822-00).
3. Put the REC MODE switch to the STANDARD 48k (ATF: ON) position and put the REMOTE switch to the OFF position (OFF-SET: 0).
4. Press the AMS (▶▶▶) key.
5. Press the PLAY (▶) key.
6. “DPG OK” is displayed in the fluorescent indicator tube.

Check that there is a difference of $650 \pm 15 \mu\text{sec}$ between the oscilloscope's SWP signal and the RF signal.

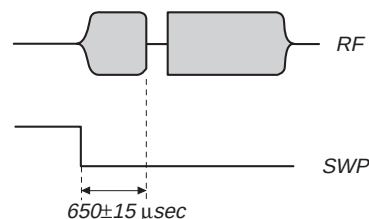

Adjustment Location: See page 26.

CHECK AND REPLACEMENT FOR DATE FNCTION

Clock IC Back-up Check

- When replacing the lithium battery (BATT501) or replacing any of the clock IC (IC518) and peripheral parts, the clock will be reset.
(The DATE display will be [‘-- -- --] [‘--h--m--s] even when the [PRESENT] button is pushed.)
Perform the back-up check by the following procedure.
 - (1) Connect a DC voltmeter between the DIGITAL board's TP (BATT+) as (+) side on the TP (BATT–) as (–) side.
 - (2) With the POWER switch of the set OFF, check that the voltage (1) is less than +20 mV.
(If the measured value is more than +20 mV, inspect the IC518 and peripheral parts and replace as needed.)
 - (3) With the POWER switch of the set ON, check that the voltage (1) is less than 0 mV (minus indication), (If plus indication, inspect the D510 and peripheral parts and replace as needed.)
 - (4) When these voltages are normal, set the clock to the current date and time according to the instruction manual.
(year/month/day/day of week/hours/minutes/seconds)*
 - (5) After the clock is set in item (4), turn off the POWER switch once and in several seconds, turn on the power again and make sure that the clock is operating.

Adjustment Location: See page 26.

Replacement of Back-up Battery

The back-up battery for clock is designed to serve for more than seven years under normal service conditions (room temperature and ordinary humidity).


When replacing the battery, take note of the following:

- Perform the above “Clock IC Back-up Check” and remedy the cause of battery consumption.
- The open voltage of the battery as removed is 3.0 V or more when it is new. If this voltage is 2.0 V or less, then battery is fully consumed and needs to be replaced.
- After the battery is replaced, perform the “Clock IC Back-up Check” again and set the clock.
- The coin type lithium battery (CR2032) is used for replacement.

* For description of the clock setting, see page 6.

Adjustment and Check Locations :


DIGITAL board – component side –

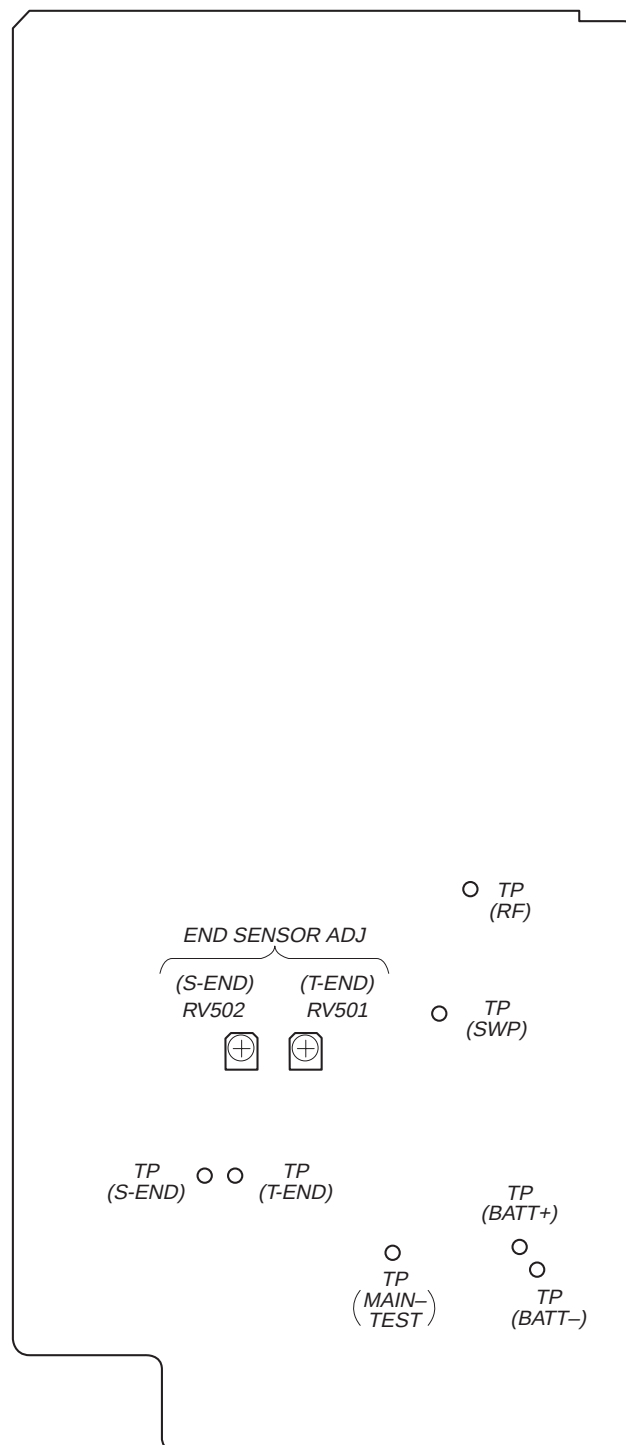

SECTION 4 DIAGRAMS

• Circuit Boards Location


Note: AUDIO board and DIGITAL board are supplied as MAIN board.

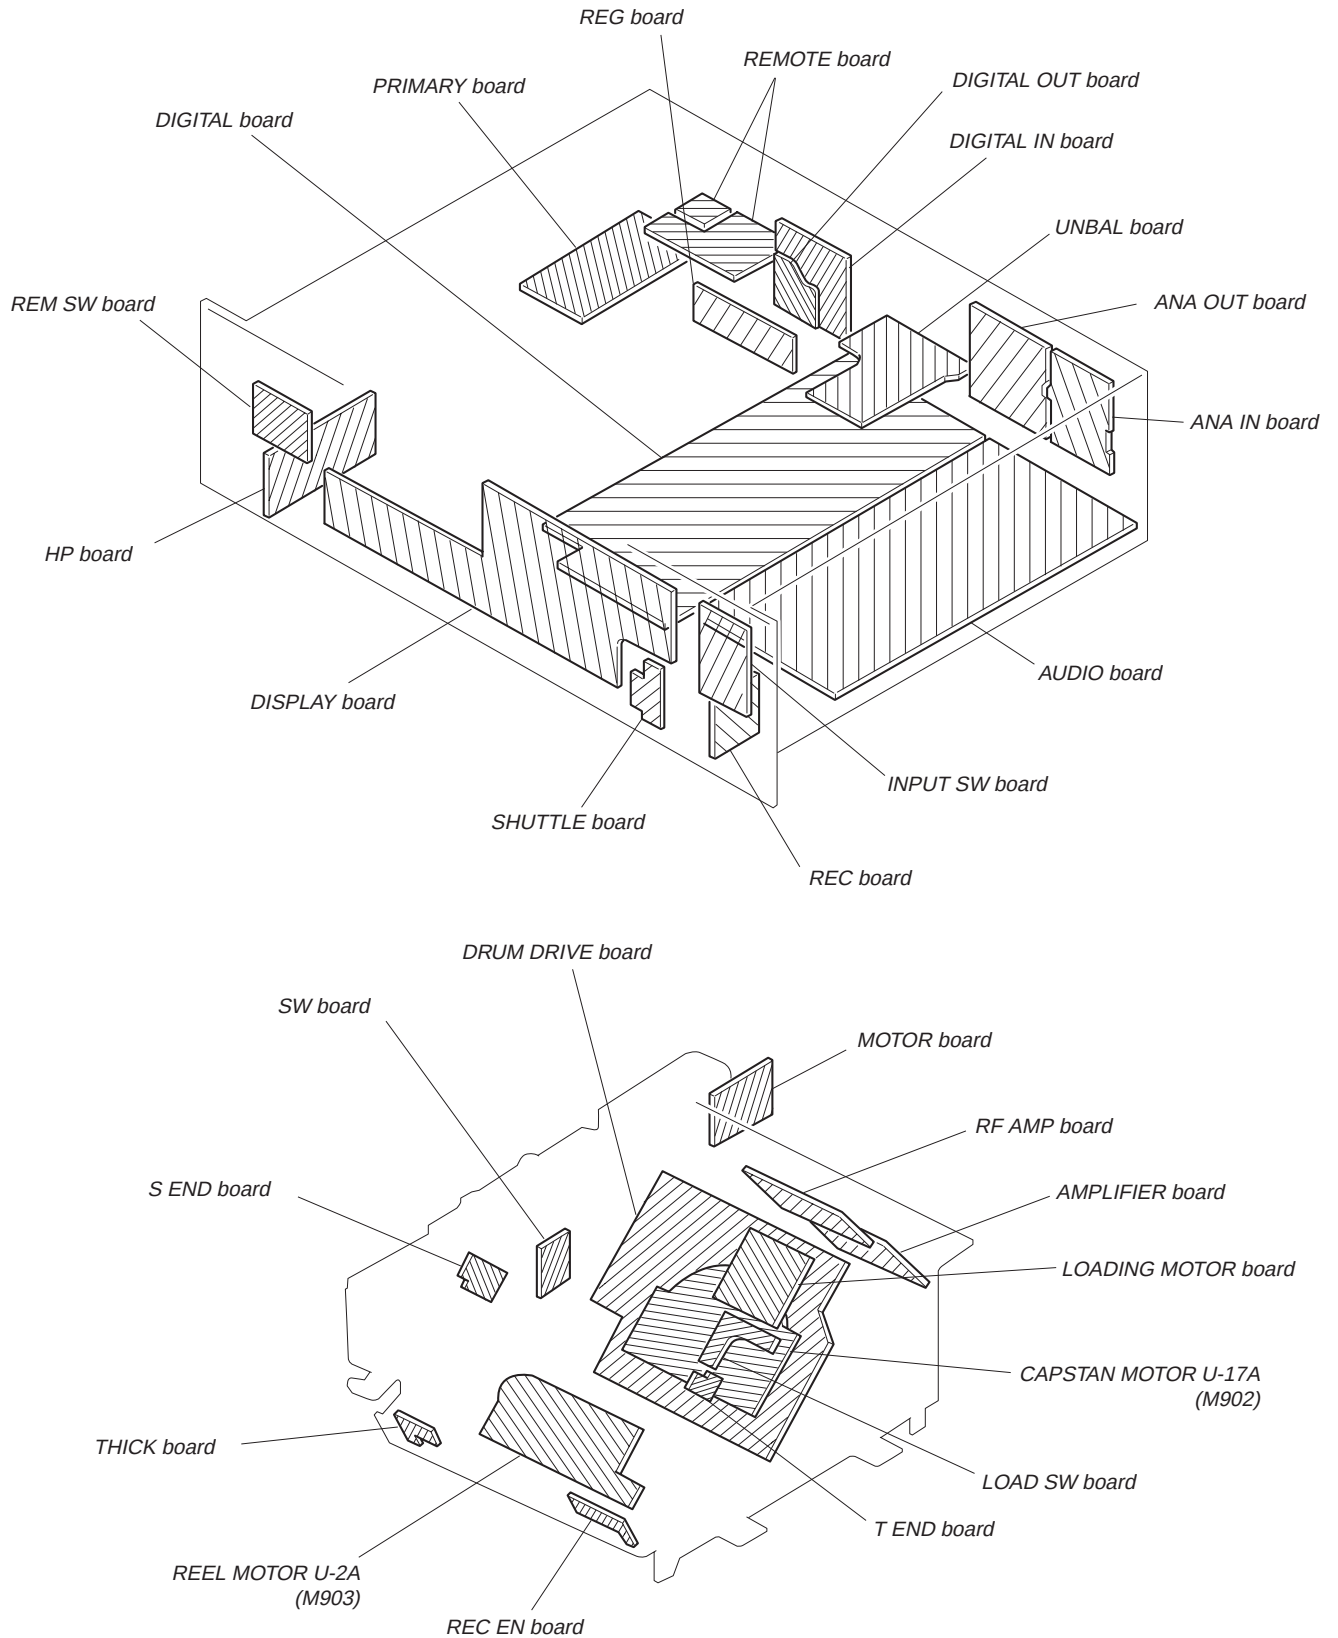


• Waveforms

– DIGITAL SECTION –


❶ IC503 ⑭ 18.816 MHz

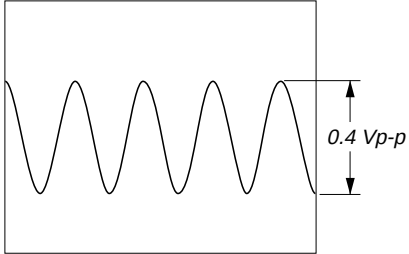

❷ IC503 ⑮ 24.576 MHz

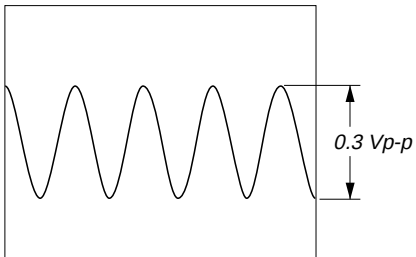


❸ IC518 ⑦ 32.768 kHz

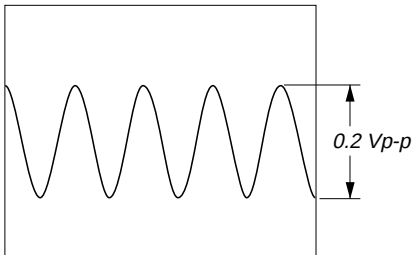


– AUDIO SECTION –

❹ X302 22.5792 MHz

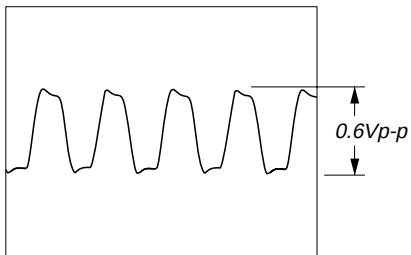


❺ IC310 ⑩ 24.576 MHz

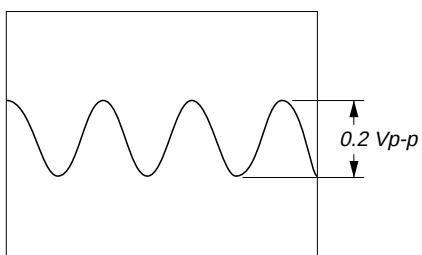


– DISPLAY SECTION –

❻ IC701 ⑳ 4.19 MHz

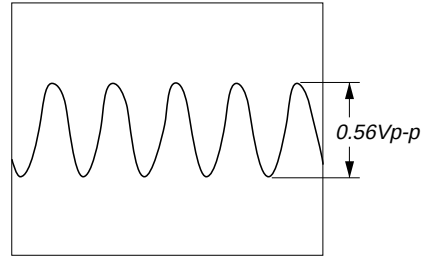


4-1. BLOCK DIAGRAMS


– Digital Audio Section –

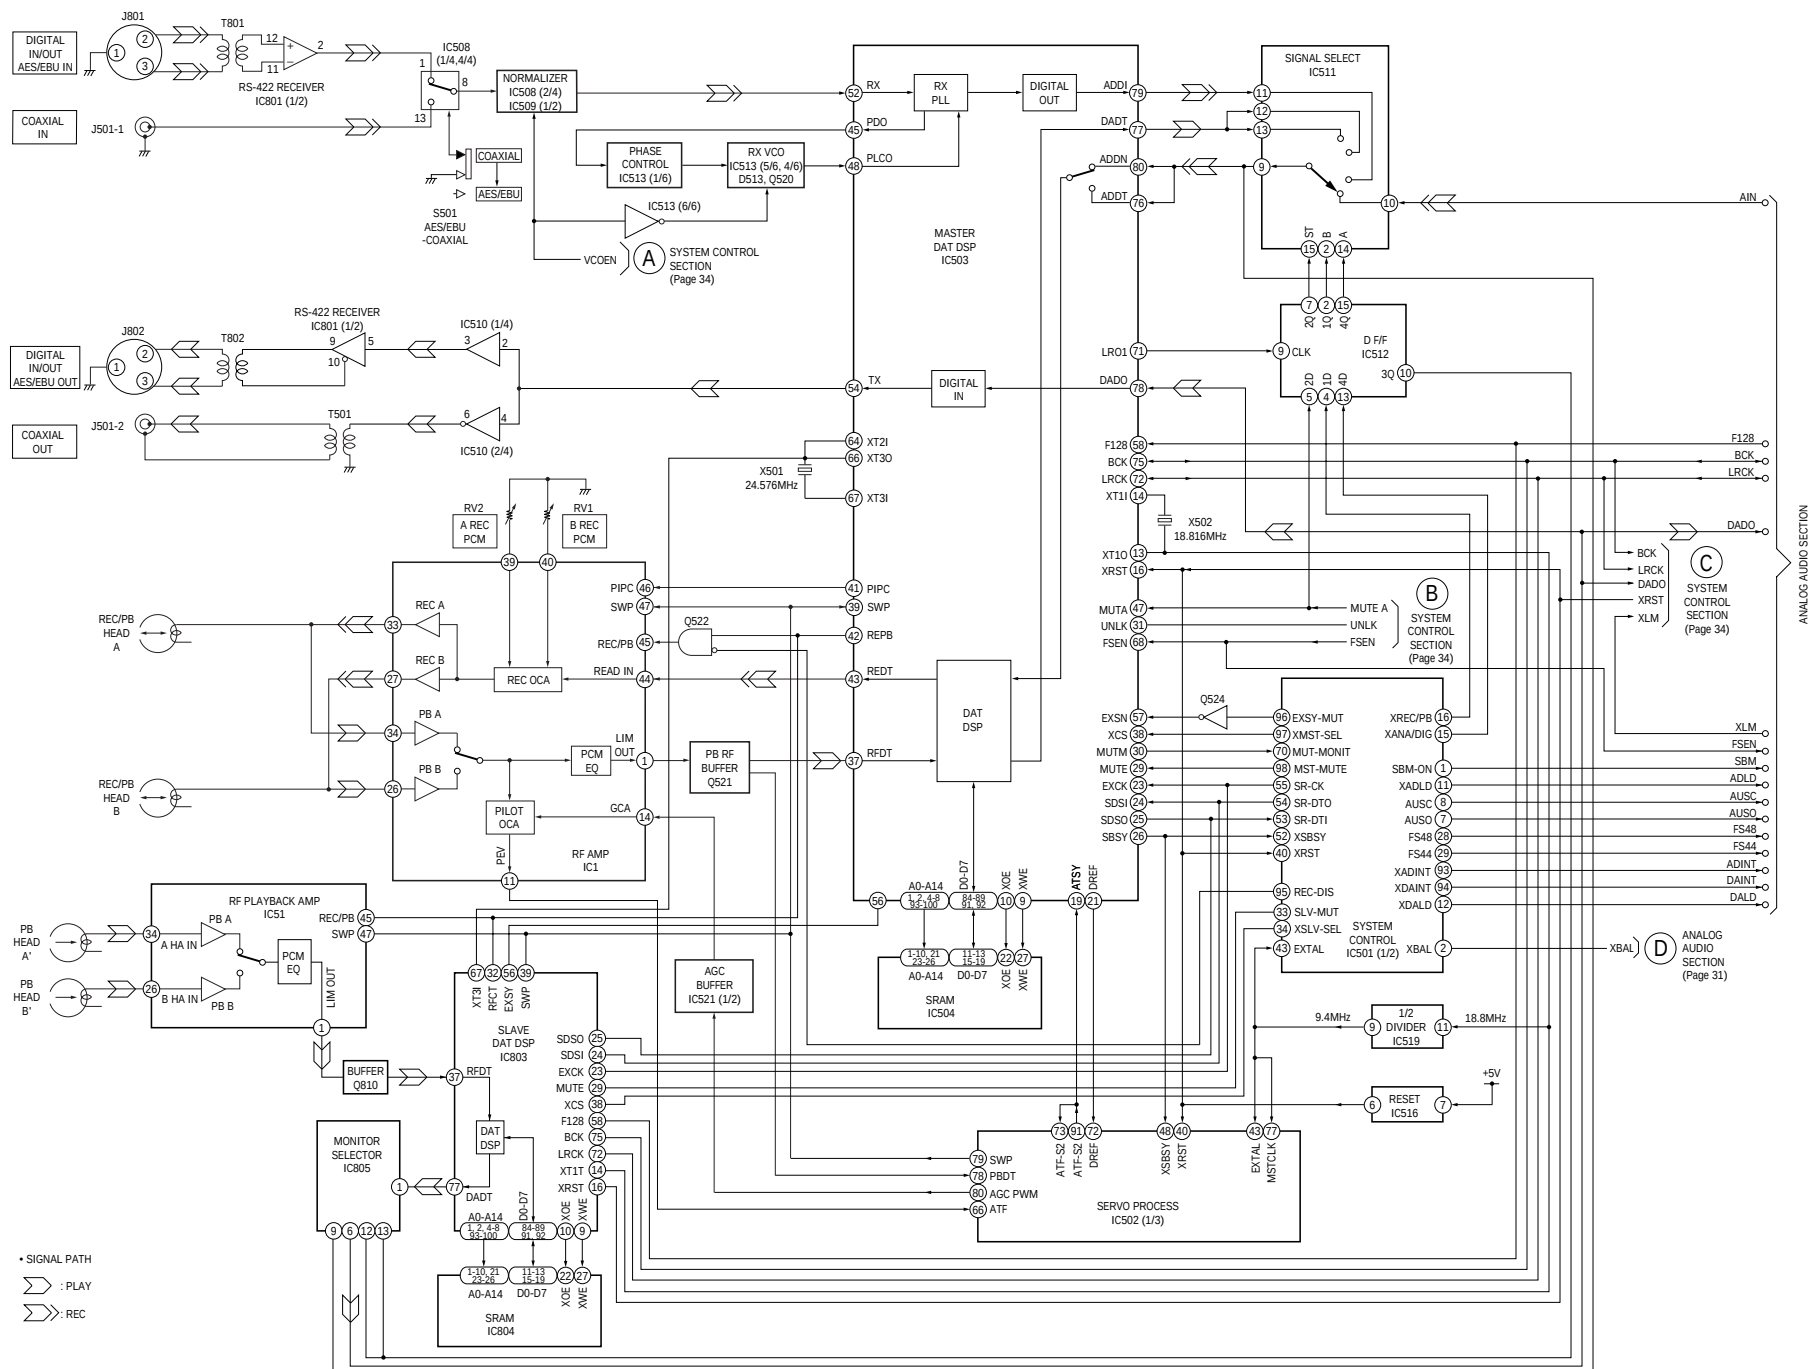


- Analog Audio Section -

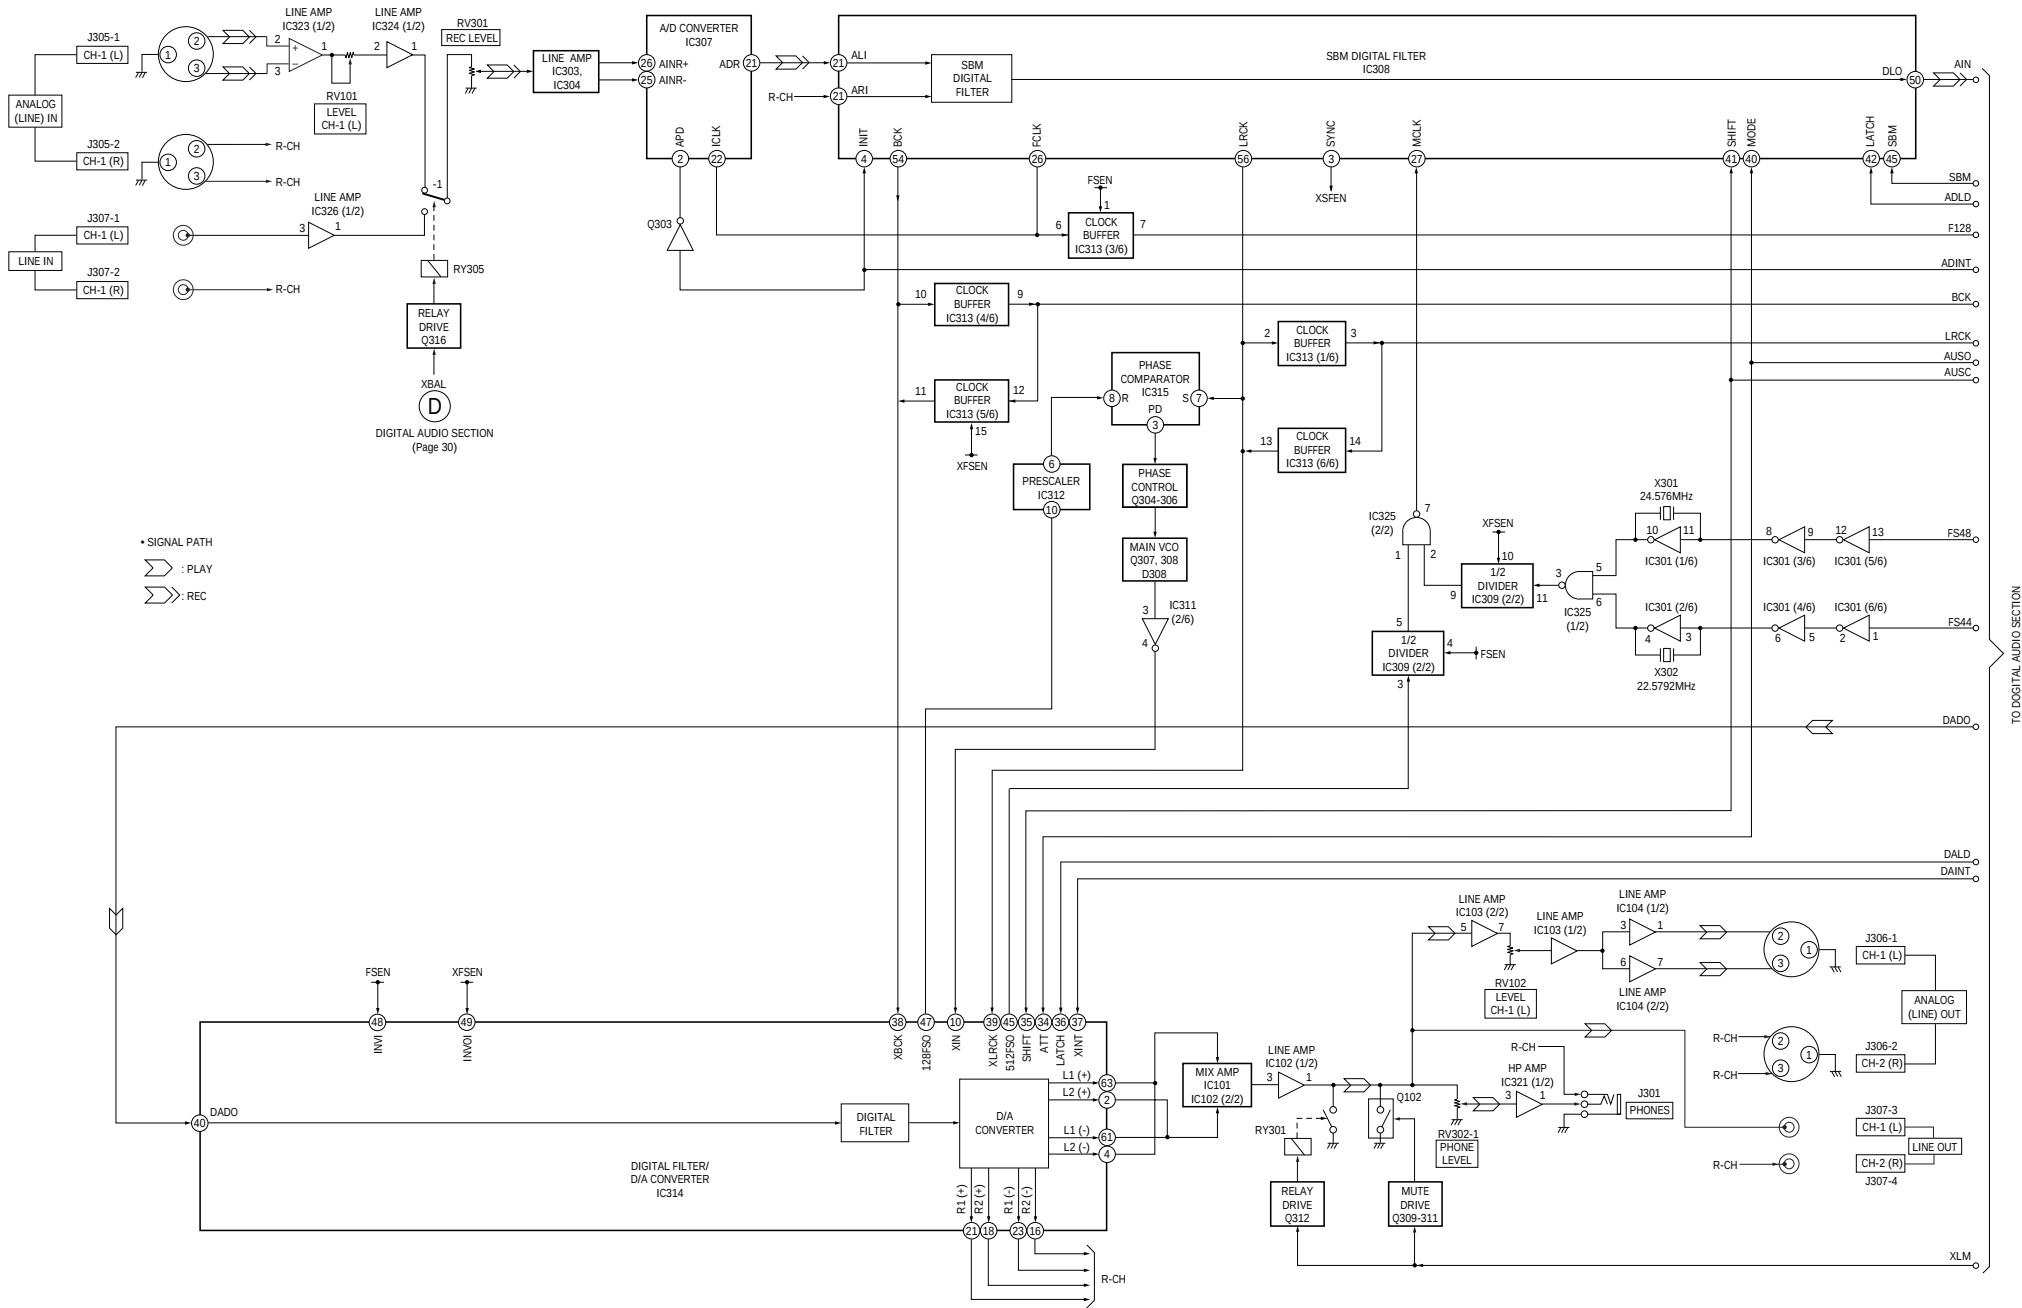

– System Control Section –

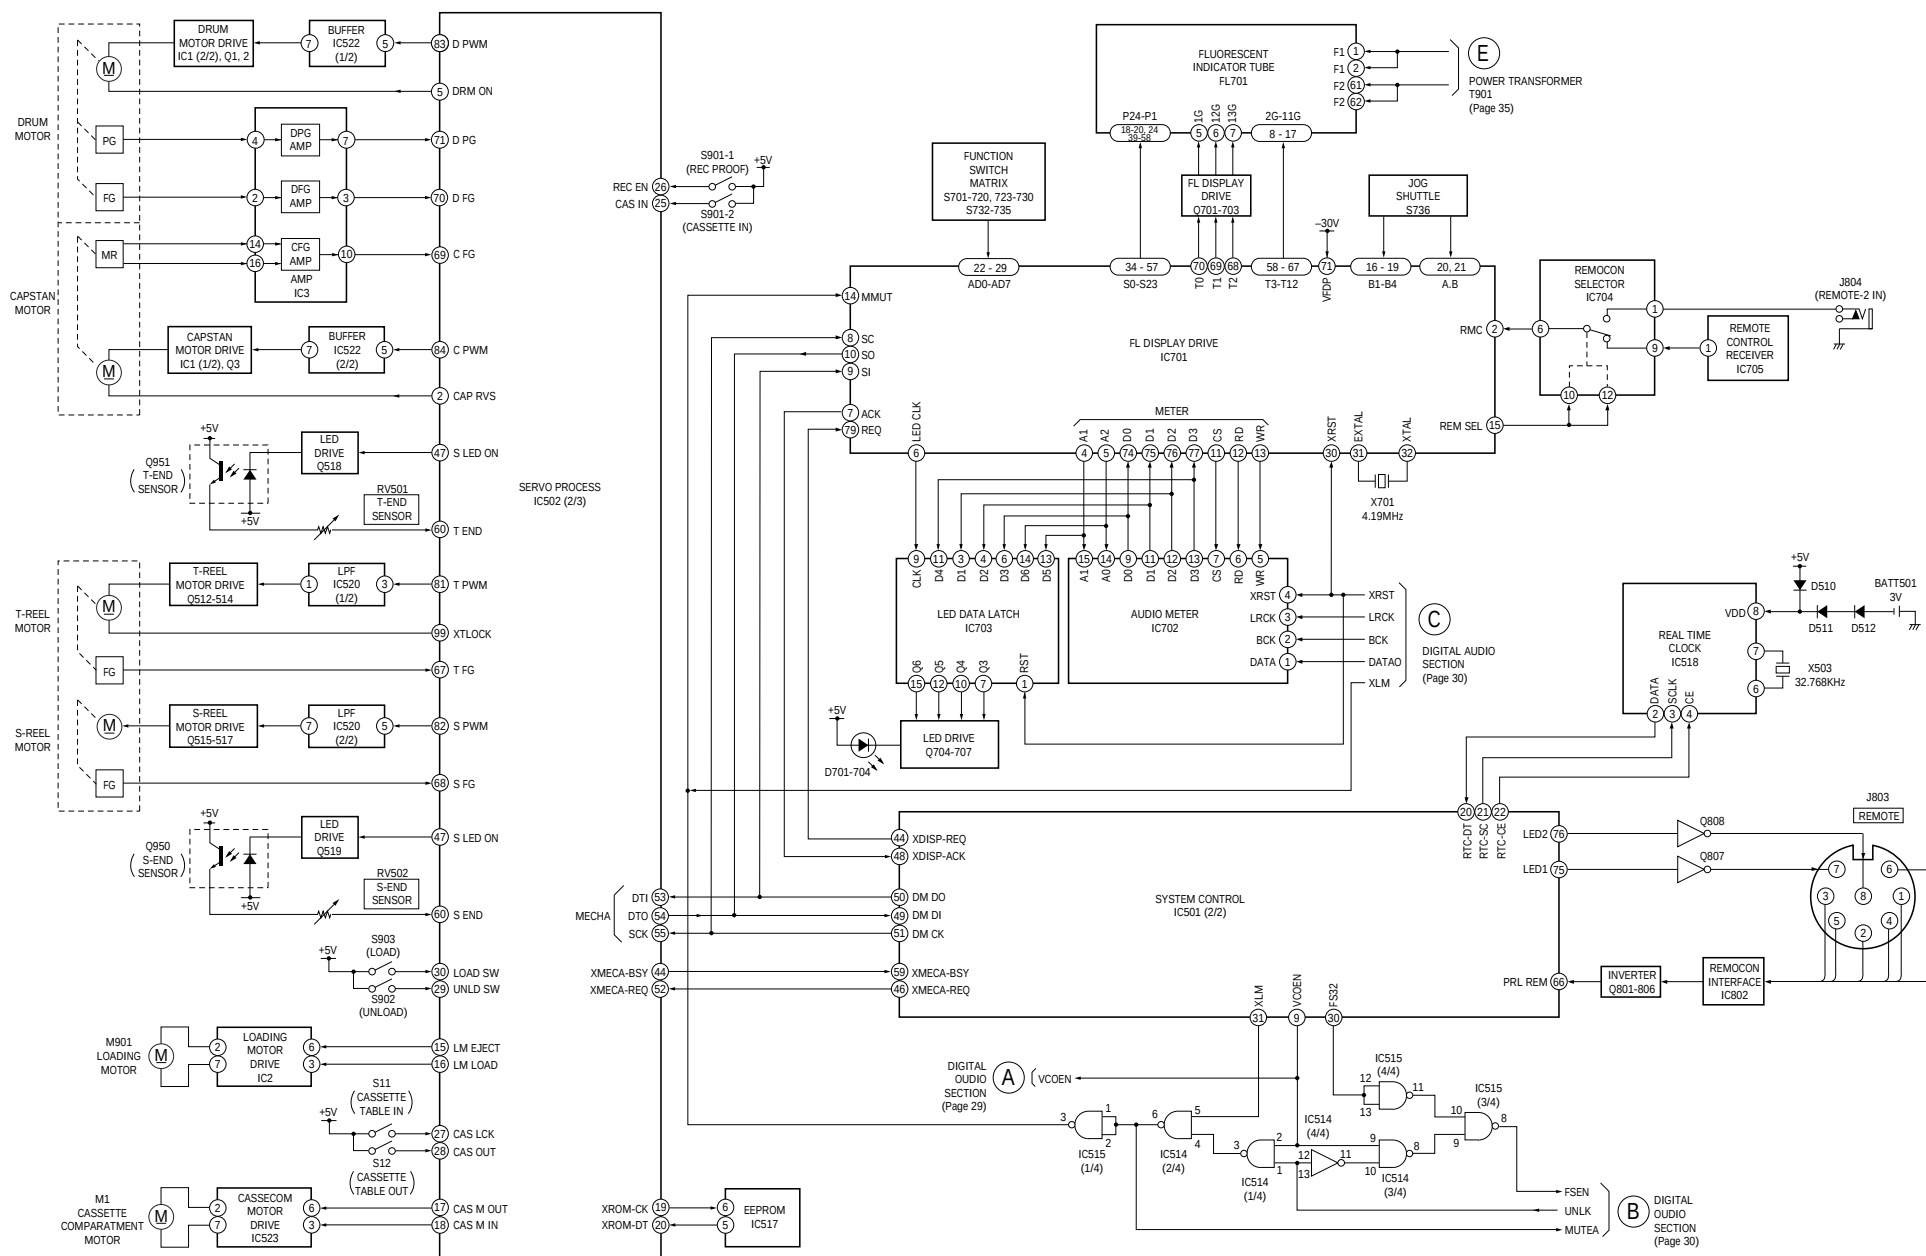


– Power Section –

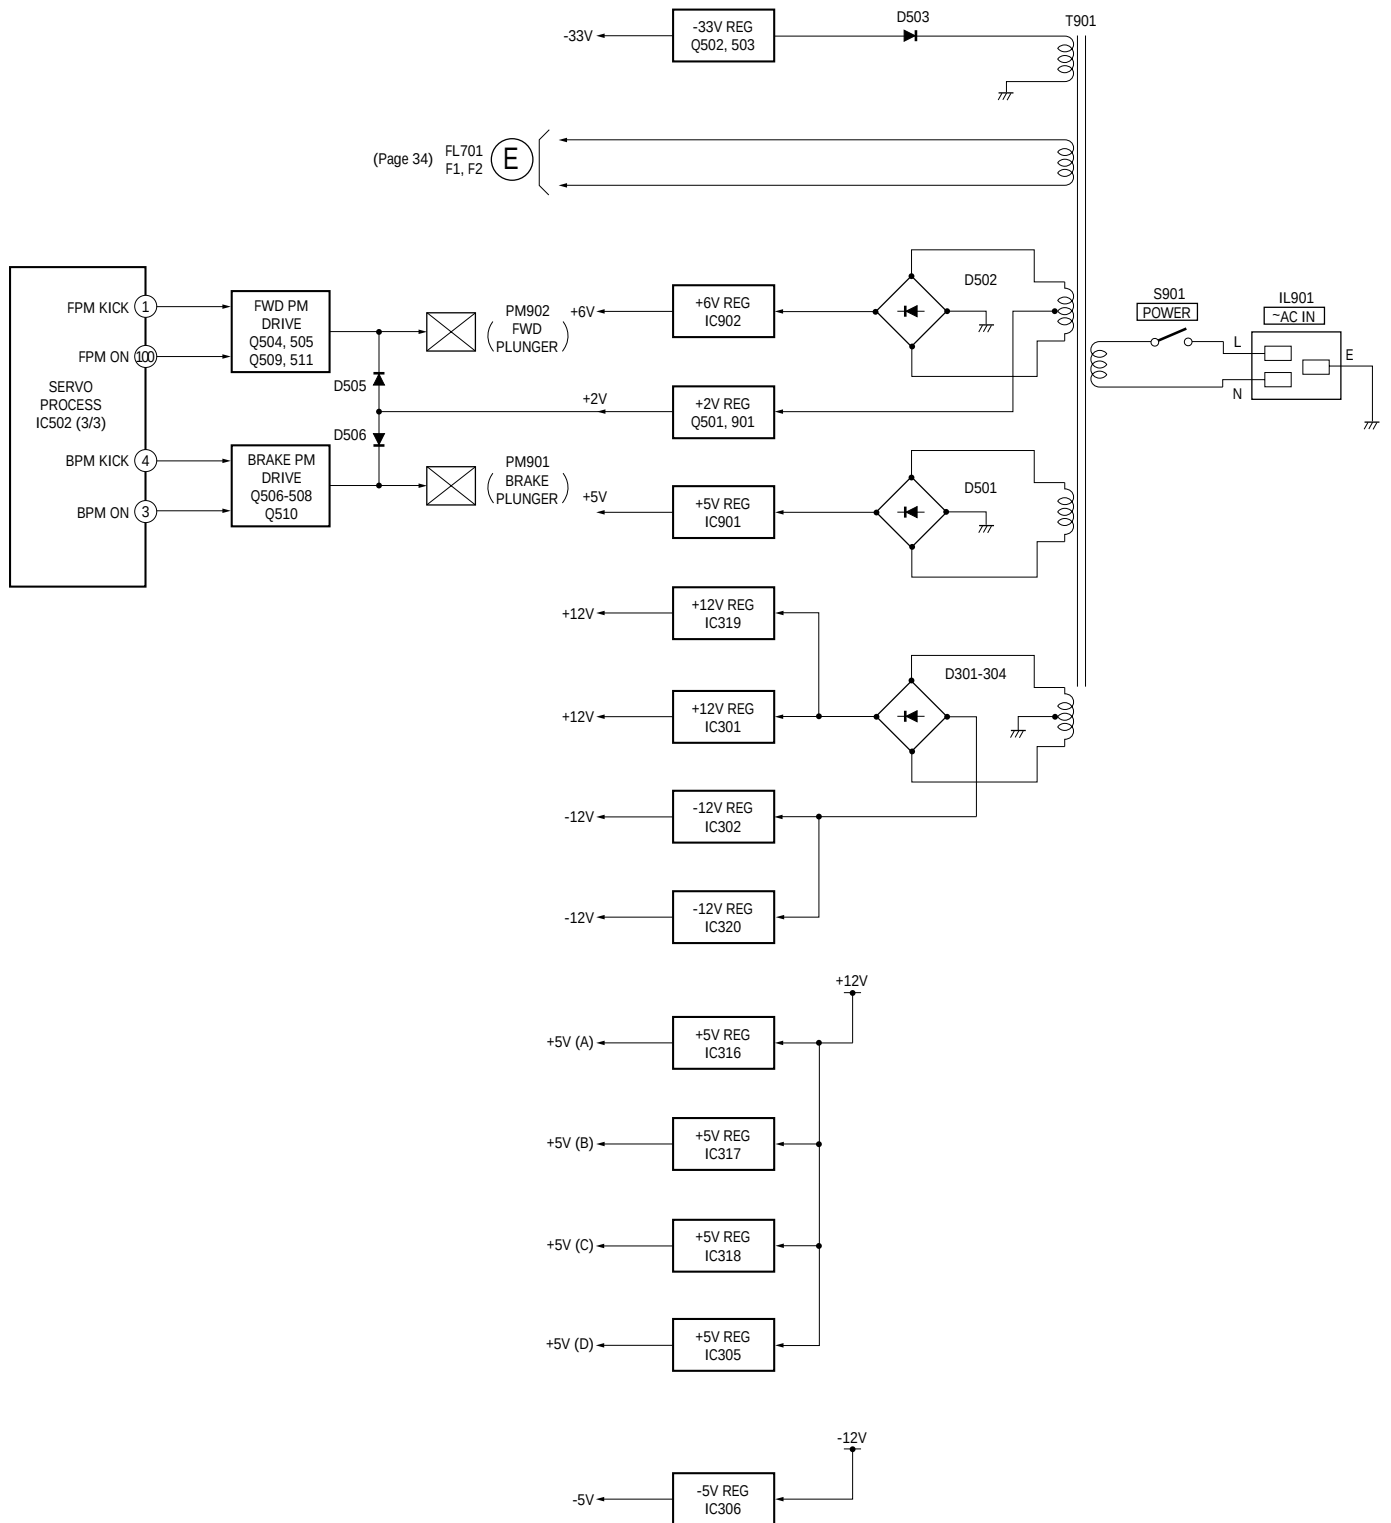


• IC Block Diagrams

IC1 CXA1364R (RF AMP BOARD)


IC51 CXA1364R (AMPLIFIER BOARD)

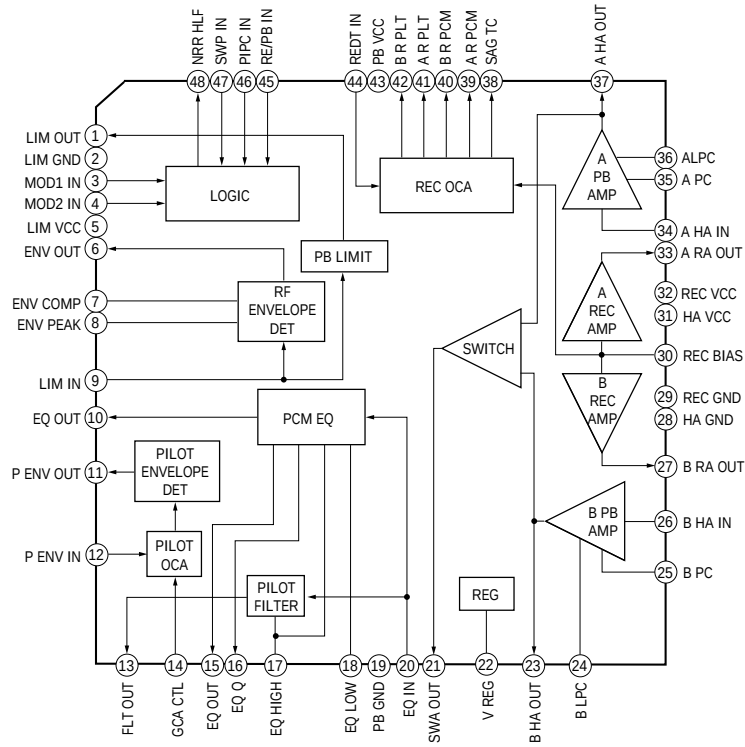


IC3 CX20115A (DRUM DRIVE BOARD)

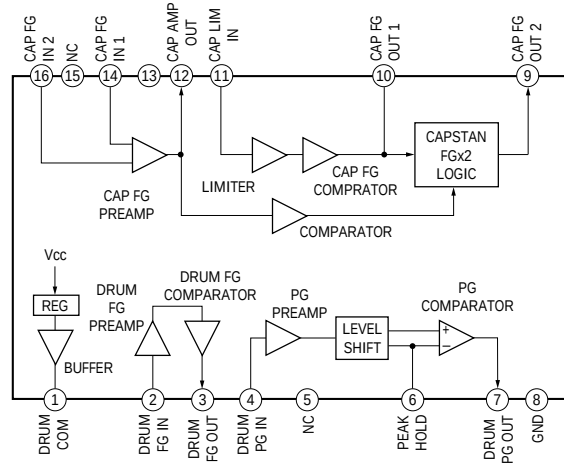


IC307 CXD8493M (AUDIO BOARD)

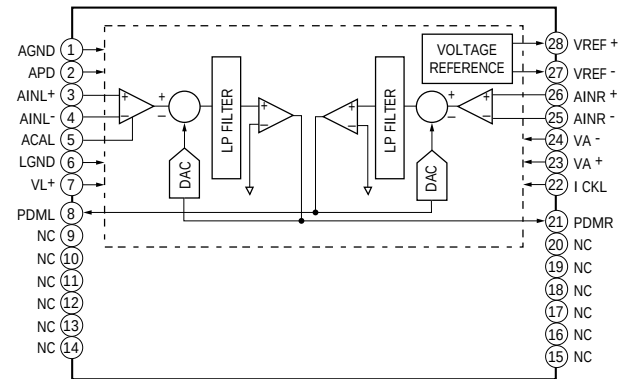


IC309 SN74HC74AN (AUDIO BOARD)

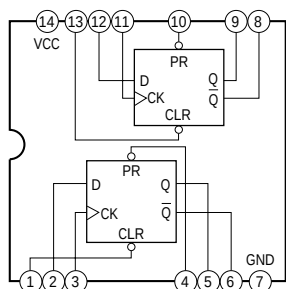


IC312 SN74HC4020ANS (AUDIO BOARD)

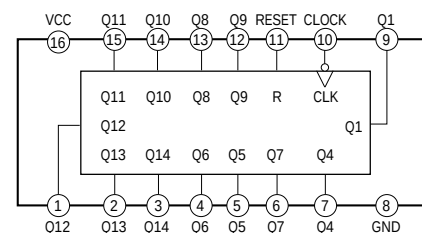

IC314 CXD8505BQ (AUDIO BOARD)

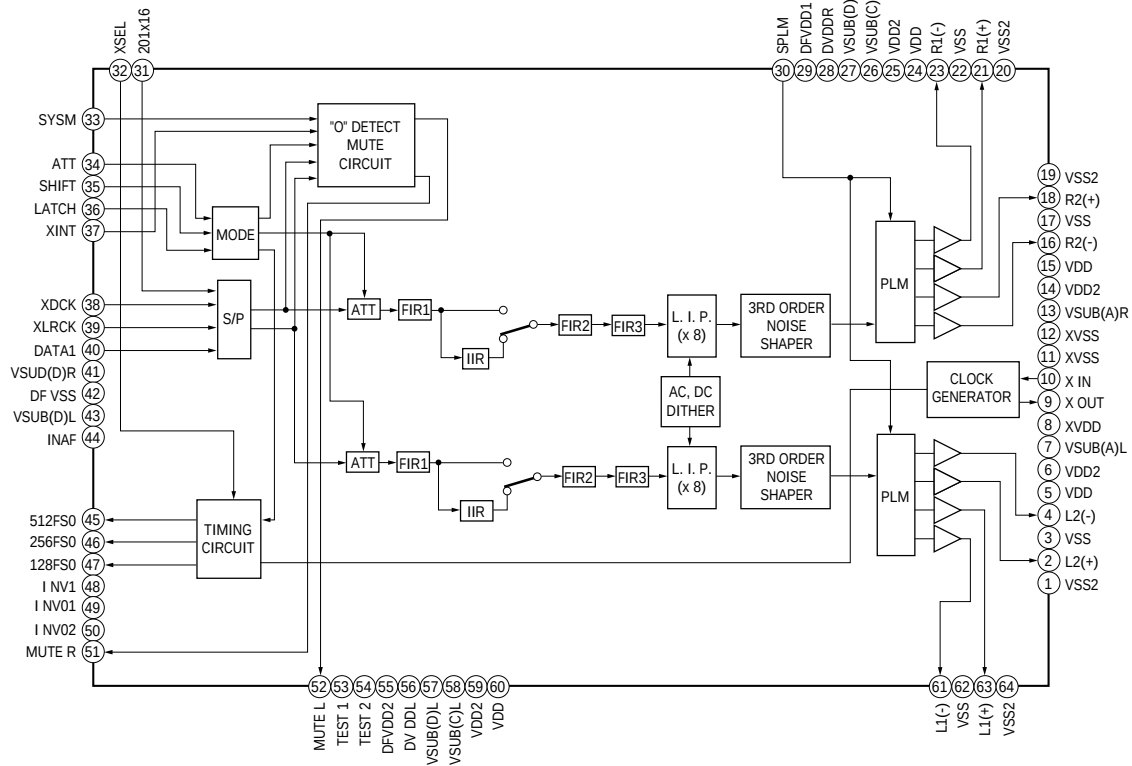


IC315 TC5081AP (AUDIO BOARD)

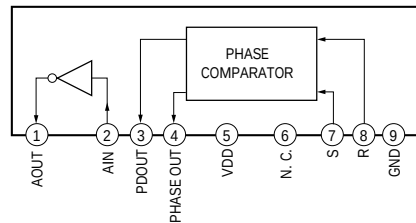


IC504 CXK58257BM (DIGITAL BOARD)


IC804 CXK58257BM (SP BOARD)

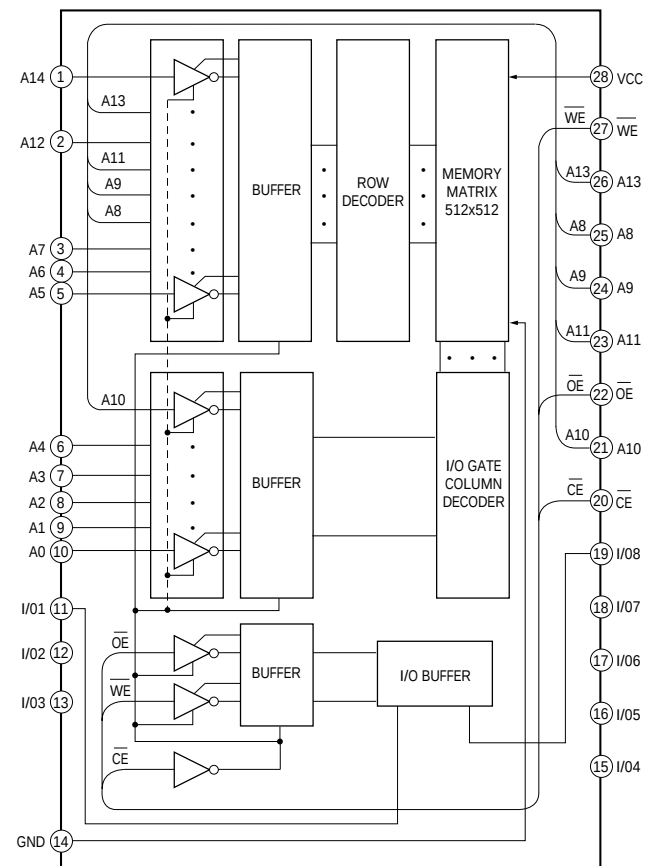


IC505 YM3412B-F (DIGITAL BOARD)

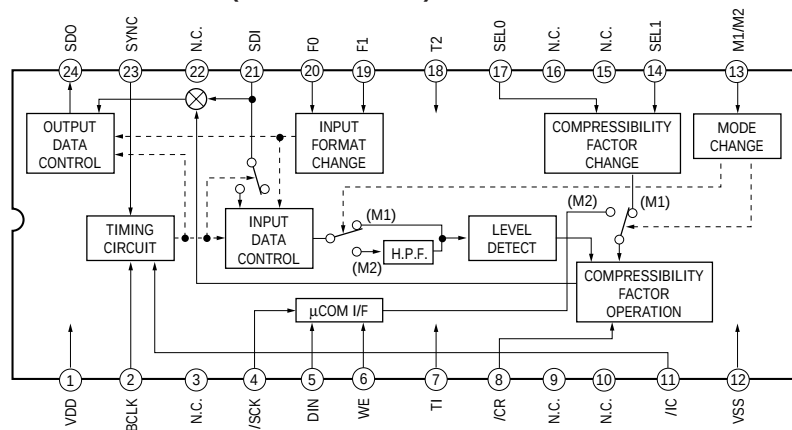


IC511 SN74HC153ANS (DIGITAL BOARD)

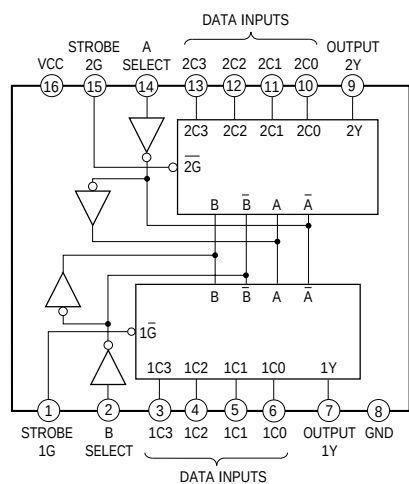


IC512 MC74HC175F (DIGITAL BOARD)

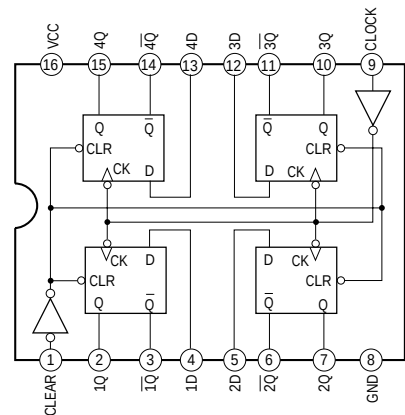


IC516 M51953BFP (DIGITAL BOARD)

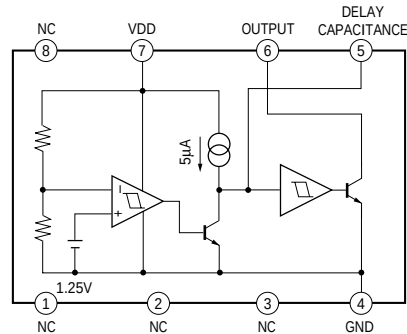


IC517 AT24C01A-10 SC (DIGITAL BOARD)

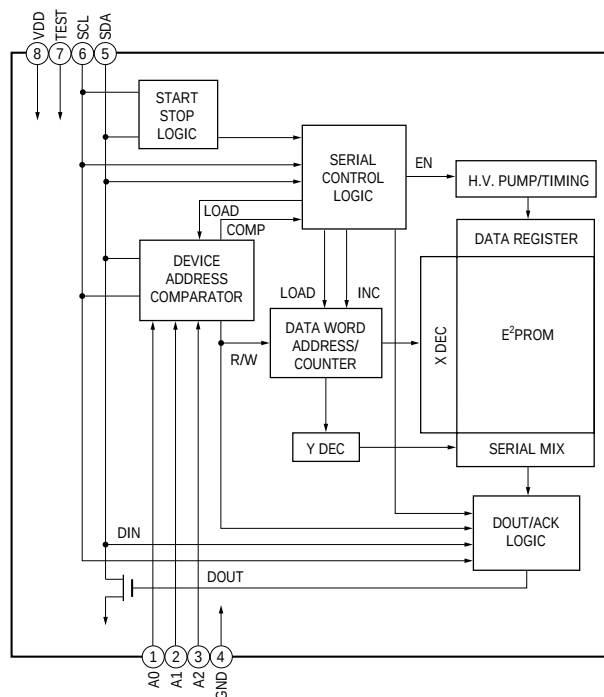


IC518 MSM6782-01-MS (DIGITAL BOARD)

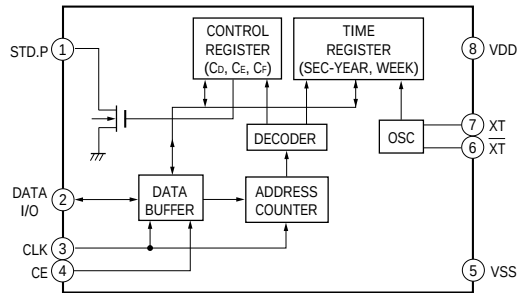


IC523 M54641L (DIGITAL BOARD)

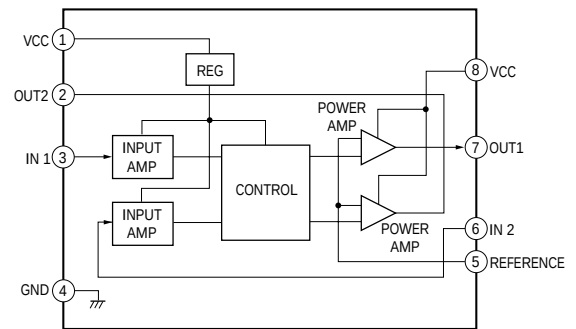

IC702 MSM6338RS (DISPLAY BOARD)

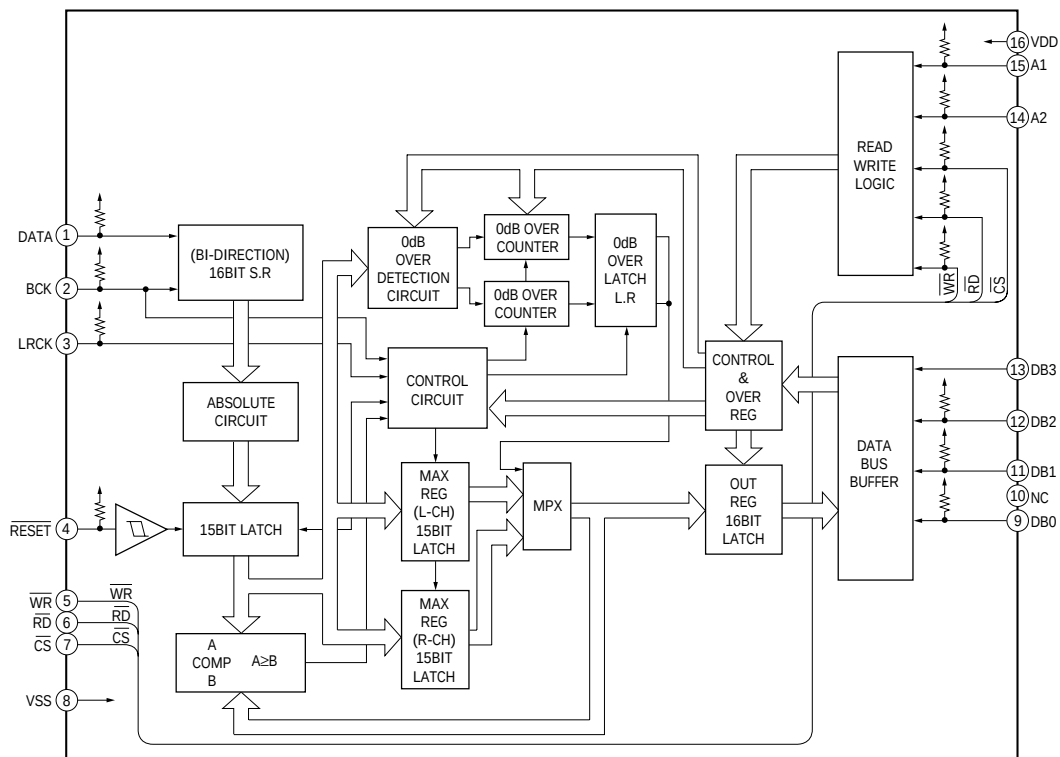


IC703 SN74HC174AN (DISPLAY BOARD)

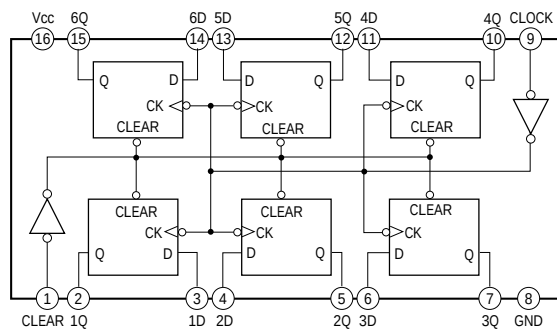


• Semiconductor
Location


Ref. No.	Location
IC1	C-9
IC51	C-2
Q1	D-8
Q2	C-9
Q3	D-10
Q4	D-10
Q5	D-10
Q51	D-4
Q52	D-4
Q53	D-4
Q54	C-4
Q55	D-5

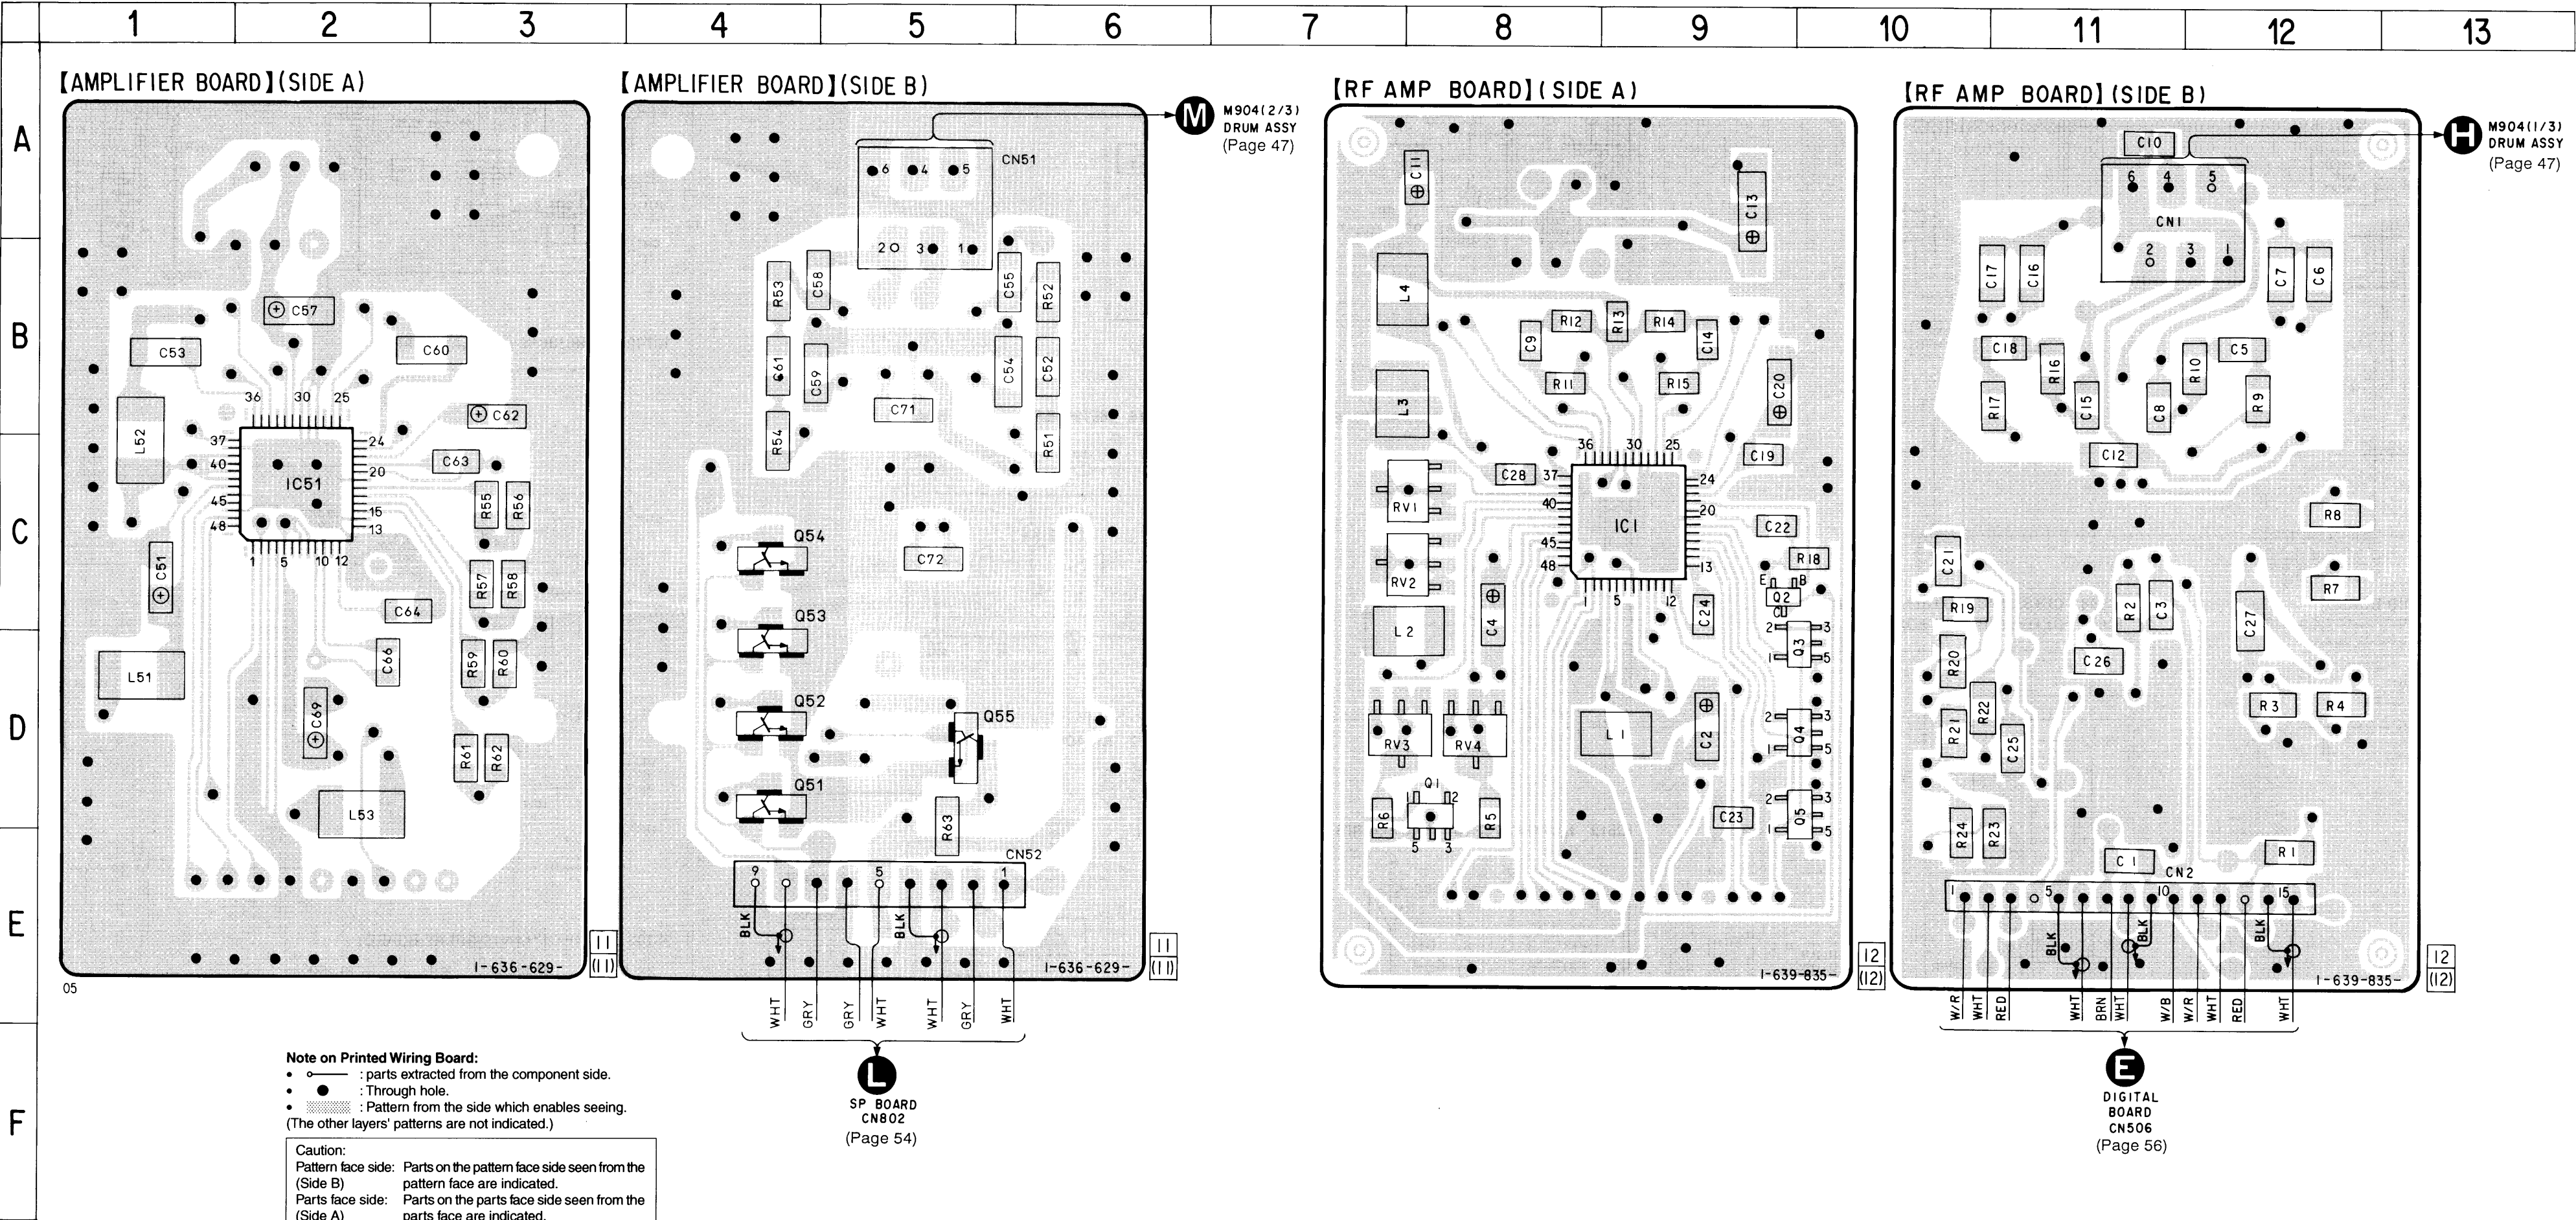

4-3. SCHEMATIC DIAGRAM – RF Section –
• See page 36 for IC Block Diagrams.

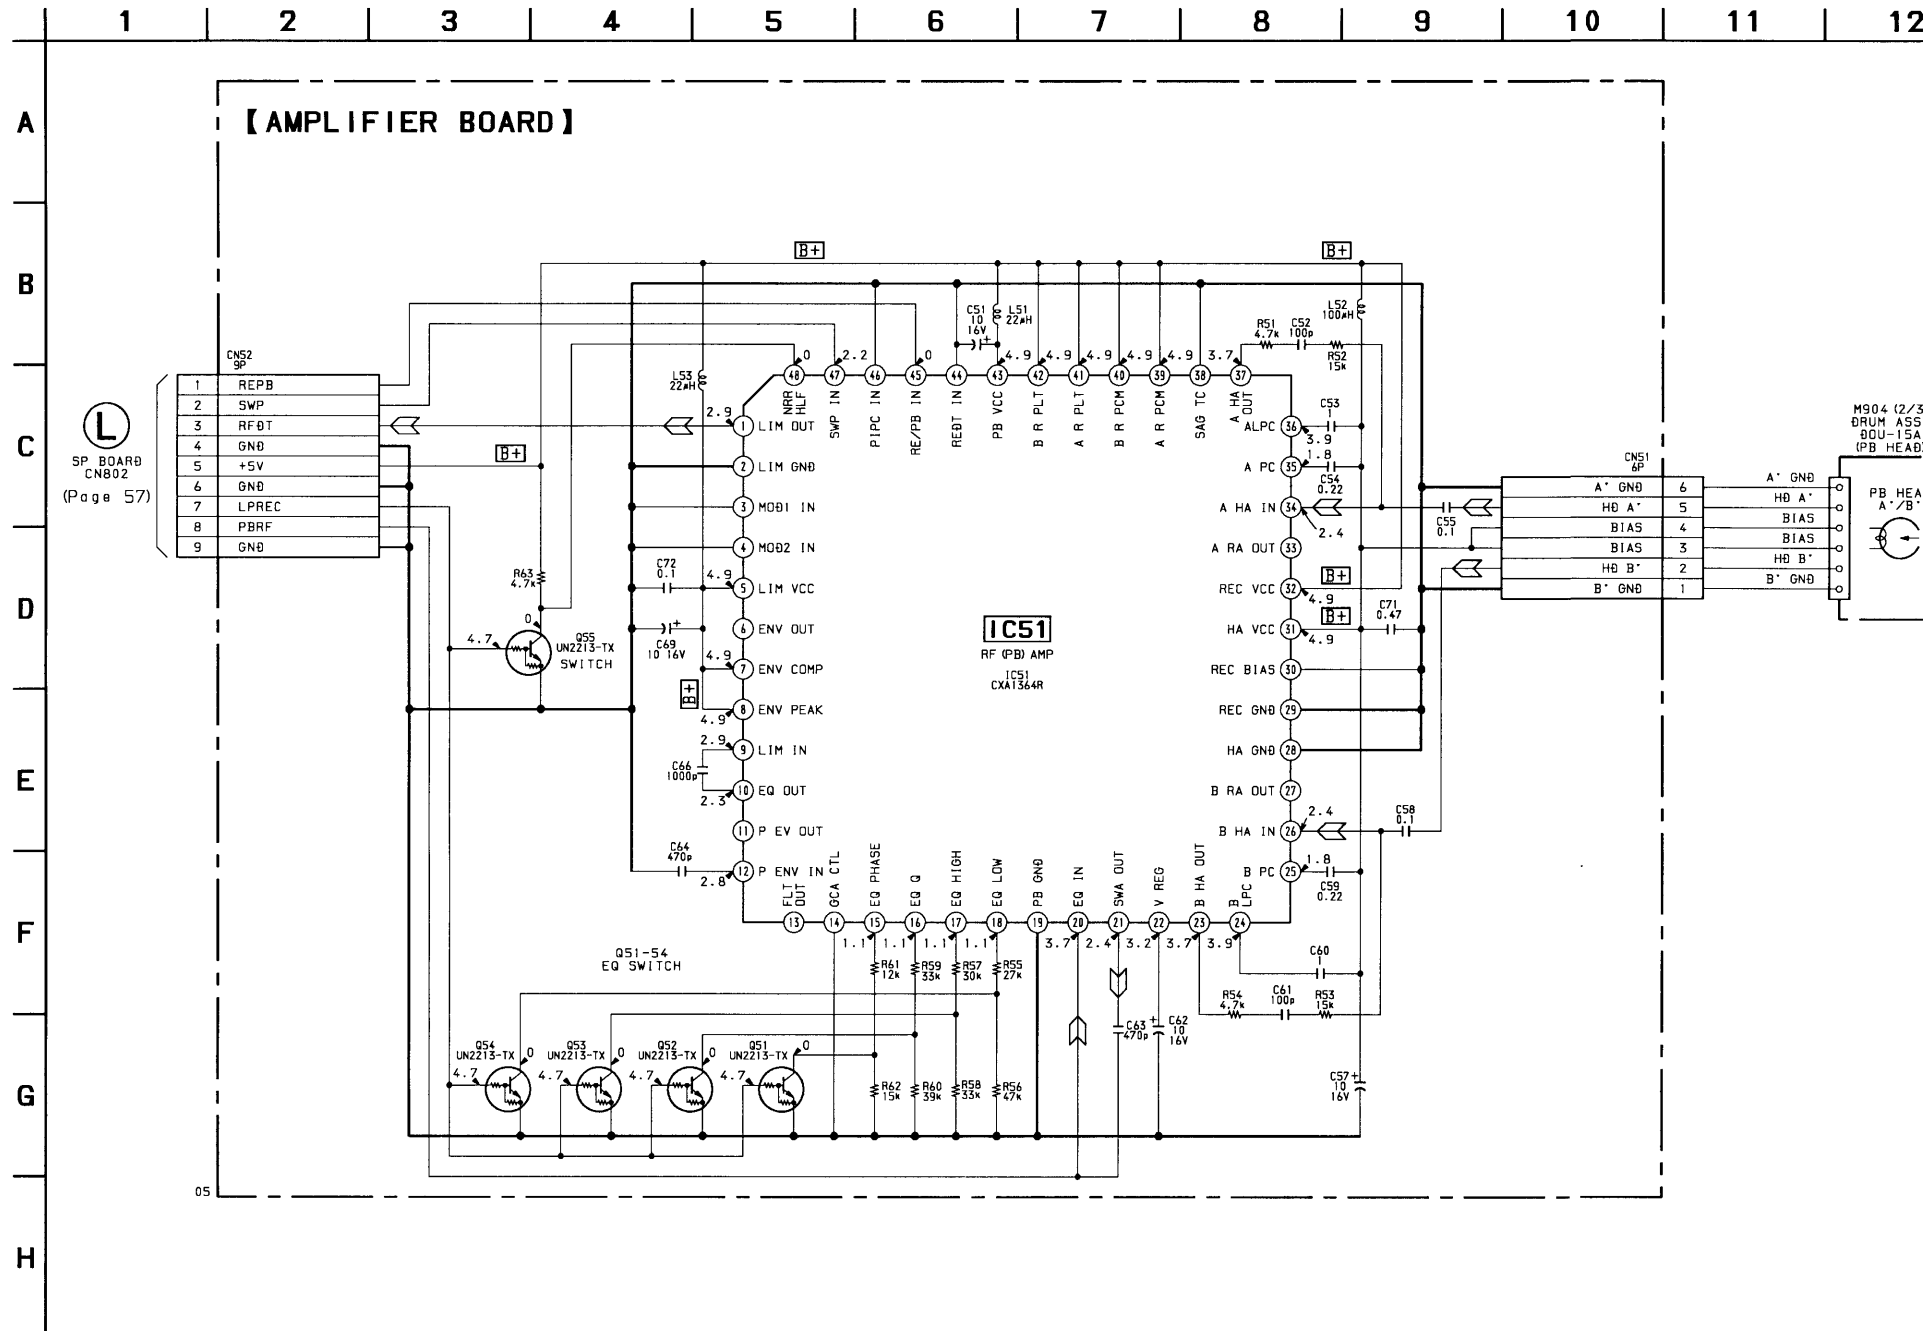

(E)
DIGITAL BOARD
CN506
(Page 59)

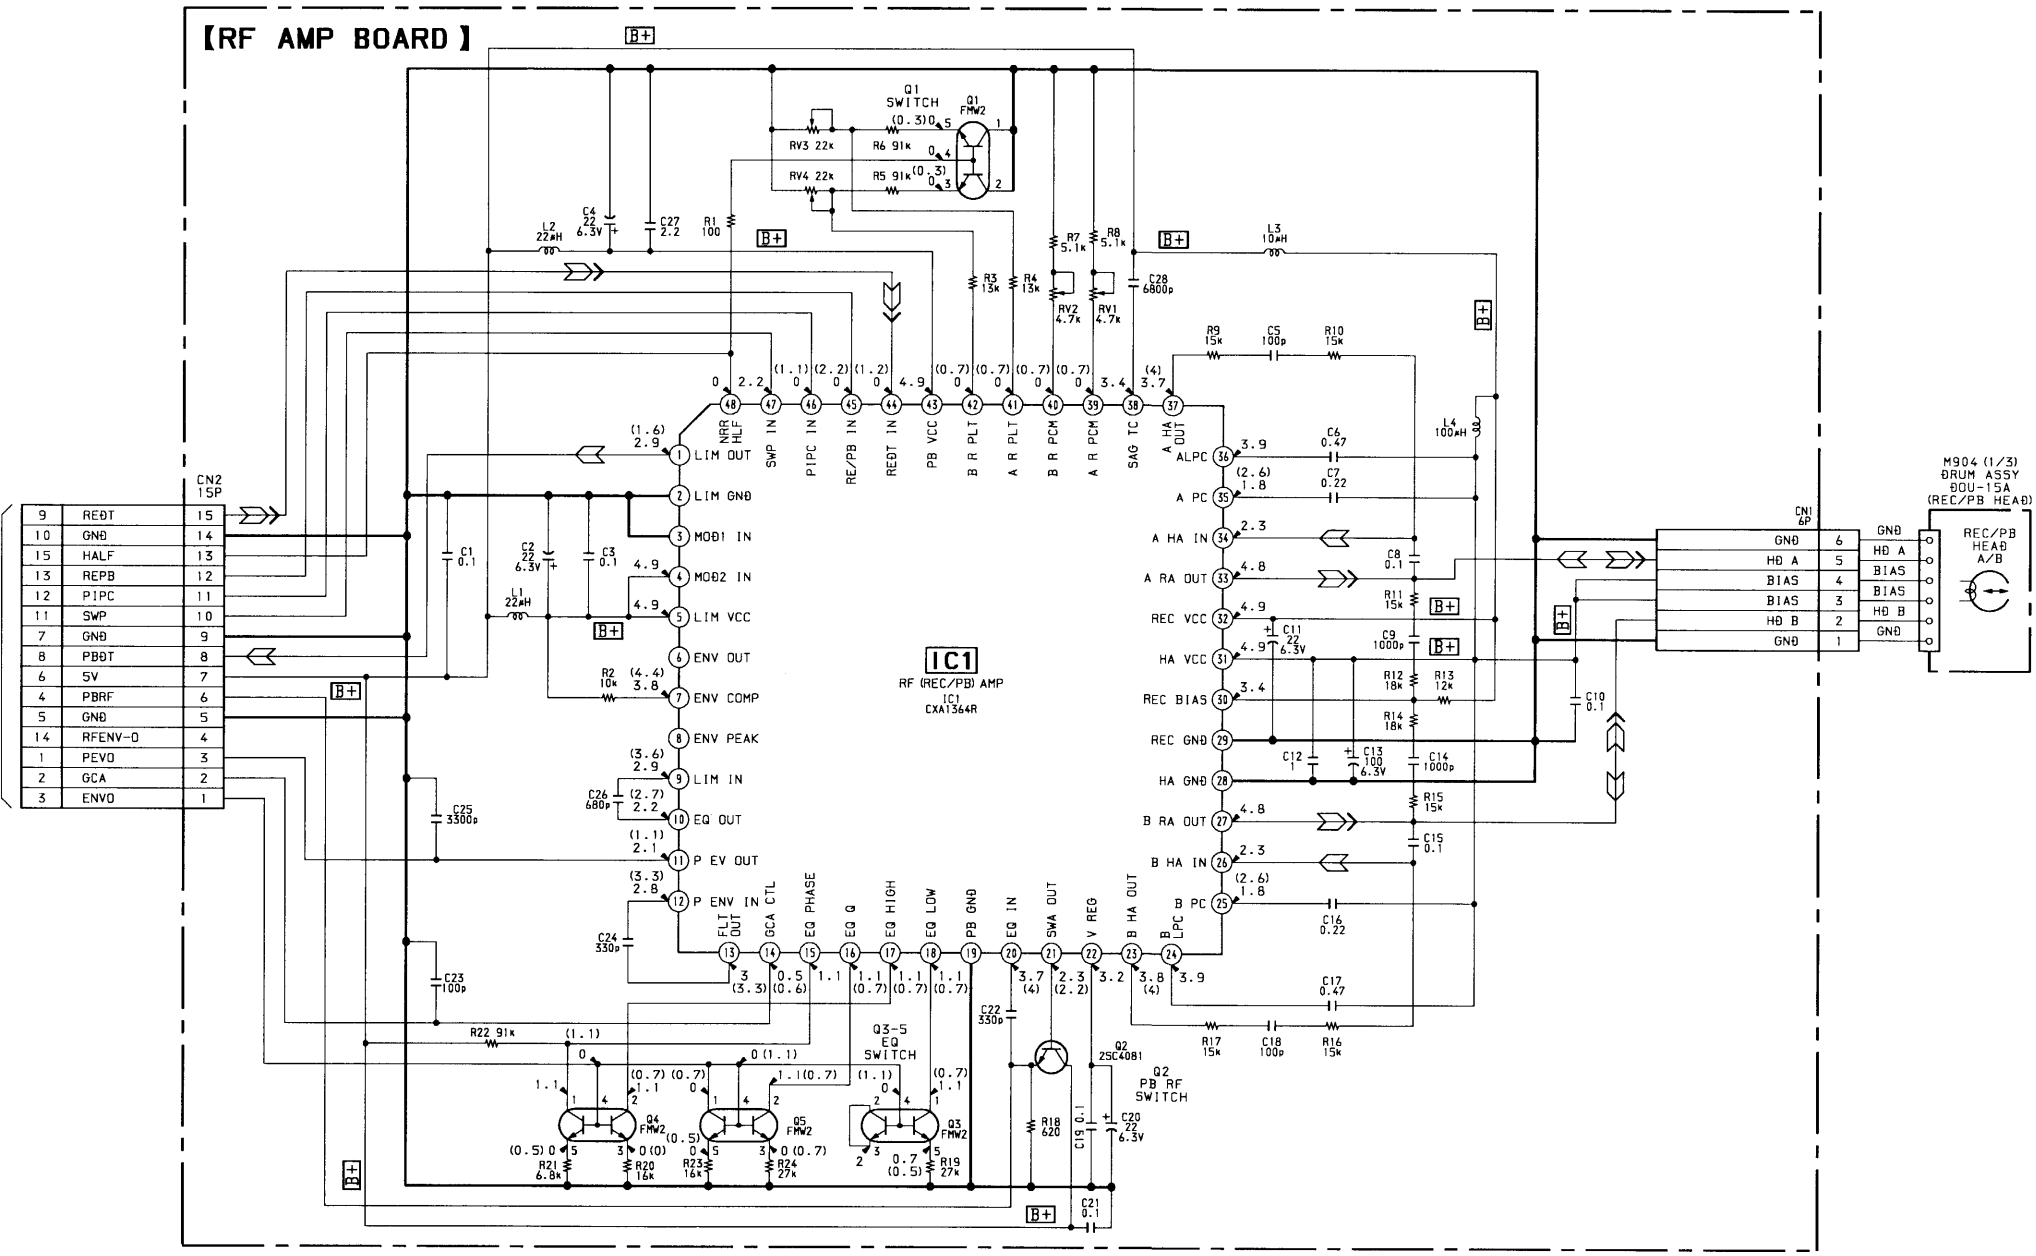


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μpF
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- **[B+]** : B+ Line.
- Voltages are dc with respect to ground under no-signal conditions.
no mark : PLAY
() : REC
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.
- Signal path.
 $\Rightarrow$: PB
 $\Rightarrow\Rightarrow$: REC


• Semiconductor Location

Ref. No.	Location
D2	C-9
D3	D-9
IC1	C-7
IC2	B-8
IC3	B-6
Q1	B-7
Q2	B-7
Q3	C-6
Q950	D-4
Q951	G-11

Note on Printed Wiring Board:
• — : parts extracted from the component side.
• : Pattern from the side which enables seeing.

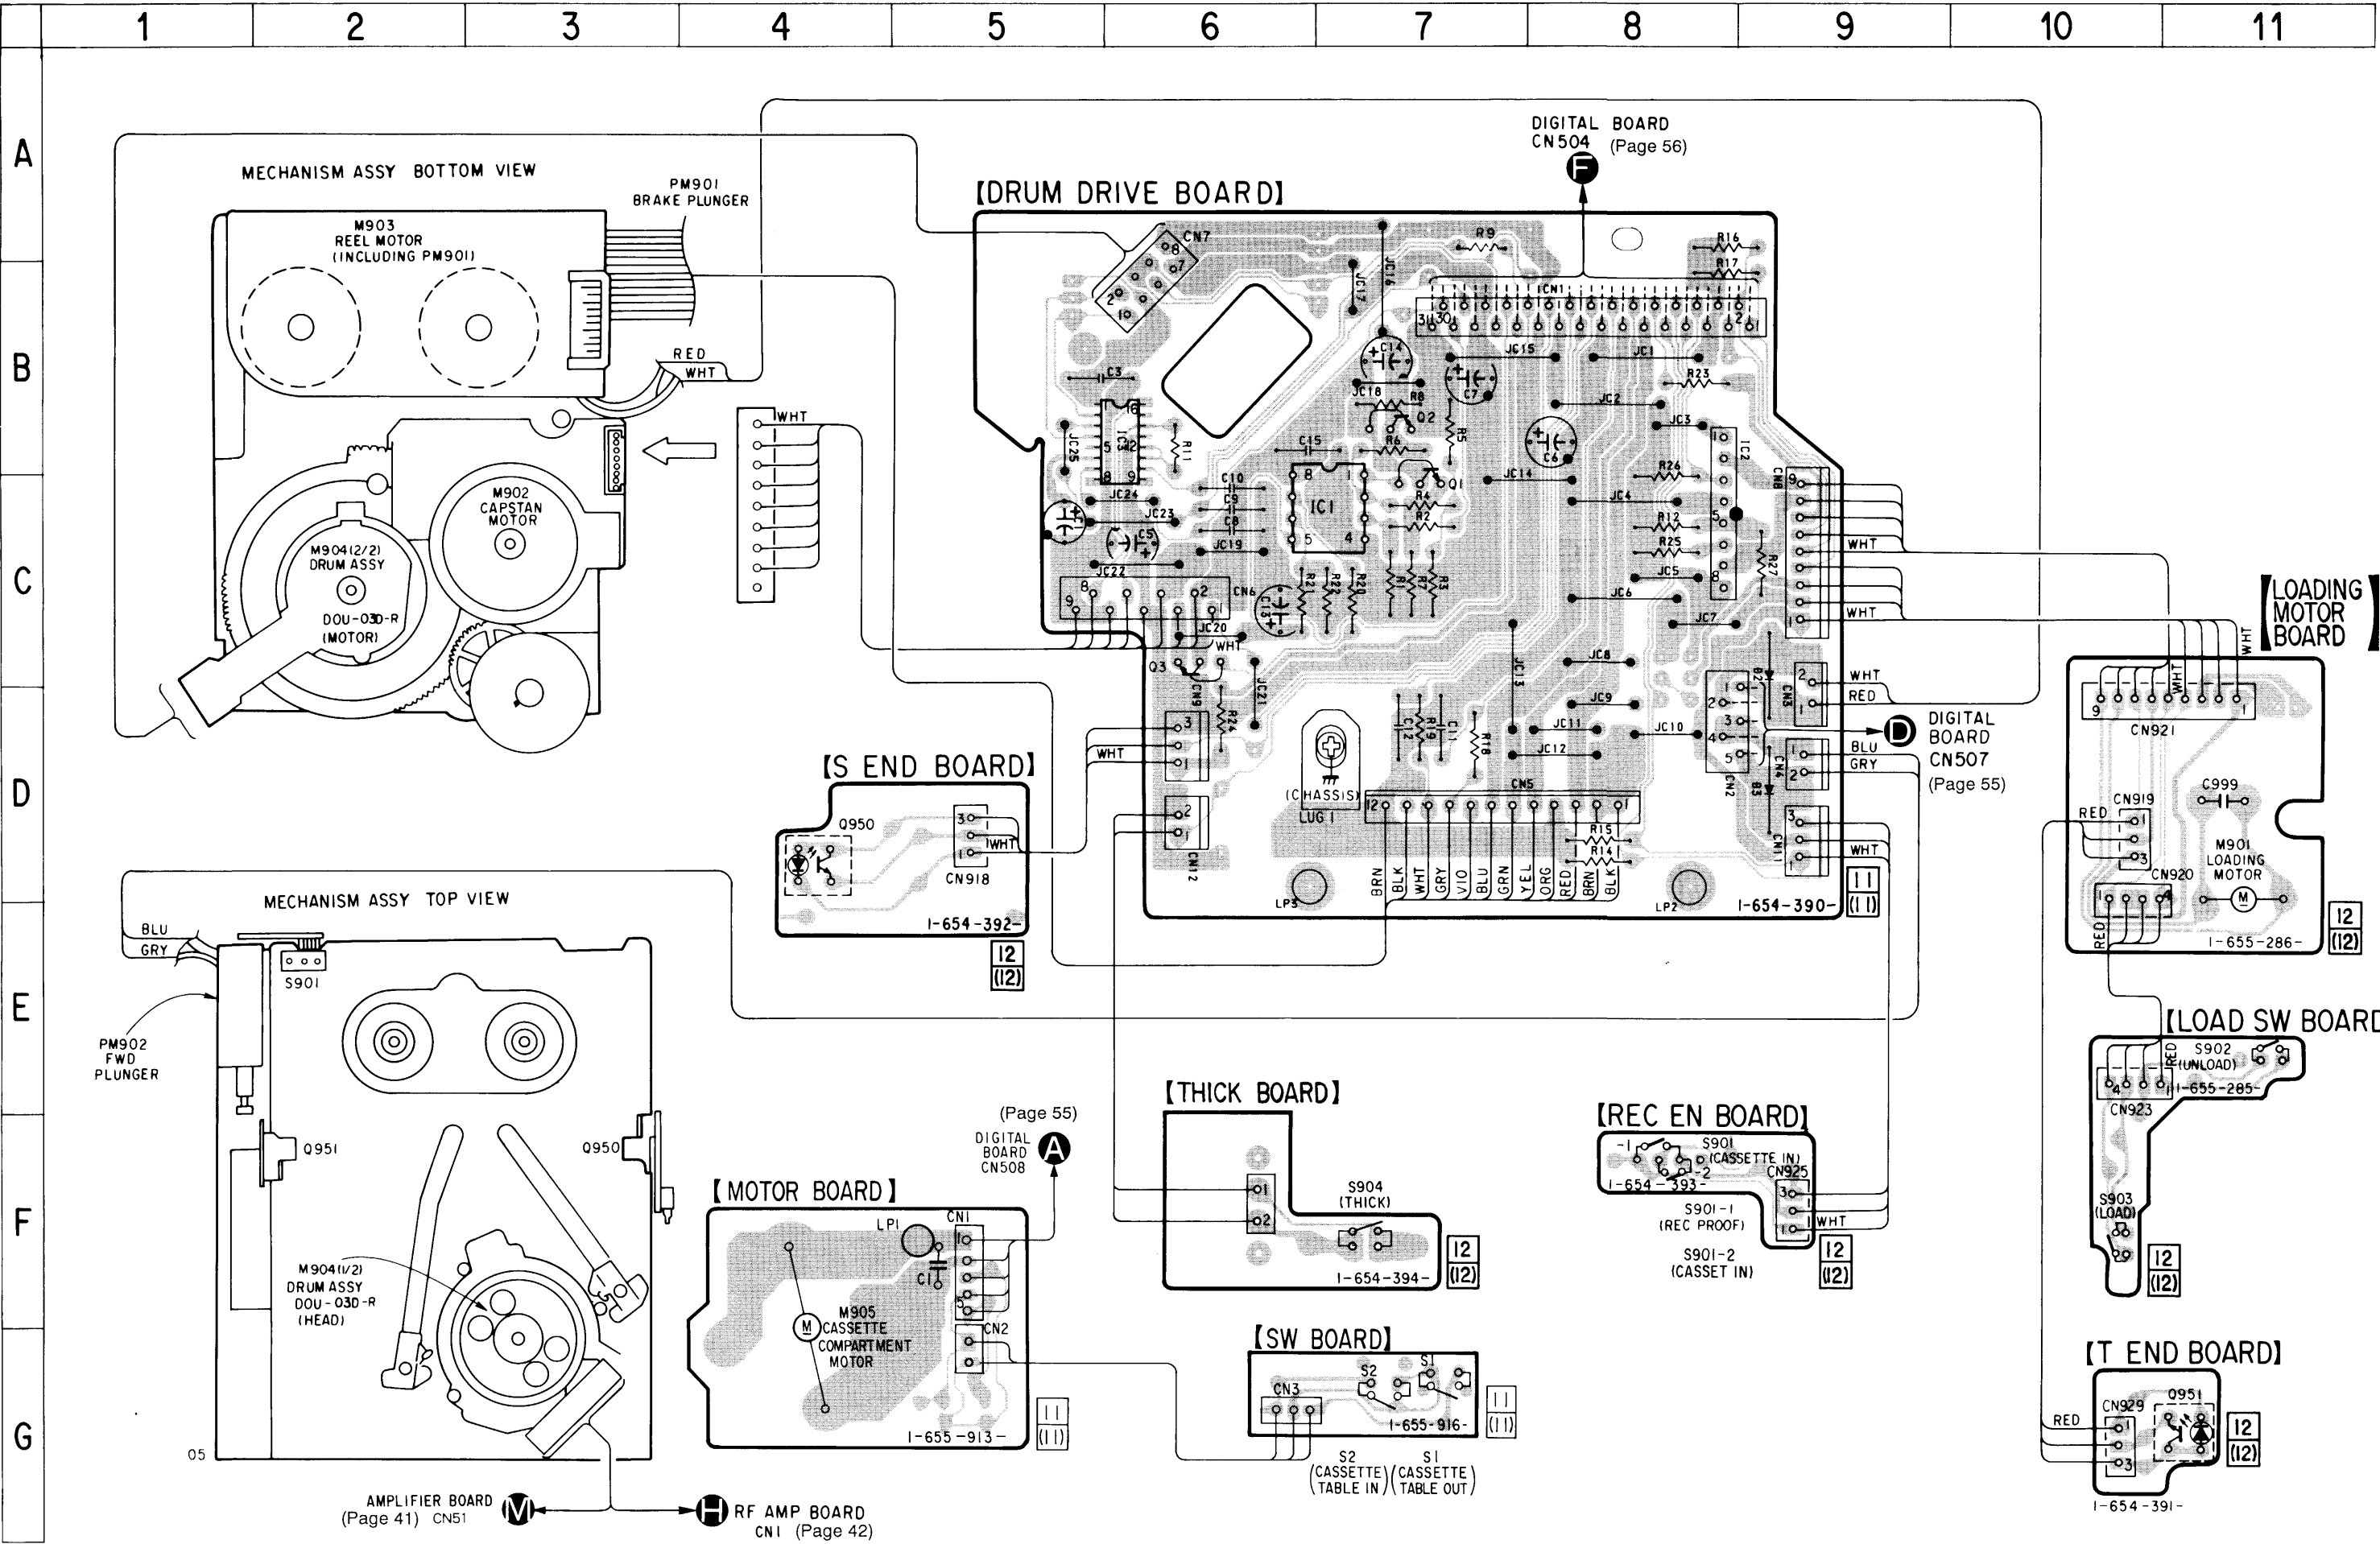

4-5. SCHEMATIC DIAGRAM - MD Section -
• See page 36 for IC Block Diagrams.

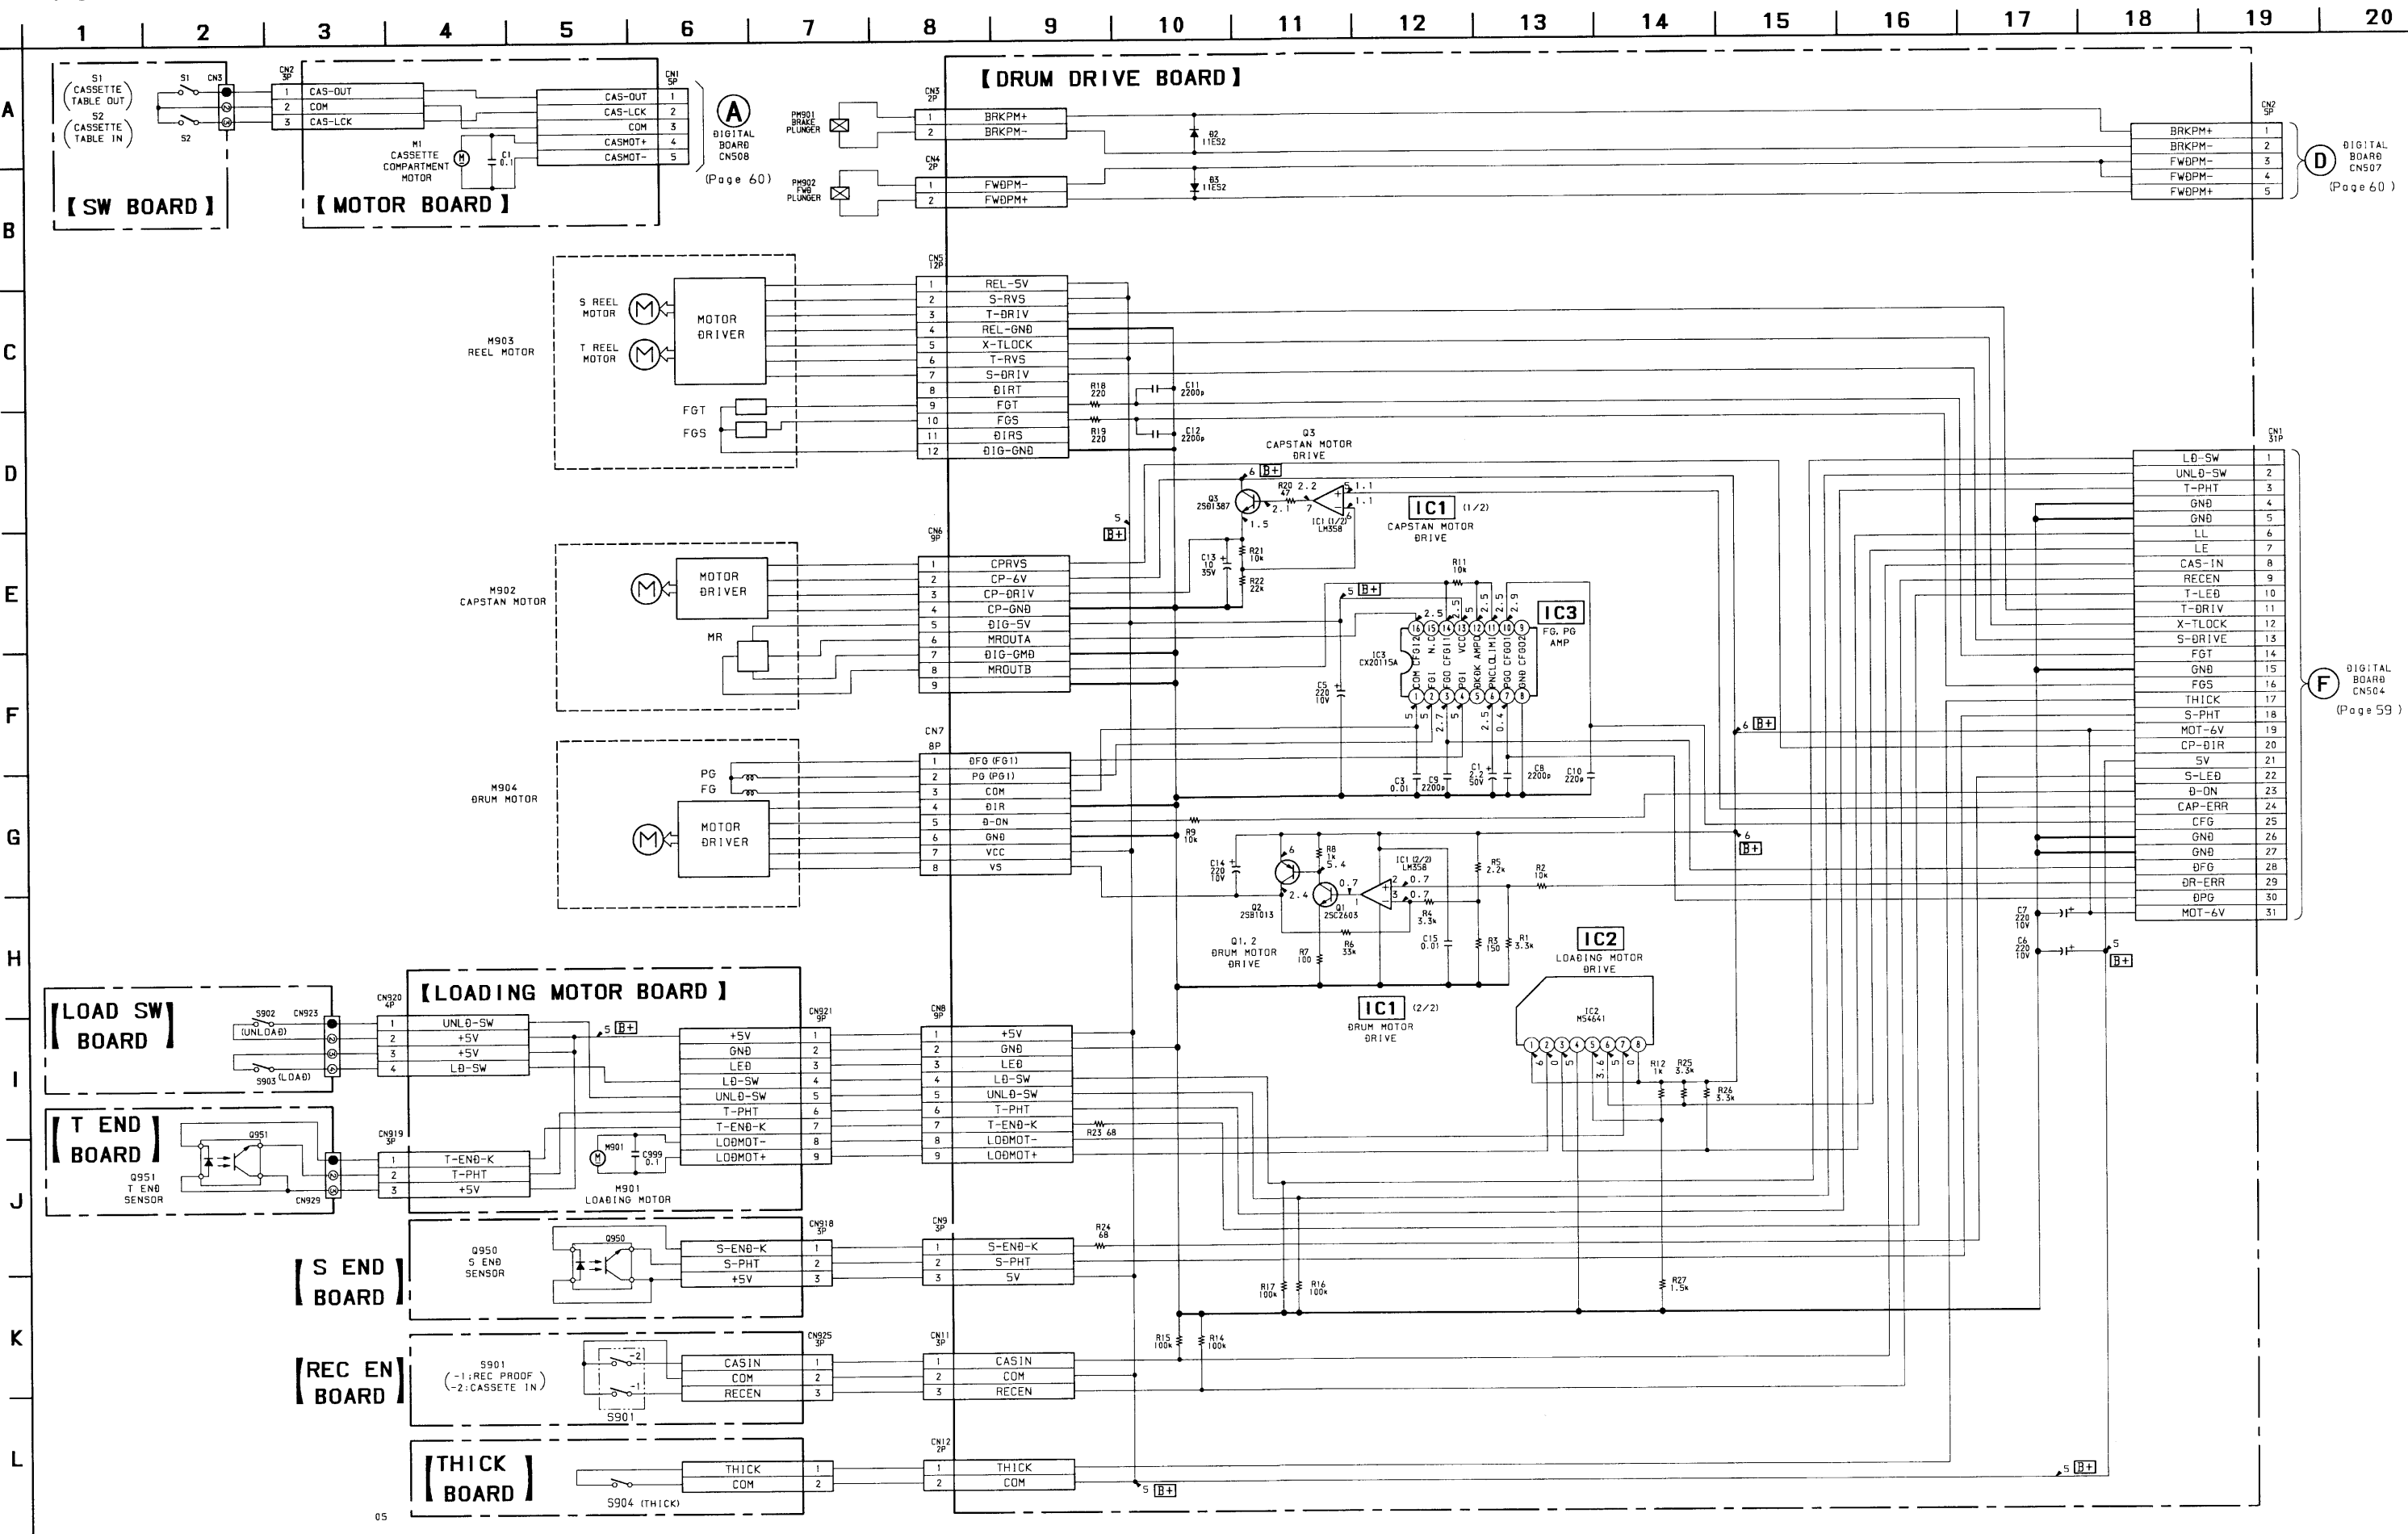


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- **[B+]** : B+ Line.
- Voltages are dc with respect to ground under no-signal conditions.
- no mark : PLAY
- Voltages are taken with a VOM (Input impedance 10 $\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D501	C-10	IC805	E-3
D502	C-10	IC901	E-1
D503	B-11	IC902	F-1
D504	B-12		
D505	C-12	Q501	C-11
D506	C-12	Q502	B-11
D507	D-12	Q503	B-11
D508	C-8	Q504	B-12
D509	C-8	Q505	C-12
D510	F-17	Q506	C-12
D511	F-16	Q507	C-12
D512	F-16	Q508	C-12
D513	E-14	Q509	C-12
		Q510	B-12
IC501	E-16	Q511	B-13
IC502	C-16	Q512	D-13
IC503	E-11	Q513	D-14
IC504	F-10	Q514	D-14
IC505	F-9	Q515	C-13
IC508	E-8	Q516	C-14
IC509	E-8	Q517	C-14
IC510	C-8	Q518	C-17
IC511	E-9	Q519	C-17
IC512	F-10	Q520	E-14
IC513	F-14	Q521	E-13
IC514	F-17	Q522	E-12
IC515	F-17	Q523	E-12
IC516	E-17	Q524	D-11
IC517	D-17	Q801	C-3
IC518	F-16	Q802	B-2
IC519	F-10	Q803	C-3
IC520	C-14	Q804	C-3
IC521	B-15	Q805	C-3
IC522	B-13	Q806	C-3
IC523	D-12	Q807	B-2
IC801	C-6	Q808	F-5
IC802	D-3	Q810	F-5
IC803	F-4	Q901	G-1
IC804	G-3		


Note on Printed Wiring Board:
• : parts extracted from the component side.
• : Through hole.
• : Pattern from the side which enables seeing.

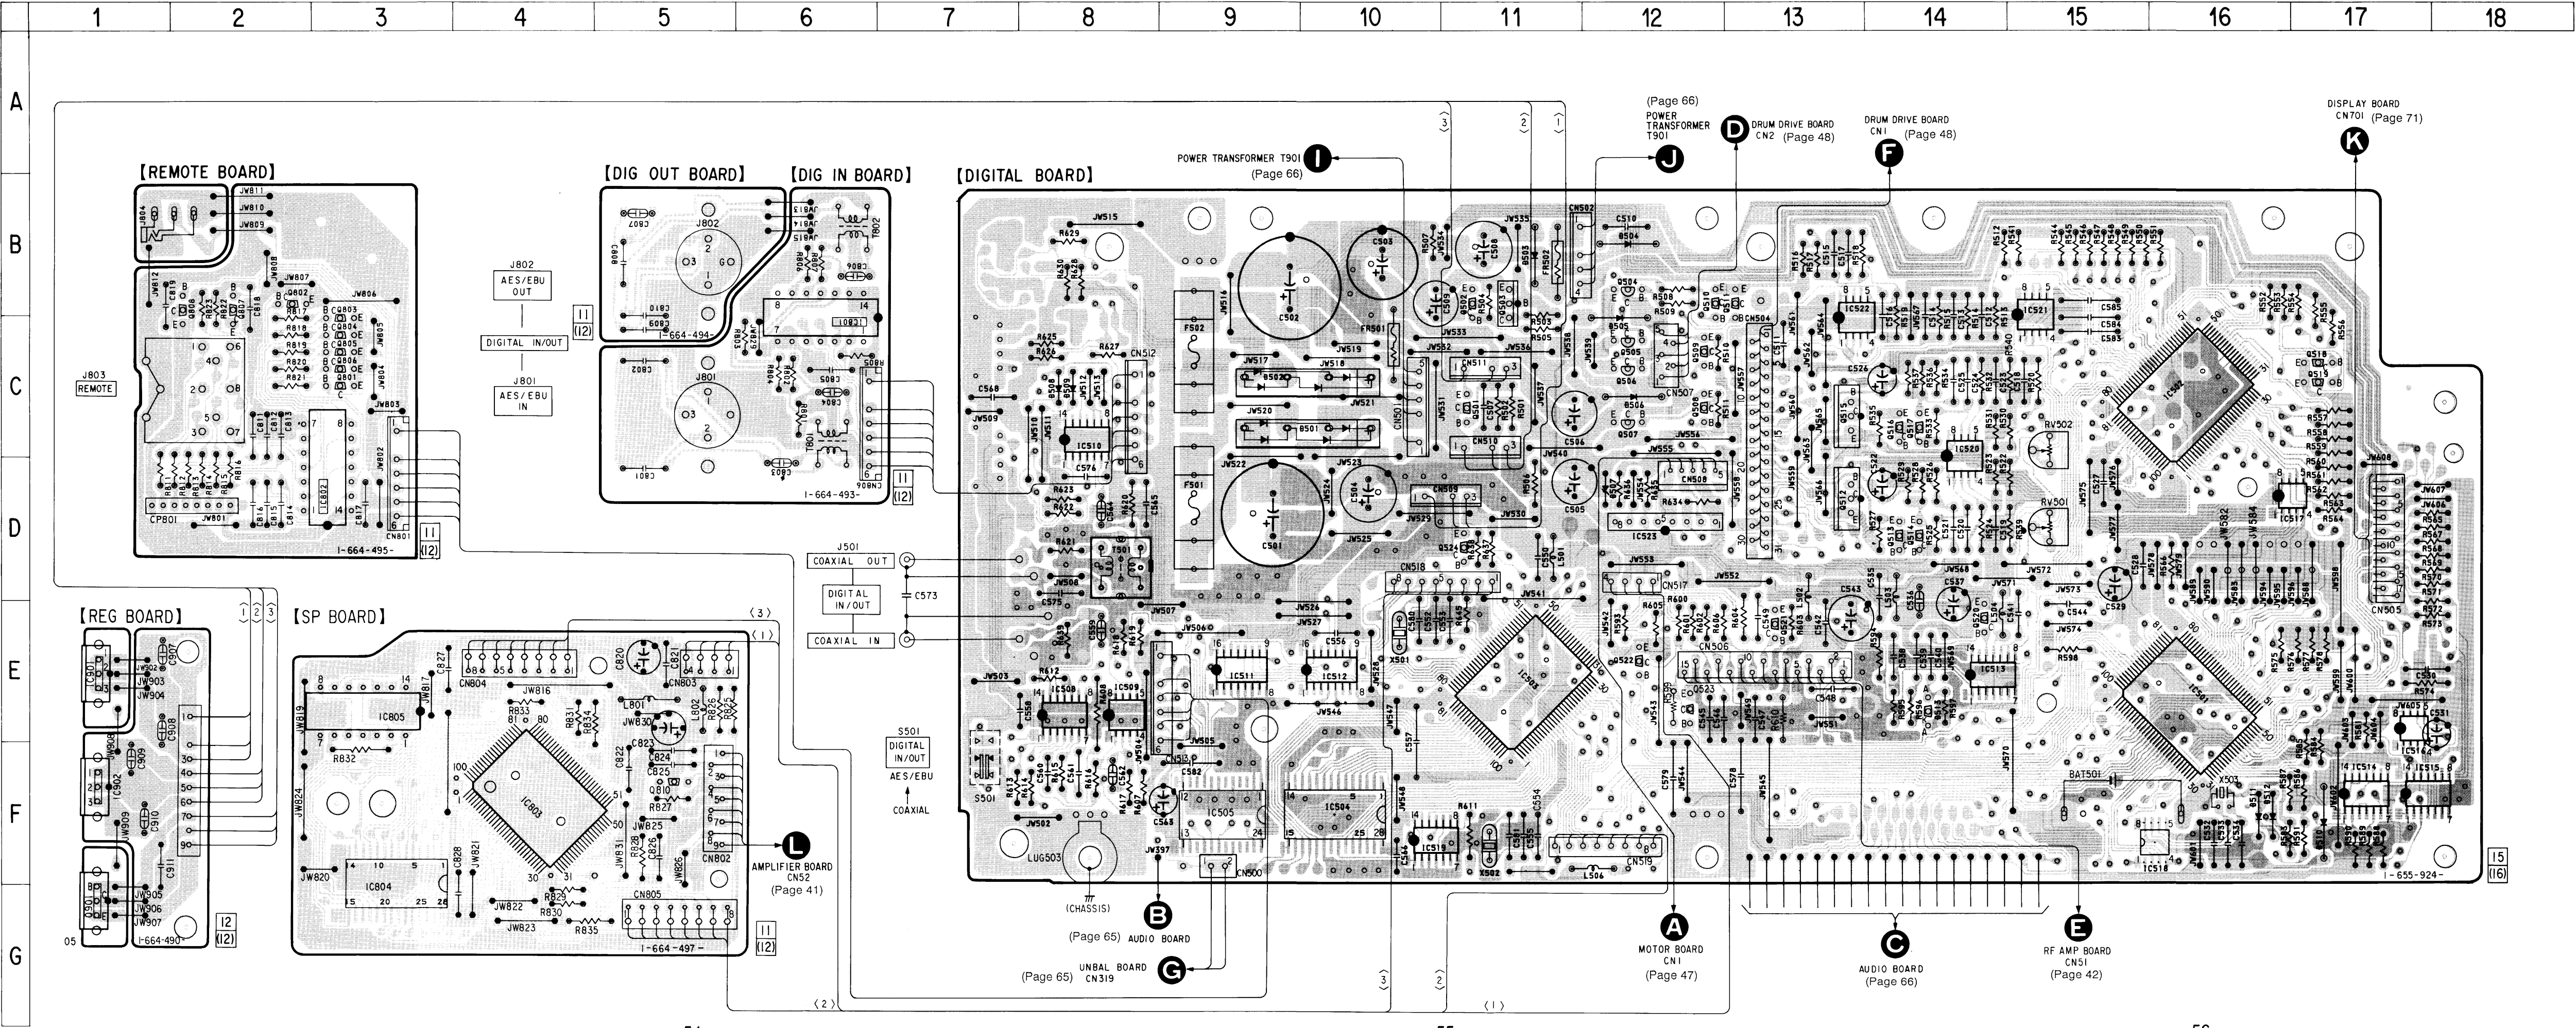


4-7. SCHEMATIC DIAGRAM – DIGITAL Section –
 • See page 28 for Waveforms. • See page 37 to 39 for IC Block Diagrams.

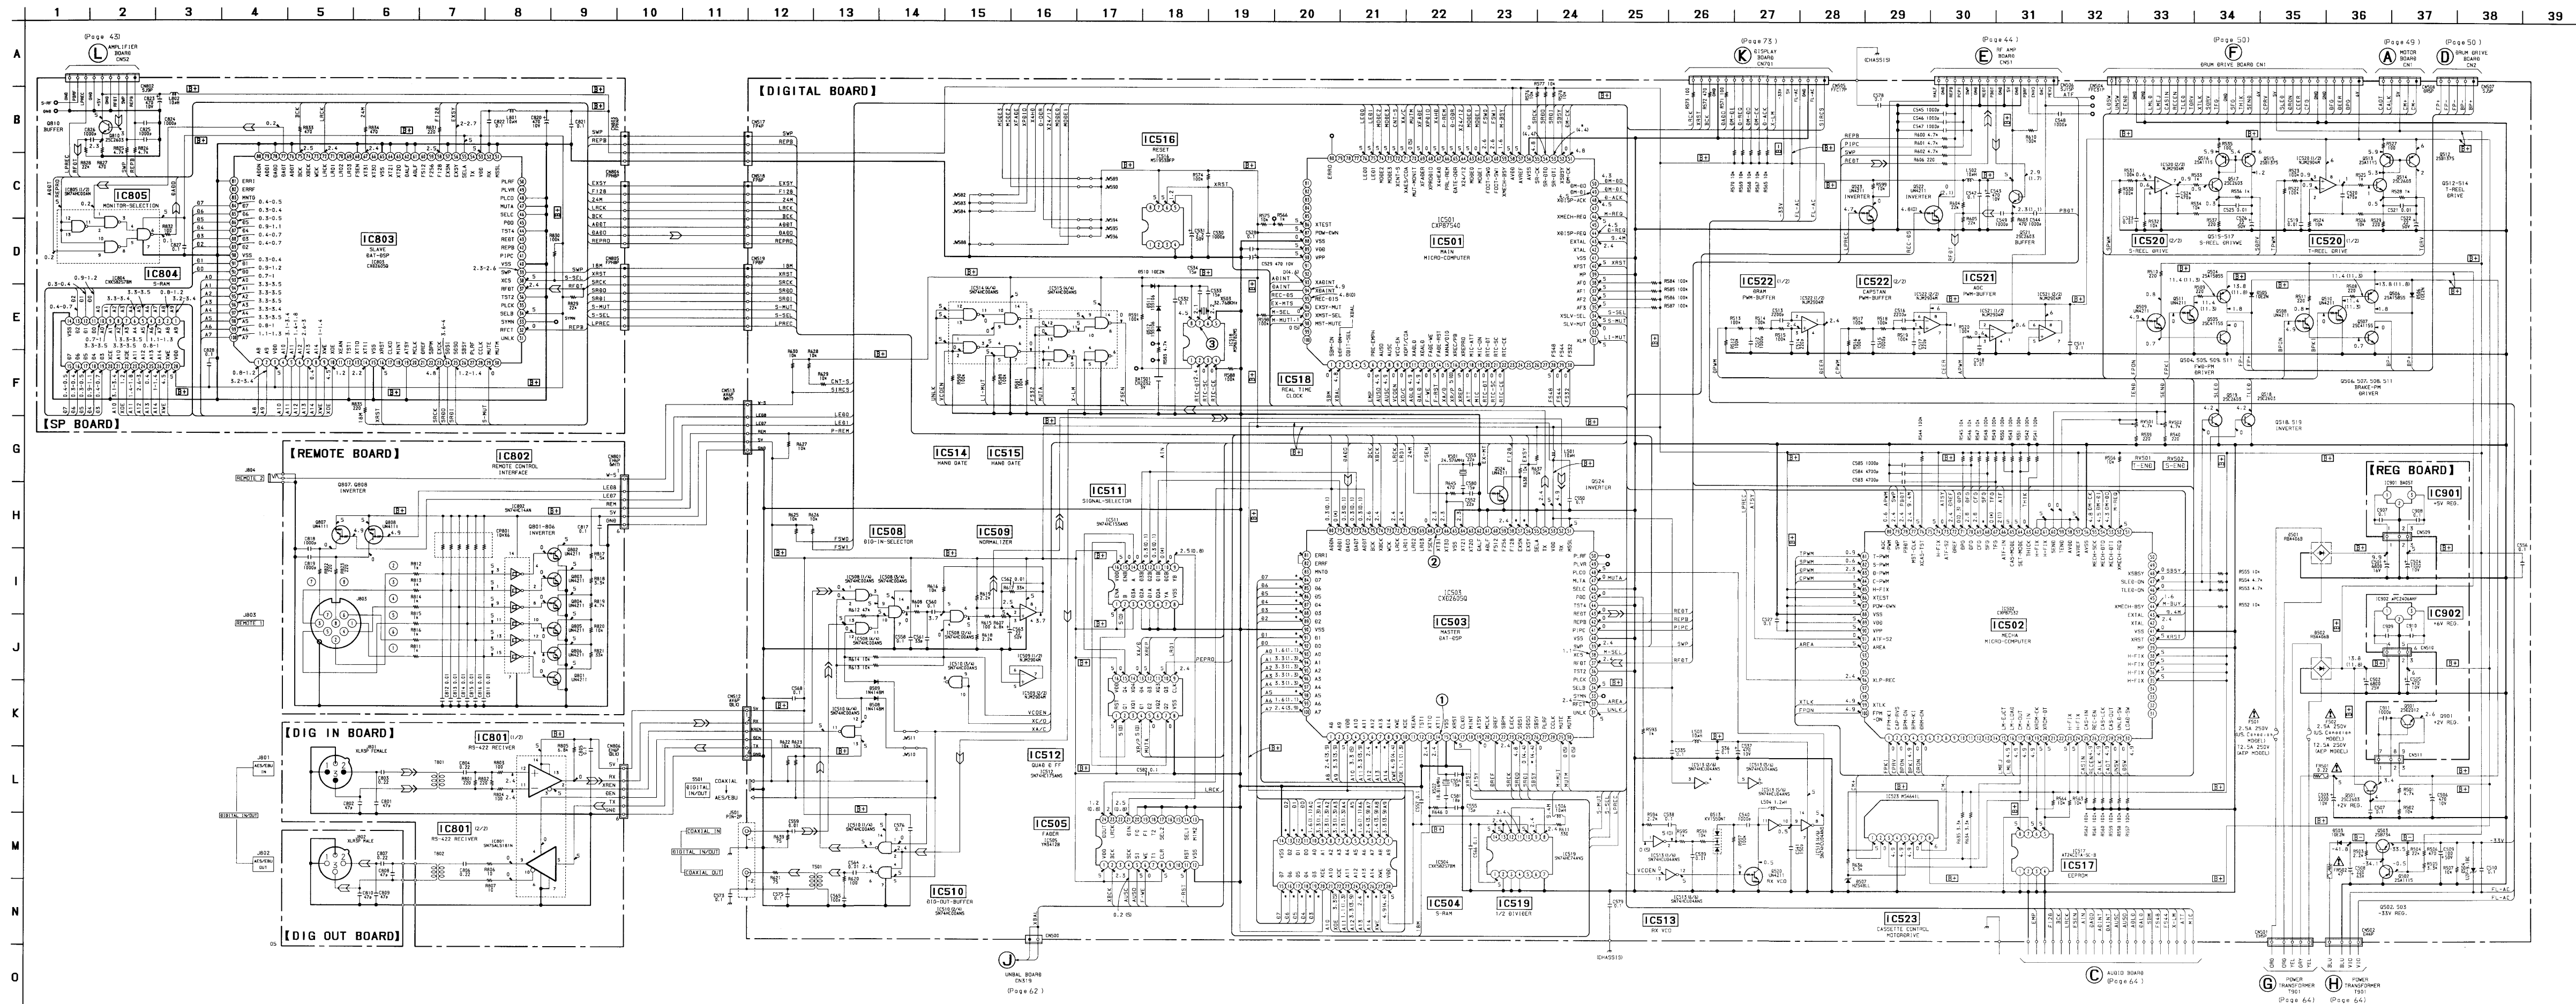

4-8. SCHEMATIC DIAGRAM - AUDIO Section -
• See page 28 for Waveforms. • See page 36, 37 for IC Block Diagrams.

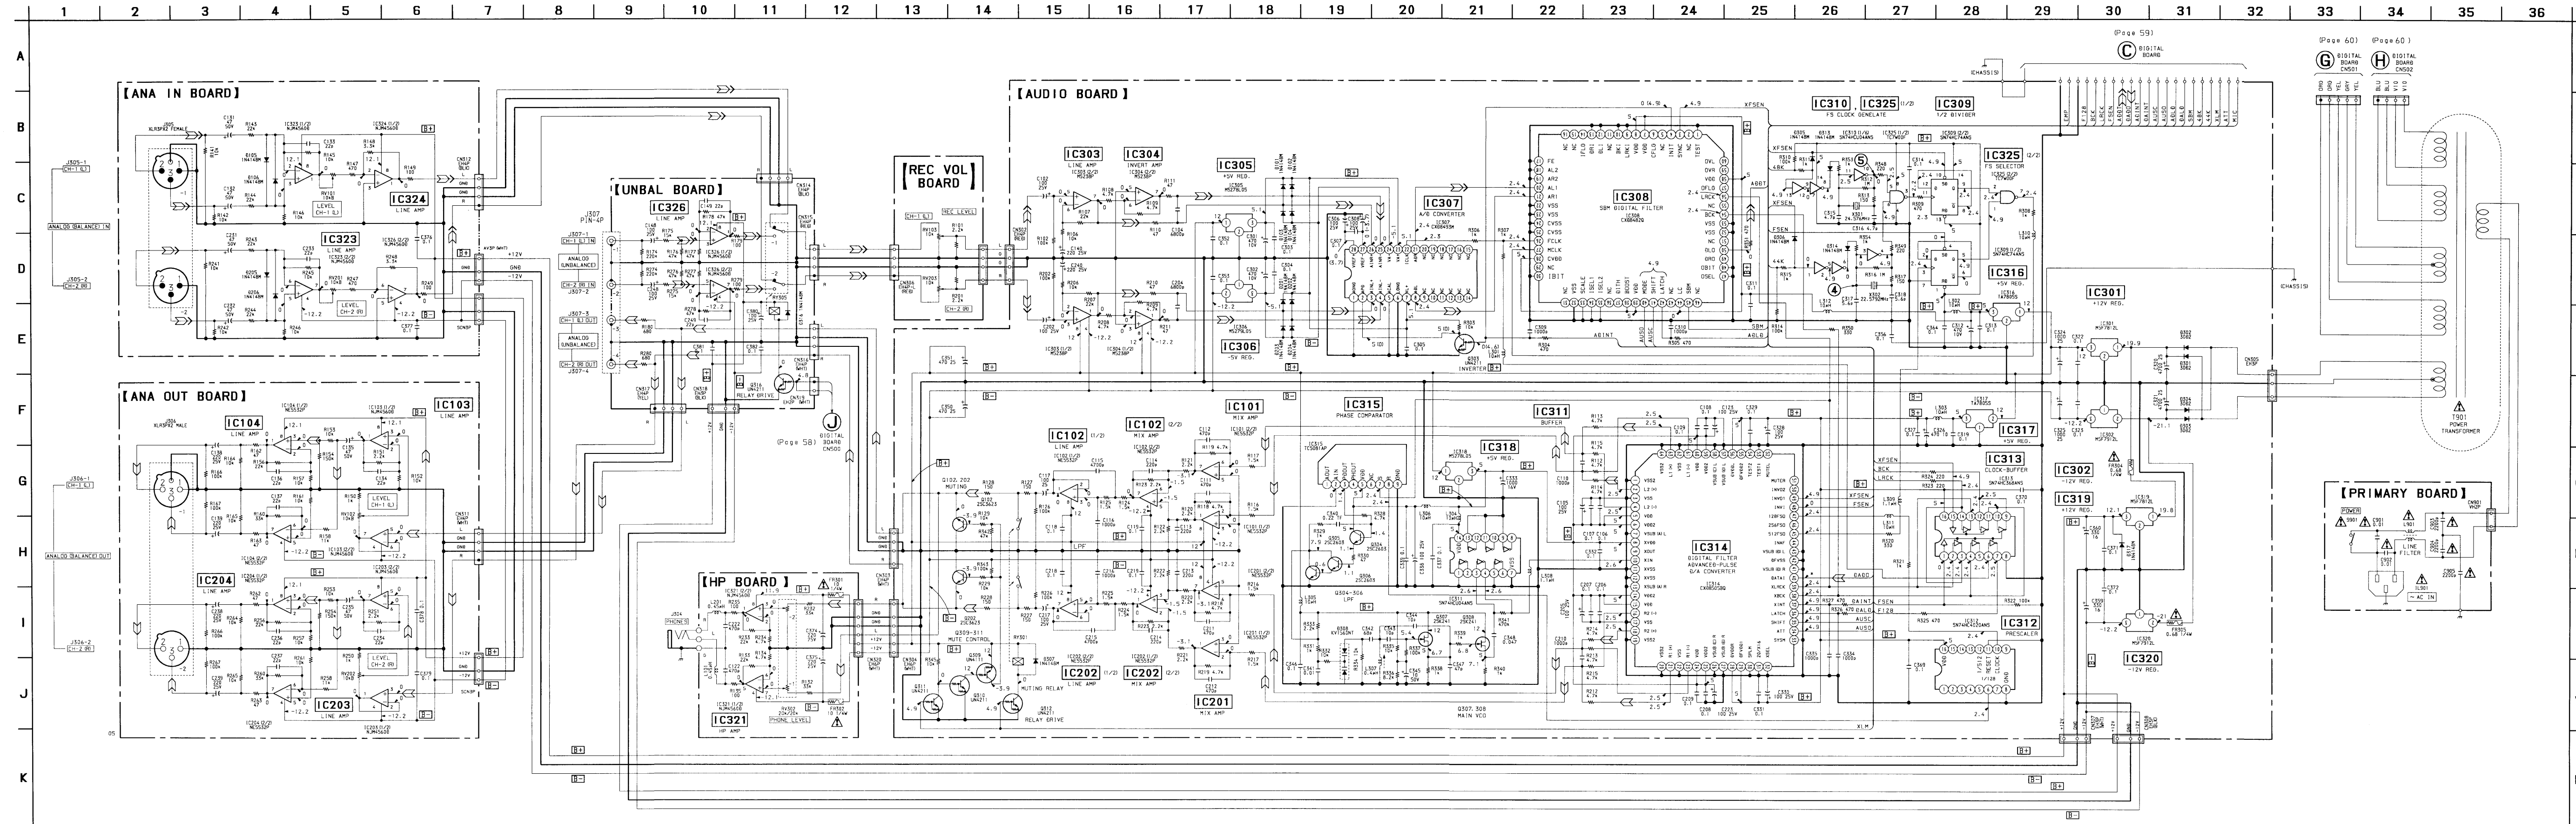

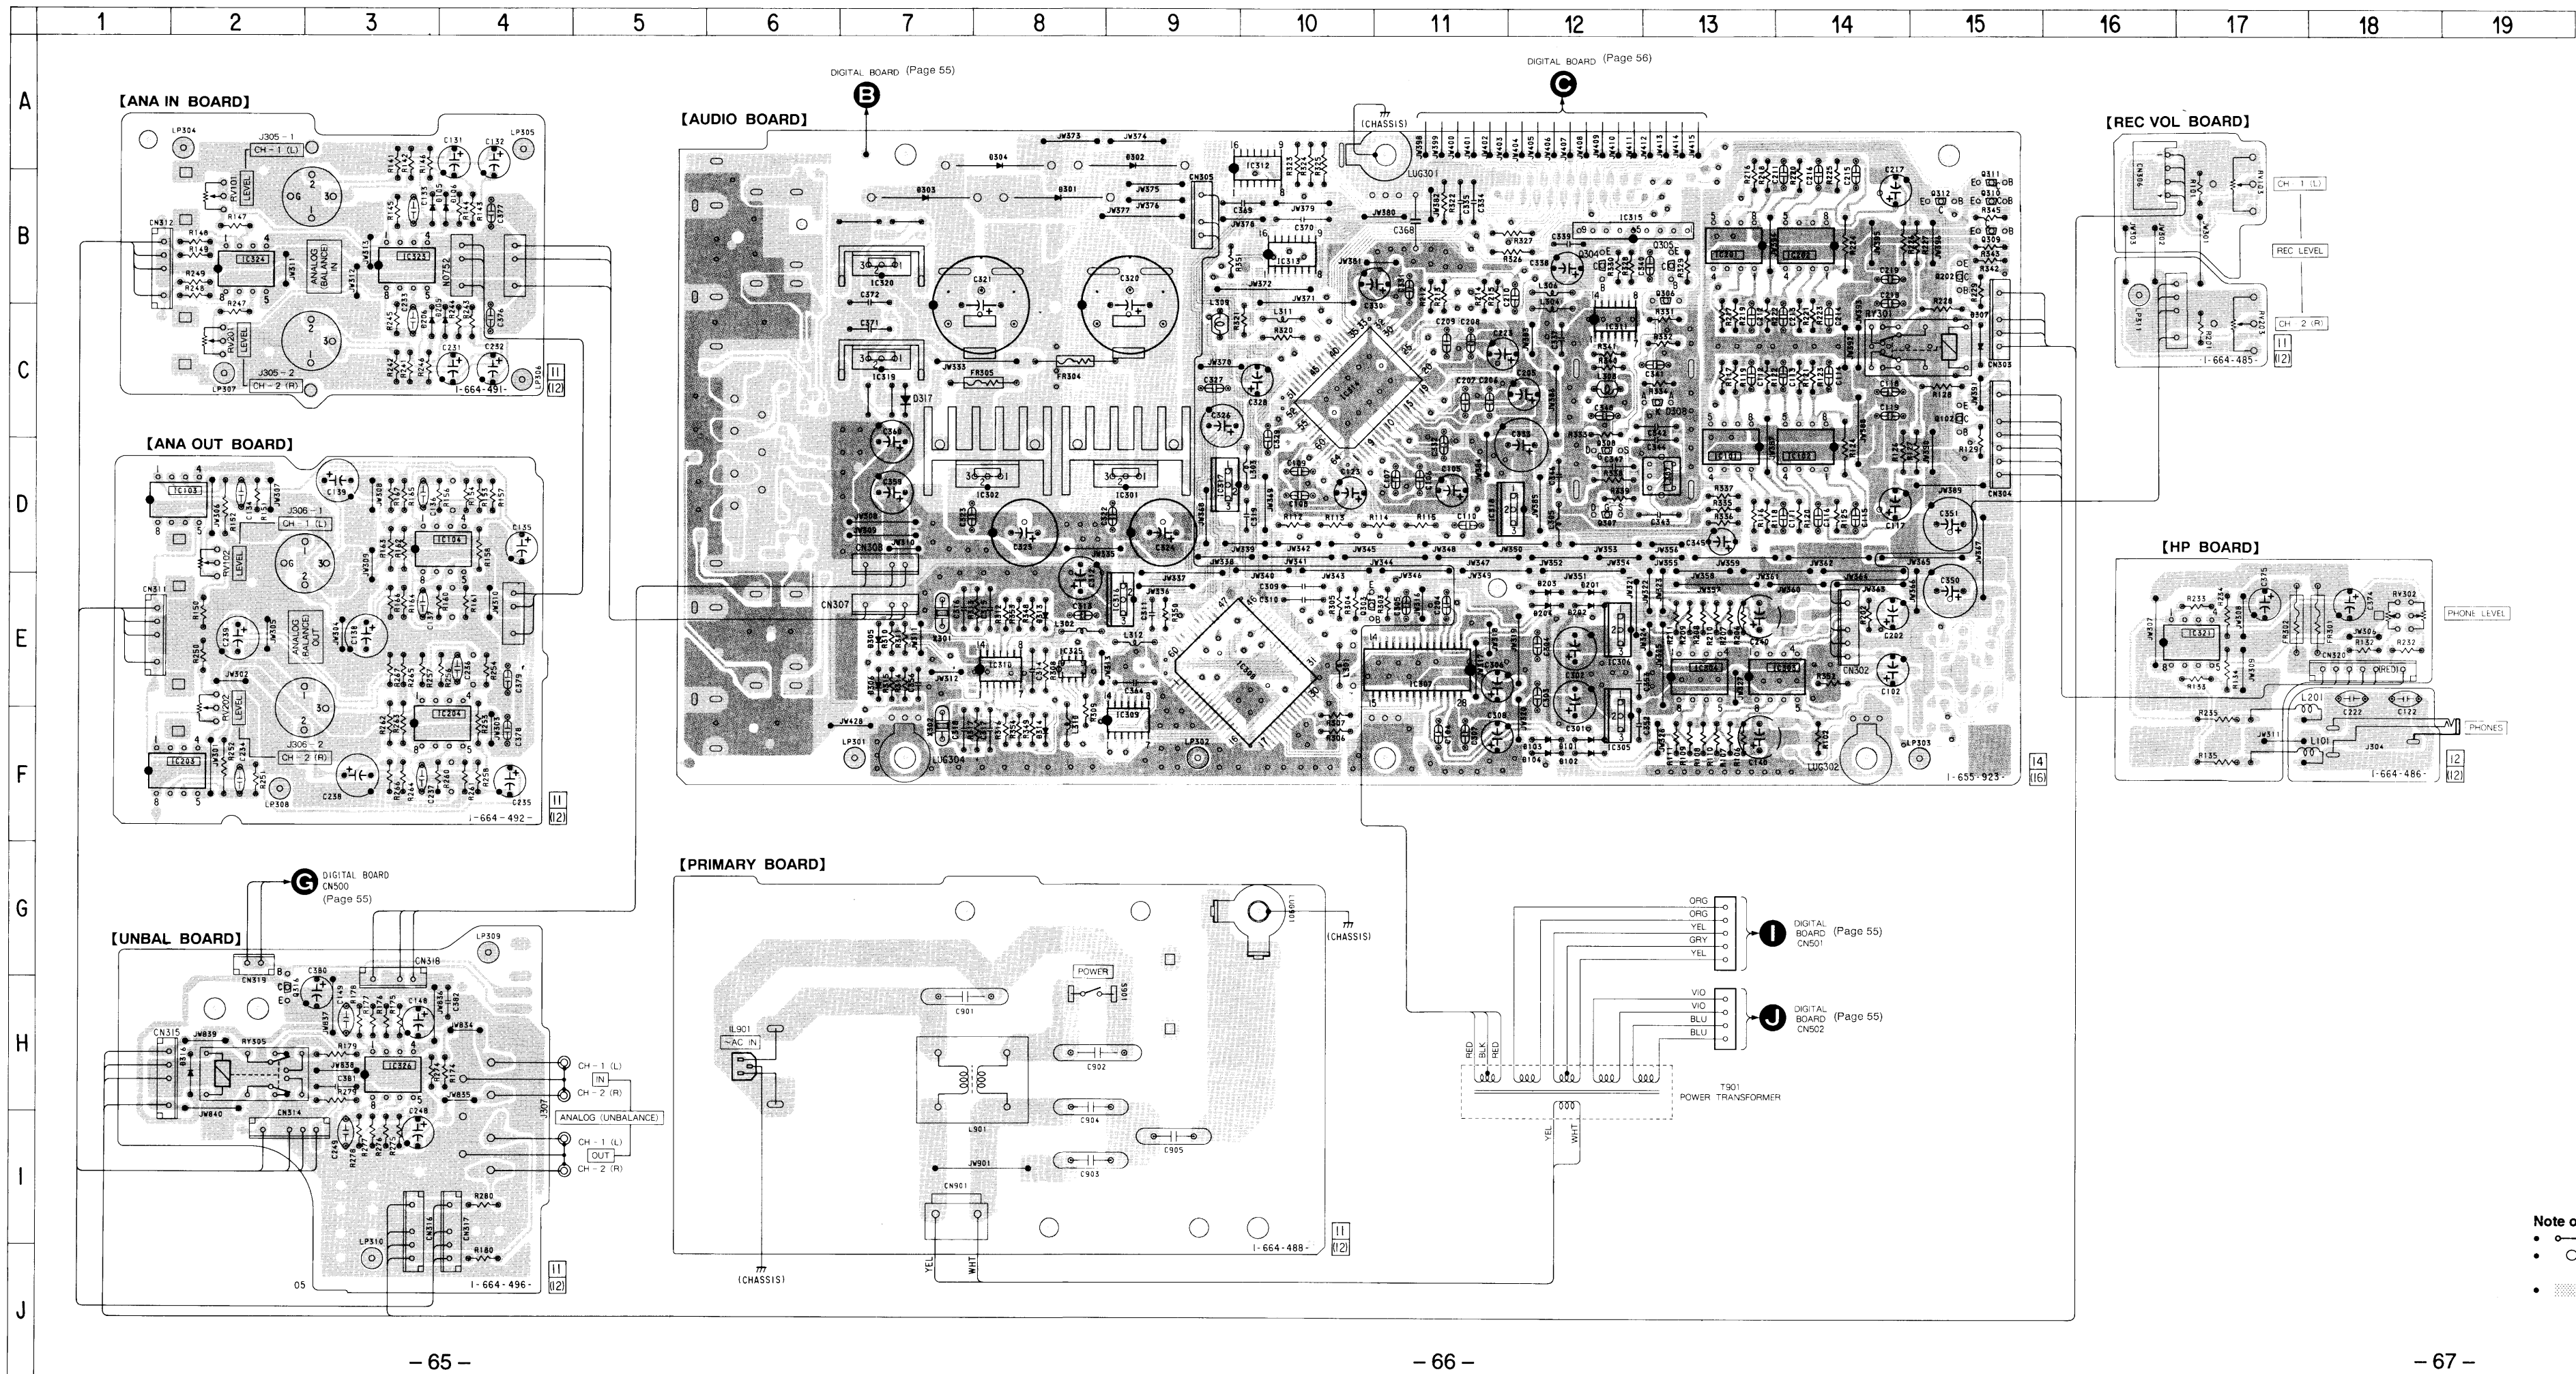

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D101	F-12	IC305	F-12
D102	F-12	IC306	E-12
D103	F-12	IC307	E-11
D104	F-12	IC308	E-10
D105	B-3	IC309	F-9
D106	B-4	IC310	E-8
D201	E-12	IC311	C-12
D202	E-12	IC312	A-10
D203	E-12	IC313	B-10
D204	E-12	IC314	C-10
D205	C-4	IC315	B-12
D206	C-3	IC316	E-9
D301	B-8	IC317	D-9
D302	A-9	IC318	D-12
D303	B-7	IC319	C-7
D304	A-8	IC320	B-7
D305	E-7	IC321	E-17
D306	E-7	IC323	B-3
D307	C-15	IC324	B-2
D308	C-13	IC325	E-8
D313	E-8	IC326	H-3
D314	F-8		
D317	C-7	Q102	C-15
		Q202	B-15
		Q303	E-11
		Q304	B-12
		Q305	B-13
		Q306	B-13
		Q307	D-12
		Q308	D-12
		Q309	B-15
		Q310	B-15
		Q311	B-15
		Q312	B-15
		Q316	H-2
IC101	D-13		
IC102	D-14		
IC103	D-2		
IC104	D-4		
IC201	B-13		
IC202	B-14		
IC203	F-2		
IC204	F-4		
IC301	D-9		
IC302	D-8		
IC303	E-14		
IC304	E-13		

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4 \text{ W}$ or less unless otherwise specified.
- : fusible resistor.
- : panel designation.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : Through hole.
- : Pattern from the side which enables seeing.

• Semiconductor Location


Ref. No.	Location
D701	E-10
D702	E-9
D703	E-8
D704	D-7
IC701	B-8
IC702	B-9
IC703	B-10
Q701	D-11
Q702	D-11
Q703	D-12
Q704	B-12
Q705	C-12
Q706	C-12
Q707	C-12

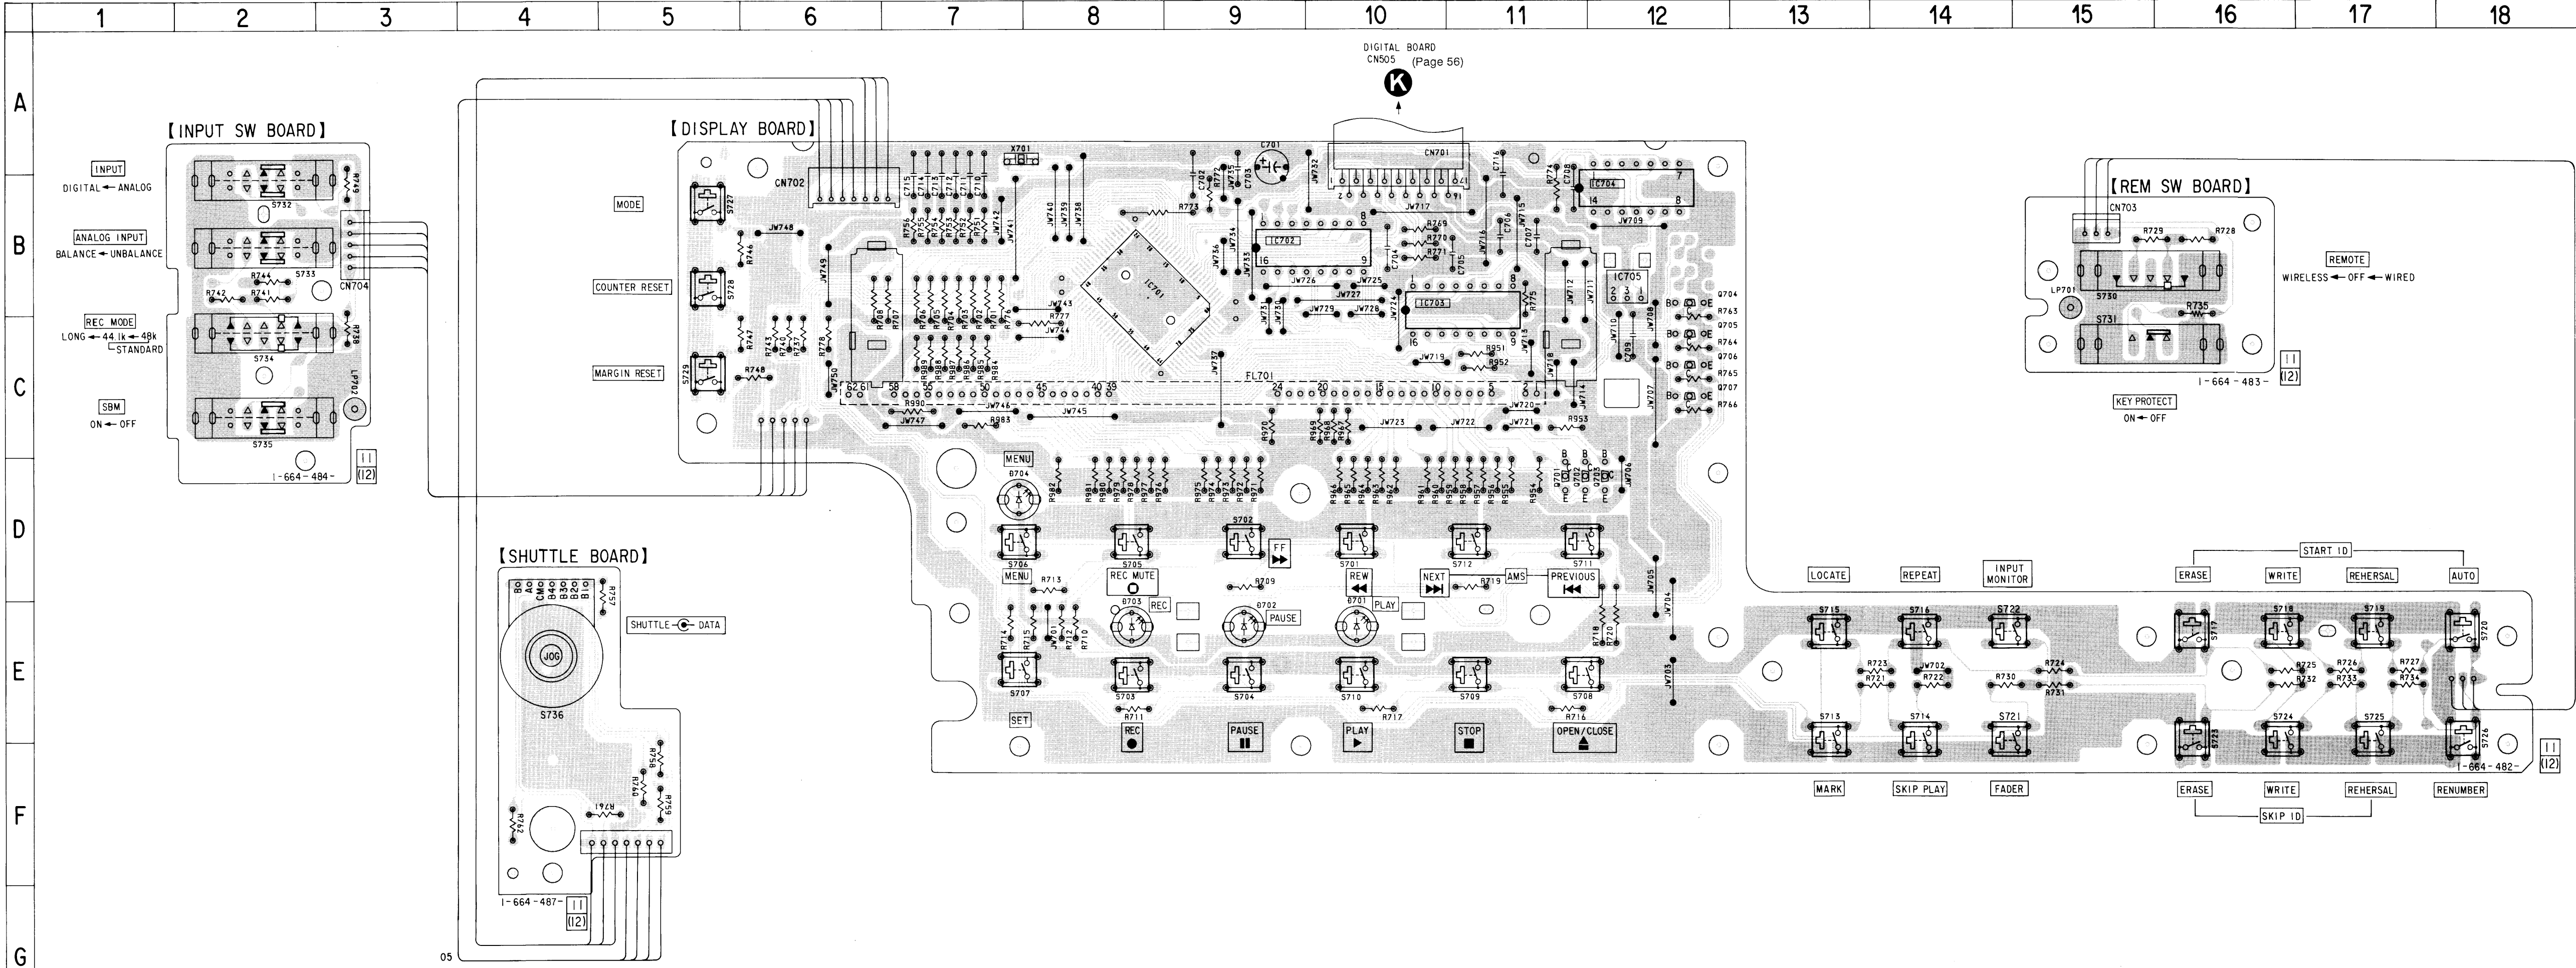

Note on Printed Wiring Board:
• — : parts extracted from the component side.
• : Pattern from the side which enables seeing.

4-11. SCHEMATIC DIAGRAM – DISPLAY Section –

• See page 28 for Waveforms. • See page 39 for IC Block Diagrams.

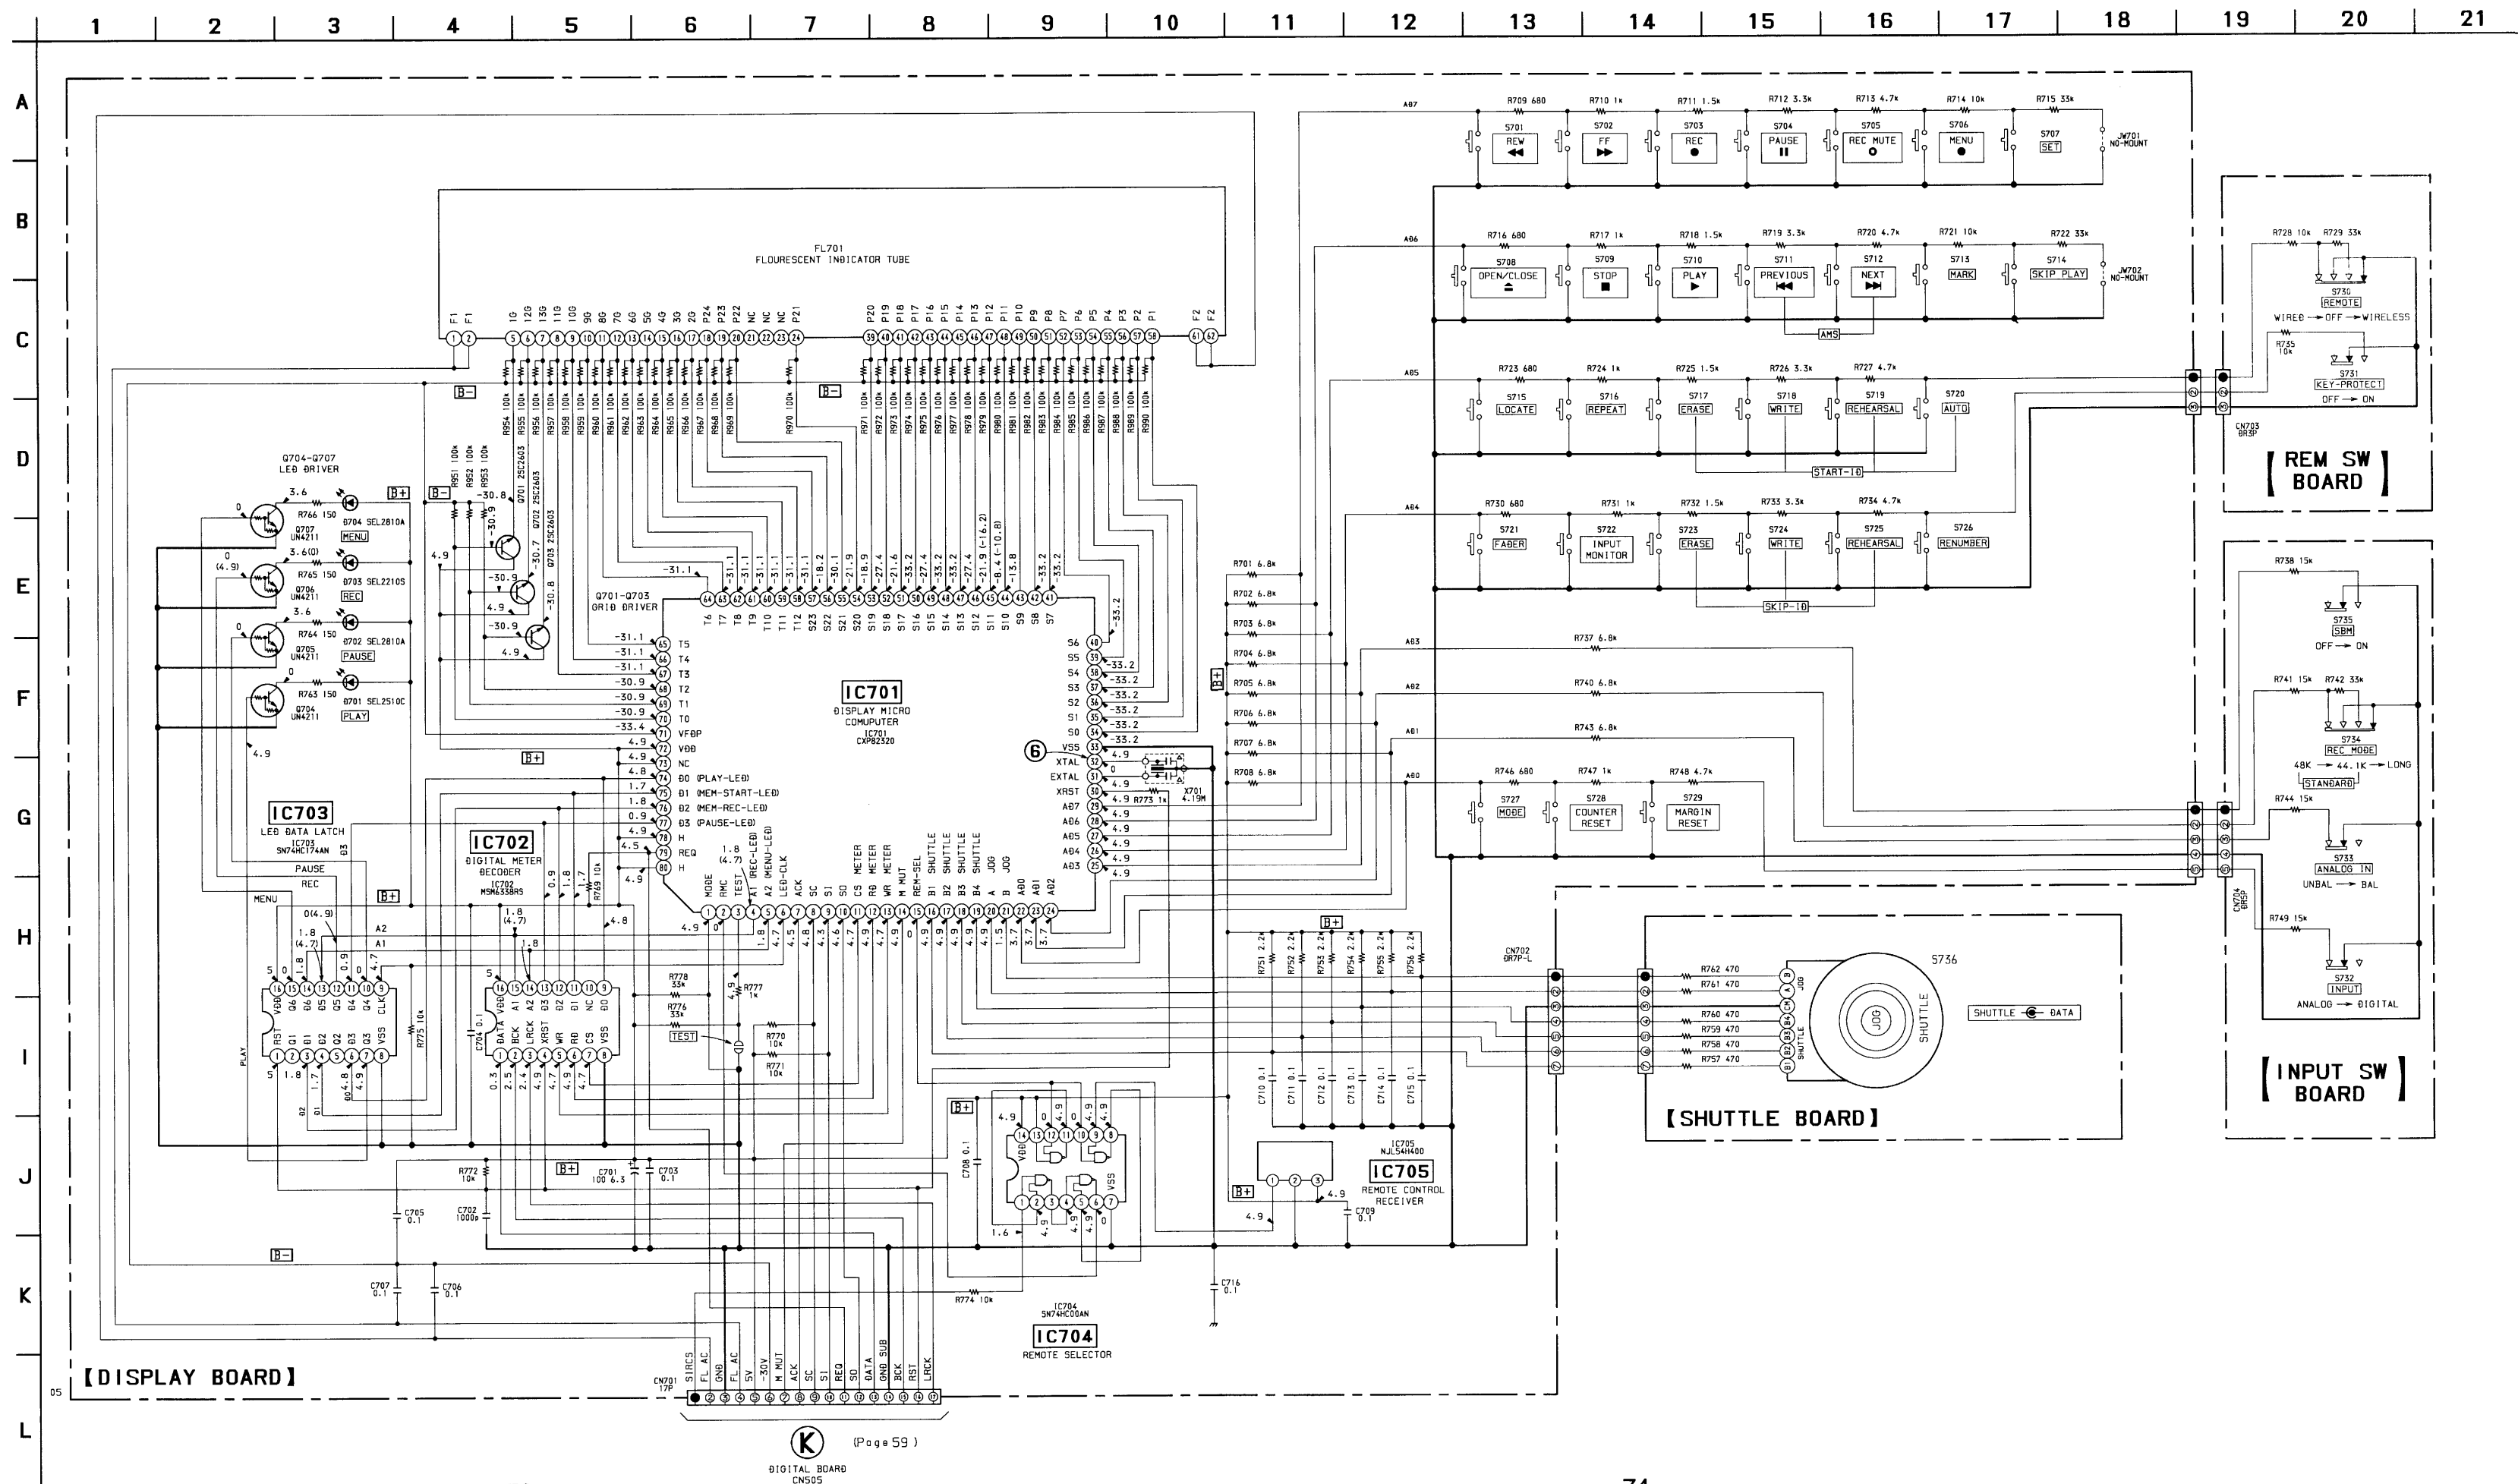

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- $\square$: panel designation.
- B+ : B+ Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- no mark: PLAY
- (): REC
- Voltages are taken with a VOM (Input impedance 10 $\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

4-12. IC PIN FUNCTION DESCRIPTION

• AUDIO BOARD IC308 CXD8482Q (SBM + DIGITAL FILTER)

Pin No.	Pin Name	I/O	Function
1	TEST	I	Test input pin. “H” for test mode and “L” for normal mode. (Fixed at “L” level in this set.)
2	NC	—	Empty pin
3	SYNC	I	Sync mode setting pin. “H” for INT master mode and “L” for EXT slave mode.
4	INIT	I	A/D converter power down mode input from main microcomputer (IC501). (“H” active) (This IC is set OFF in digital input/output mode.)
5	NC	—	Empty pin
6	CFLG	O	FE calibration flag output (Not used in this set, empty pin.)
7, 8	VDD	—	Power supply pin (+5V)
9	LRKI	I	L/R clock input (Not used in this set, fixed at “L” level.)
10	BKI	I	Beat clock input (Not used in this set, fixed at “L” level.)
11	NC	—	Empty pin
12	DLI	I	L channel data input (Not used in this set, fixed at “L” level.)
13	DRI	I	R channel data input (Not used in this set, fixed at “L” level.)
14	IFLG	O	FE sync flag output (Not used in this set, empty pin.)
15, 16	NC	—	Empty pin
17	FE	I	FE select input (Not used in this set, fixed at “L” level.)
18	AL2	I	Data signal (L) input (Not used in this set, fixed at “L” level.)
19	AR2	I	Data signal (R) input (Not used in this set, fixed at “L” level.)
20	AL1	I	Data signal (L) input from A/D converter (IC307).
21	AR1	I	Data signal (R) input from A/D converter (IC307).
22, 23	VSS	—	Ground
24, 25	CVSS	—	Ground
26	FCLK	O	Output of 128fs master clock for FE to A/D converter (IC307).
27	MCLK	I	Input of 256fs master clock from FS clock generator (IC325).
28	CVDD	—	Power supply pin (+5V)
29	NC	—	Empty pin
30	IBIT	I	64fs input data mode select input (“H”: 4bit, “L”: 1bit) (Fixed at “L” level in this set.)
31	NC	—	Empty pin
32	VSS	—	Ground
33	SCALE	I	Scale select input (“H”: ×4, “L”: ×5) (Fixed at “L” level in this set.)
34	ISEL1	I	FS select of input data (Fixed at “L” level in this set.)
35	ISEL2	I	FS select of input data (Fixed at “L” level in this set.)
36	NC	—	Empty pin
37	DITH	I	Dither control input. Dither active when “H” and stopped when “L”. (Not used in this set, empty pin.)
38	BOOST	I	Boost control input. Boost active when “H” and normal when “L”. (Fixed at “H” level in this set.)
39	VDD	—	Power supply pin (+5V)
40	MODE	I	Serial data signal input from main microcomputer (IC501).
41	SHIFT	I	Shift clock signal input from main microcomputer (IC501). (Shift when ↓, latch when ↑)
42	LATCH	I	Latch pulse signal input from main microcomputer (IC501).
43	NC	—	Empty pin
44	LC	I	Low cut control input. “H” for low frequency cut and “L” for flat. (Fixed at “H” level in this set.)
45	SBM	I	Super Bit Mapping (SBM) control input from main microcomputer (IC501). (“H”: ON, “L”: OFF)

Pin No.	Pin Name	I/O	Function
46	NC	—	Empty pin
47	OSEL	I	FS select of data output. (“H”: 2FS output or EX mode, “L”: FS output) (Fixed at “L” level in this set.)
48	OBIT	I	Bit select of data output. (“H”: 24 bits, “L”: 16 bits) (Fixed at “L” level in this set.)
49	DRO	O	Write clock output (Not used in this set, empty pin.)
50	DLO	O	L/R channel data signal output
51	NC	—	Empty pin
52, 53	VSS	—	Ground
54	BCK	I	Bit clock input from digital filter (IC314).
55	NC	—	Empty pin
56	LRCK	I	L/R clock input from digital filter (IC314).
57	OFLG	O	Outside sync flag output (Not used in this set, empty pin.)
58	VDD	—	Power supply pin (+5V)
59	OVR	O	R channel side overflow flag output (Not used in this set, empty pin.)
60	OVL	O	L channel side overflow flag output (Not used in this set, empty pin.)

• DIGITAL BOARD IC501 CXP87540-037Q (MAIN MICROCOMPUTER)

Pin No.	Pin Name	I/O	Function																			
1	SBM-ON	O	SBM (Super Bit Mapping) ON/OFF select pin (“L”: OFF, “H”: ON)																			
2	XBAL	O	Analog input select (“L”: BAL, “H”: UNBAL)																			
3	OBIT-SEL	O	Not used.																			
4, 5	—	—	Empty pin																			
6	PRE-EMPH	O	Not used in this set.																			
7	AUSO	O	Digital filter control serial data output pin																			
8	AUSC	O	Digital filter control serial clock output pin																			
9	VCO-EN	O	DIGITAL IN REC mode only for “H” output.																			
10	XOPT/COA	O	Select (“L”: COAXIAL, “H”: OPTICAL)																			
11	XADLD	O	A/D digital filter control latch output pin																			
12	XDALD	O	D/A digital filter control latch output pin																			
13	FADE-WE	O	FADER IC write enabling signal output																			
14	FADE-RST	O	FADER IC reset signal output																			
15	XANA/DIG	O	ANALOG/DIGITAL IN select output pin (“L”: ANALOG IN, “H”: DIGITAL IN)																			
16	XREC/PB	O	Record/playback select output pin (“L”: REC, “H”: PB)																			
17	XREPRO	O	Not used in this set.																			
18	MIC-ATT	O	Not used in this set.																			
19	MIC-ON	O	Not used in this set.																			
20	RTC-DT	I/O	Clock IC serial data input/output pin																			
21	RTC-SC	O	Clock IC serial data output pin																			
22	RTC-CE	O	Clock IC chip enable output pin																			
23 — 27	—	—	Empty pin																			
28	FS48	O	Fs select output pin <table><tr><td></td><td>Fs 48kHz</td><td>Fs 44.1kHz</td><td>Fs 32kHz</td></tr><tr><td>Pin @,</td><td>H</td><td>L</td><td>L</td></tr><tr><td>Pin @.</td><td>L</td><td>H</td><td>L</td></tr><tr><td>Pin #/</td><td>L</td><td>L</td><td>H</td></tr></table>					Fs 48kHz	Fs 44.1kHz	Fs 32kHz	Pin @,	H	L	L	Pin @.	L	H	L	Pin #/	L	L	H
	Fs 48kHz	Fs 44.1kHz					Fs 32kHz															
Pin @,	H	L					L															
Pin @.	L	H					L															
Pin #/	L	L	H																			
29	FS44	O																				
30	FS32	O																				
31	XLM	O	Line mute output pin (“L”: ON, “H”: OFF)																			
32	—	—	Empty pin																			
33	SLV-MUT	O	Not used in this set.																			
34	XSLV-SEL	O	Not used in this set.																			
35 — 38	AF3 — AF0	I	Pull-up fixed.																			
39	MP	—	Connected to Ground.																			
40	XRST	I/O	System reset input/output pin (“L”: ACTIVE)																			
41	VSS	—	Ground																			
42	XTAL	O	Not used.																			
43	EXTAL	I	Operating clock input pin (9.408MHz)																			
44	XDISP-REQ	O	Pin for communication request output to display controller.																			
45	—	—	Not used.																			
46	XMECH-REQ	O	Pin for communication request output to mechanism microcomputer.																			
47	—	—	Not used.																			
48	XDISP-ACK	I	Pin for communication acknowledge input from display controller.																			
49	DM-DI	I	Pin for serial data input from another microcomputer.																			
50	DM-DO	O	Pin for serial data output to another microcomputer.																			
51	DM-CK	O	Pin for serial clock output to another microcomputer.																			
52	XSBSY	I	Pin for SBSY input from master DAT-DSP IC.																			
53	SR-DTI	I	Pin for serial data input from master DAT-DSP IC.																			

Pin No.	Pin Name	I/O	Function
54	SR-DTO	O	Pin for serial data output to master DAT-DSP IC.
55	SR-CK	O	Pin for serial clock output to master DAT-DSP IC.
56	AVSS	—	Ground
57	AVREF	—	Reference voltage pin (+5V)
58	AVDD	—	Power supply pin (+5V)
59	XMECH-BSY	I	Pin for communication busy input from mechanism microcomputer. (“L”: BUSY)
60	FOOT-SW1	I	Pull-up fixed.
61	FOOT-SW0	I	Pull-up fixed.
62	MODE1	I	Fixed at “L” level.
63	MODE0	I	Fixed at “H” level.
64	X24/12	I	24/12-hour system display select input pin (“H”: 12-hour system display (US, Canadian model), “L”: 24-hour system display (AEP, UK, German model)).
65	DATE-ODR	I	YY-MM-DD/DD-MM-YY display select input pin (“L”: Fixed to DD-MM-YY display)
66	PRL-REM	I	Pull-up fixed. Para-remote A/D input. (At connect with controller.)
67	X4HEAD	I	Fixed at “L” level.
68	XPRODIO	I	Fixed at “L” level.
69	XFADER	I	Fixed at “L” level.
70	MUT-MONIT	I	Pin for mute monitor input from master DAT-DSP IC.
71	XAES/COA	I	COAX↔AES/EBU Switch signal input.
72	XCNT-S	I	Pull-up fixed.
73	MODE3	I	Fixed at “H” level.
74	MODE2	I	Fixed at “H” level.
75, 76	LED1, 0	O	Remote commander LED output pin
77 — 79	—	—	Not used.
80	ERRO	—	TEST pin. (Not used.)
81 — 85	—	—	Not used.
86	XTEST	I	TEST pin (“L”: TEST MODE)
87	POW-DWN	I	Fixed at “H” level.
88	VSS	—	Ground
89	VDD	—	Power supply pin (+5V)
90	VPP	—	Connect to VDD.
91, 92	—	—	Not used.
93	XADINT	O	A/D digital filter initial setting output pin (“L”: INIT)
94	XDAINT	O	D/A digital filter initial setting output pin (“L”: INIT)
95	REC-DIS	O	Recording current control output pin (“L”: Normally, “H”: Recording current forced OFF)
96	EXSY-MUT	O	EXSY output control pin (“L”: Normally, “H”: EXSY forced OFF)
97	XMST-SEL	O	Signal process IC chip select output pin
98	MST-MUTE	O	Playback data mute output pin (“L”: OFF, “H”: ON)
99, 100	—	—	Not used.

• DIGITAL BOARD IC502 CXP87532-039Q (MECHANISM MICROCOMPUTER)

Pin No.	Pin Name	I/O	Function
1	FPM-KI	O	FWD plunger kick control output
2	CAP-RVS	O	Capstan rotation direction control output. “H” for FWD and “L” for REV.
3	BPM-ON	O	Brake plunger ON control output
4	BPM-KI	O	Brake plunger kick control output
5	DRM-ON	O	Drum motor ON control output
6	—	O	Not used.
7	—	O	
8	—	O	
9	—	O	
10	—	O	
11	—	O	
12	—	O	
13	—	O	
14	—	O	
15	LM-EJCT	O	Loading motor rotation direction control output (Eject direction)
16	LM-LOAD	O	Loading motor rotation direction control output (Loading direction)
17	CM-OUT	O	Cassette compartment motor rotation direction control output (OUT direction)
18	CM-IN	O	Cassette compartment motor rotation direction control output (IN direction)
19	XROM-CK	O	EEPROM serial clock output
20	XROM-DT	I/O	EEPROM serial data input/output
21	—	O	Not used.
22	—	O	
23	H-FIX	I	Not used. (Fixed at “H” level.)
24	H-FIX	I	
25	CAS-IN	I	Cassette IN switch input
26	REC-EN	I	REC enable switch input
27	CAS-LCK	I	Cassette compartment lock switch input
28	CAS-OUT	I	Cassette compartment OUT switch input
29	UNLD-SW	I	UNLOAD switch input. “H” in UNLOAD position.
30	LOAD-SW	I	LOAD switch. “H” in STOP position.
31	—	O	Not used.
32	—	O	
33	—	O	
34	—	O	
35	H-FIX	I	Not used. (Fixed at “H” level.)
36	H-FIX	I	
37	H-FIX	I	
38	H-FIX	I	
39	MP	—	Connect to Ground.
40	XRST	I	Reset input. “L” for reset.
41	VSS	—	Ground
42	XTAL	O	Crystal oscillator output pin (9.408MHz). (Not used in this set.)
43	EXTAL	I	Crystal oscillator input pin (9.408MHz)
44	XMECH-BSY	O	Mechanism microcomputer BUSY signal input
45	—	O	Not used.
46	TLED-ON	O	T-END sensor ON output. “H” for ON.
47	SLED-ON	O	S-END sensor ON output. “H” for ON.
48	XSBSY	I	SUB SYNC input from main microcomputer (IC501).
49	—	I	Not used.
50	—	O	
51	—	O	

Pin No.	Pin Name	I/O	Pin Description
52	XMECH-REQ	I	Communication request input from main microcomputer (IC501).
53	MECH-DTI	I	Serial data input from main microcomputer (IC501).
54	MECH-DTO	O	Serial data output to main microcomputer (IC501).
55	MECH-SCK	I	Serial clock input from main microcomputer (IC501).
56	AVSS	—	A/D port Ground
57	AVREF	—	A/D port power supply (+5V)
58	AVDD	—	A/D port power supply (+5V)
59	TEND	I	T-END sensor input
60	SEND	I	S-END sensor input
61	H-FIX	I	Fixed at “H” level.
62	H-FIX	I	
63	THICK	I	Thick switch input
64	SET-MODE	I	Fixed at “H” level.
65	CAS-MODE	I	Fixed at “H” level.
66	ATF-IN	I	ATF pilot signal input
67	TFG	I	T reel FG signal input
68	SFG	I	S reel FG signal input
69	CFG	I	Capstan FG signal input
70	DFG	I	Drum FG signal input
71	DPG	I	Drum PG signal input
72	DREF	I	Drum reference signal input
73	ATF-S2	I	Input of AFT sampling pulse for DPG automatic adjustment.
74	H-FIX	I	Not used. (Fixed at “H” level.)
75	—	O	Not used.
76	XCAS-TST	I	Test pin. “L” for cassette compartment without test mode.
77	MST-CLK	I	Master clock input
78	PBDT	I	PB data for ATF SYNC.
79	SWP	O	Switching pulse output
80	AGC-PWM	O	Output of PWM signal for AGC.
81	T-PWM	O	Output of PWM signal for T reel.
82	S-PWM	O	Output of PWM signal for S reel.
83	D-PWM	O	Output of PWM signal for drum.
84	C-PWM	O	Output of PWM signal for capstan.
85	H-FIX	I	Not used. (Fixed at “H” level.)
86	XTEST	I	Test pin. “L” for test mode. (Used at D PG, PATH and torque.)
87	POW-DWN	I	Not used. (Fixed at “H” level.)
88	VSS	—	Ground
89	VDD	—	+5V power supply
90	VPP	—	Connect to +5V.
91	ATF-S2	O	ATF sampling pulse #2 output
92	AREA	O	AREA signal output
93	—	O	Not used.
94	—	O	
95	—	O	
96	XLP-REC	O	LP REC control output. “L” for LP mode RED.
97	—	O	Not used.
98	—	O	
99	XTLK	O	Reel motor T LOCK control output. “L” for T LOCK.
100	FPM-ON	O	FWD plunger ON control output

• DIGITAL BOARD IC503 CXD2605Q (MASTER DAT-DSP)

Pin No.	Pin Name	I/O	Function
1	A8	O	External RAM address output
2	A9	O	External RAM address output
3	VDD	—	+5V
4	A10	O	External RAM address output
5	A11	O	External RAM address output
6	A12	O	External RAM address output
7	A13	O	External RAM address output
8	A14	O	External RAM address output
9	XWE	O	External RAM write enable signal output
10	XOE	O	External RAM output enable signal output
11	XEAN	O	External addressing enable signal output. (Not used in this set.)
12	TST1	I	Test input (Fixed at “L” level.)
13	XT1O	O	X’tal oscillation circuit 1 output
14	XT1I	I	X’tal oscillation circuit 1 input
15	VSS	—	Ground
16	XRST	I	Reset input. “L” for reset.
17	CLKO	O	System clock output. (The frequency is 4.9152 MHz when SELC is set “L” and 8.192 MHz when SELC is set “H”.) (Not used in this set.)
18	MINT	O	Control byte (1). Bit 1: Q code decode (intercurve detection) output when “L” and BCK clock output by RX-PLL when “H”. (Not used in this set.)
19	ATSY	I	ATF sync signal input
20	MCLK	O	Channel clock (fch) output (Not used in this set.)
21	DREF	O	SBSY cycled Duty 50 signal output
22	SBPM	O	Control byte (1). Bit 1: Output of monitor signal for data transfer to and from microcomputer when “L” (“L” to permit transfer) and F256 clock output by RX-PLL when “H”. (Not used in this set.)
23	EXCK	I	Input of clock for data transfer to and from main microcomputer (IC501).
24	SDSI	I	Serial data input from main microcomputer (IC501).
25	SDSO	O	Serial data output to main microcomputer (IC501).
26	SBSY	O	Output of frame sync signal for data transfer to and from main microcomputer (IC501).
27	PLRF	O	Output of PLL clock divided by 5880. (Not used in this set.)
28	CCLK	O	9.8304MHz output when SELC is “L” and 12.288MHz output when SELC is “H”. (Not used in this set.)
29	MUTE	I	Mute input. Set “H” to mute, but REC monitor sound will not be muted.
30	MUTM	O	Mute monitor. “H” in muting.
31	UNLK	O	RX-PLL lock monitor signal output. “L” in locking.
32	RFCT	I	Area signal input. (“L” to enable AREA signal and “H” to disable AREA signal.)
33	SYMN	O	RF associated C1 check result monitor signal output. (Not used in this set.)
34	SELB	I	Test pin (Fixed at “H” level.)
35	PLCK	O	Control byte (1). Bit 1: RF-PLL clock output when “L” and F128 clock output by RX-PLL when “H” (Not used in this set.)
36	TST2	I	Test pin (Fixed at “L” level.)
37	RFDT	I	Playback RF signal input
38	XCS	I	Input of chip select signal for data transfer to and from microcomputer. “L” to permit transfer.
39	SWP	I	RF switching pulse. “L” to select A track and “H” to select B track.
40	VSS	—	Ground
41	PIPC	O	Output of ATF pilot signal/discrimination signal for recording signal. “H” to output pilot signal.
42	REPB	O	REC/PB discrimination signal output. “H” for REC mode.
43	REDT	O	Recording signal output.

Pin No.	Pin Name	I/O	Function
44	TST4	I	Test pin (Fixed at “L” level.)
45	PDO	O	RX-PLL phase comparator output
46	SELC	I	Oscillation frequency select signal input (Fixed at “L” level in this set.)
47	MUTA	I	Mute input. “H” to mute, and REC monitor sound is also muted.
48	PLCO	I	RX-PLL’s external VCO clock input (512fs reference)
49	PLVR	O	Output of phase comparator signal for RX-PLL. (2fs generated from PLL clock.) (Not used in this set.)
50	PLRF	O	Output of phase comparator signal for RX-PLL. (RX SYNC detect signal 2fs) (Not used in this set.)
51	MSSL	I	Master mode/slave mode select. “H” for master mode. (Fixed at “H” level in this set.)
52	RX	I	Digital interface signal input
53	VDD	—	+5V
54	TX	O	Digital interface signal output
55	SELA	I	Test pin (Fixed at “L” level.)
56	EXSY	I/O	External sync signal input/output
57	EXSN	I/O	External sync signal input/output
58	F128	I/O	128fs signal/256fs signal (high speed) input/output
59	F256	O	256fs signal/512fs signal (high speed) output (Not used in this set.)
60	F512	O	512fs signal output (Not used in this set.)
61	ADLF	I	ADDT, ADDI, ADDN serial data LSB/MSB first select input. “L” for LSB first.
62	DALF	I	DADT, DADO serial data LSB/MSB first select input. “L” for LSB first.
63	XT2O	O	X’tal oscillation circuit 2 output. (Not used in this set.)
64	XT2I	I	X’tal oscillation circuit 2 input
65	VSS	—	Ground
66	XT3O	O	X’tal oscillation circuit 3 output
67	XT3I	I	X’tal oscillation circuit 3 input
68	FSEN	I	F128, BCK, LRCK input/output select input. “H” for output.
69	LR03	O	Inverted LR02 signal (Not used in this set.)
70	LR02	O	Control byte (1). Bit 1: 16BCK delayed LRCK signal when “L” and LRCK clock output by RX-PLL when “H” (Not used in this set.)
71	LR01	O	15BCK delayed LRCK signal
72	LRCK	I/O	fs/2fs (high speed) signal input/output
73	WCK	O	2fs/4fs (high speed) signal output (Not used in this set.)
74	XBCK	O	Inverted BCK signal output
75	BCK	I/O	64fs/128fs (high speed) signal input/output
76	ADDT	I	AD serial data input
77	DADT	O	DA serial data output
78	DADO	I	DIGITAL OUT audio data input
79	ADDI	O	DIGITAL IN audio data output
80	ADDN	I	DIGITAL IN audio data input
81	ERRI	I	DIGITAL OUT Validity flag data input
82	ERRF	O	DADT data’s interpolation data/discrimination signal output. “H” for interpolation data.
83	MNTG	O	“H” output indicates that error correction status monitor data is being output to D7 to D0. (Not used in this set.)
84	D7	I/O	External RAM data input/output (MSB)
85	D6	I/O	External RAM data input/output
86	D5	I/O	External RAM data input/output
87	D4	I/O	External RAM data input/output
88	D3	I/O	External RAM data input/output
89	D2	I/O	External RAM data input/output
90	VSS	—	Ground

Pin No.	Pin Name	I/O	Function
91	D1	I/O	External RAM data input/output
92	D0	I/O	External RAM data input/output (LSB)
93	A0	O	External RAM address output
94	A1	O	External RAM address output
95	A2	O	External RAM address output
96	A3	O	External RAM address output
97	A4	O	External RAM address output
98	A5	O	External RAM address output
99	A6	O	External RAM address output
100	A7	O	External RAM address output

• SP BOARD IC803 CXD2605R (SLAVE DAT-DSP)

Pin No.	Pin Name	I/O	Function
1	A8	O	External RAM address output
2	A9	O	External RAM address output
3	VDD	–	+5V
4	A10	O	External RAM address output
5	A11	O	External RAM address output
6	A12	O	External RAM address output
7	A13	O	External RAM address output
8	A14	O	External RAM address output
9	XWE	O	External RAM write enable signal output
10	XOE	O	External RAM output enable signal output
11	XEAN	O	External addressing enable signal output Not used this set (OPEN)
12	TST1	I	Test input (Fixed at “L”)
13	XT1O	O	X’tal oscillation circuit 1 output Not used this set (OPEN)
14	XT1I	I	X’tal oscillation circuit 1 input
15	VSS	–	Ground terminal
16	XRST	I	Reset input (“L” for reset)
17	CLKO	O	System clock output (The frequency is 4.9152MHz when SELC is set “L” and 8.192MHz when SELC is set “H”) Not used this set (OPEN)
18	MINT	O	Control byte (1) Bit 1: Q code decode (intercurve detection) output when “L” and BCK clock output by RX-PLL when “H” Not used this set (OPEN)
19	ATSY	I	ATF sync signal input Not used this set (Fixed at “L”)
20	MCLK	O	Channel clock (fch) output Not used this set (OPEN)
21	DREF	O	SBSY cycled Duty 50 signal output Not used this set (OPEN)
22	SBPM	O	Control byte (1) Bit 1: Output of monitor signal for data transfer to and from microcomputer when “L” (“L” to permit transfer) and F256 clock output by RX-PLL when “H”) Not used this set (OPEN)
23	EXCK	I	Input of clock for data transfer to and from main microcomputer (IC501)
24	SDSI	I	Serial data input from main microcomputer (IC501)
25	SDSO	O	Serial data output to main microcomputer (IC501)
26	SBSY	O	Output of clock for data transfer to and from main microcomputer (IC501)
27	PLRF	O	Output of PLL clock divided by 5880 Not used this set (OPEN)
28	CCLK	O	9.8304MHz output when SELC is “L” and 12.288MHz output when SELC is “H” Not used this set (OPEN)
29	MUTE	I	Mute input (Set “H” to mute, but REC monitor sound will not be muted)
30	MUTM	O	Mute monitor (“H” in muting) Not used this set (OPEN)
31	UNLK	O	RX-PLL lock monitor signal output “L” in locking Not used this set (OPEN)
32	RFCT	I	Playback RF signal control (“L” to enable RF signal and “H” to disable RF signal)
33	SYMN	O	RF associated C1 check result monitor signal output Not used this set (OPEN)
34	SELB	I	Test pin (Fixed at “H”)
35	PCLK	O	Control byte (1) Bit 1: RF-PLL clock output when “L” and F128 clock output by RX-PLL when “H” Not used this set (OPEN)
36	TST2	I	Test pin (Fixed at “H”)
37	RFDT	I	Playback RF signal input
38	XCS	I	Input of chip select signal for data transfer to and from microcomputer “L” to permit transfer
39	SWP	I	RF switching pulse (“L” to select A track and “H” to select B track)
40	VSS	–	Ground terminal

Pin No.	Pin Name	I/O	Function
41	PIPC	O	Output of ATF pilot signal/discrimination signal for recording signal (“H” to output pilot signal Not used this set (OPEN)
42	REPB	O	REC/PB discrimination signal output (“H” for REC mode) Not used this set (OPEN)
43	REDT	O	Recording signal output Not used this set (OPEN)
44	TST4	I	Test pin (Fixed at “L”)
45	PDO	O	RX-PLL phase comparator output Not used this set (OPEN)
46	SELC	I	Oscillation frequency select signal input (Fixed at “L”)
47	MUTA	I	Mute input “H” to mute, and REC monitor sound is also muted (Fixed at “L”)
48	PLCO	I	RX-PLL’s external VCO clock input (512fs reference) Not used this set (Fixed at “H”)
49	PLVR	O	Output of phase comparator signal for RX-PLL (2fs generated from PLL clock) Not used this set (OPEN)
50	PLRF	O	Output of phase comparator signal for RX-PLL (RX SYNC detect signal 2fs) Not used this set (OPEN)
51	MSSL	I	Master mode/slave mode select “H” for master mode (Fixed at “H”)
52	RX	I	Digital interface signal input (Fixed at “L”)
53	VDD	–	+5V
54	TX	O	Digital interface signal output Not used this set (OPEN)
55	SELA	I	Test pin (Fixed at “L”)
56	EXSY	I/O	External sync signal input/output
57	EXSN	I/O	External sync signal input/output Not used this set (Fixed at “L”)
58	F128	I/O	128fs signal/256fs signal (high speed) input/output
59	F256	O	256fs signal/512fs signal (high speed) output Not used this set (OPEN)
60	F512	O	512fs signal output Not used this set (OPEN)
61	ADLF	I	ADDT, ADDI, ADDN serial data LSB/MSB first select input (“L” for LSB first) (Fixed at “L”)
62	DALF	I	DADT, DADO serial data LSB/MSB first select input (“L” for LSB first) (Fixed at “L”)
63	XT2O	O	X’tal oscillation circuit 2 output Not used this set (OPEN)
64	XT2I	I	X’tal oscillation circuit 2 input Not used this set (Fixed at “L”)
65	VSS	–	Ground terminal
66	XT3O	O	X’tal oscillation circuit 3 output Not used this set (OPEN)
67	XT3I	I	X’tal oscillation circuit 3 input
68	FSEN	I	F128, BCK, LRCK input/output select input (“H” for output) (Fixed at “L”)
69	LR03	O	Inverted LR02 signal Not used this set (OPEN)
70	LR02	O	Control byte (1) (Bit 1: 16BCK delayed LRCK signal when “L” and LRCK clock output by RX-PLL when “H”) Not used this set (OPEN)
71	LR01	O	15BCK delayed LRCK signal Not used this set (OPEN)
72	LRCK	I/O	fs/2fs (high speed) signal input/output
73	WCK	O	2fs/4fs (high speed) signal output Not used this set (OPEN)
74	XBCK	O	Inverted BCK signal output Not used this set (Fixed at “L”)
75	BCK	I/O	64fs/128fs (high speed) signal input/output
76	ADDT	I	AD serial data input Not used this set (Fixed at “L”)
77	DADT	O	DA serial data output
78	DADO	I	DIGITAL OUT audio data input Not used this set (Fixed at “L”)
79	ADDI	O	DIGITAL IN audio data output Not used this set (OPEN)
80	ADDN	I	DIGITAL IN audio data input Not used this set (Fixed at “L”)
81	ERRI	I	DIGITAL OUT Validity flag data input Not used this set (Fixed at “L”)
82	ERRF	O	DADT data’s interpolation data/discrimination signal output (“H” for interpolation data) Not used this set (OPEN)

Pin No.	Pin Name	I/O	Function
83	MNTG	O	“H” output indicates that error correction status monitor data is being output to D7 to D0 Not used this set (OPEN)
84	D7	I/O	External RAM data input/output (MSB)
85	D6	I/O	External RAM data input/output
86	D5	I/O	External RAM data input/output
87	D4	I/O	External RAM data input/output
88	D3	I/O	External RAM data input/output
89	D2	I/O	External RAM data input/output
90	VSS	–	Ground terminal
91	D1	I/O	External RAM data input/output
92	D0	I/O	External RAM data input/output (LSB)
93	A0	O	External RAM address output
94	A1	O	External RAM address output
95	A2	O	External RAM address output
96	A3	O	External RAM address output
97	A4	O	External RAM address output
98	A5	O	External RAM address output
99	A6	O	External RAM address output
100	A7	O	External RAM address output

SECTION 5 EXPLODED VIEWS

NOTE:


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(1) COVER

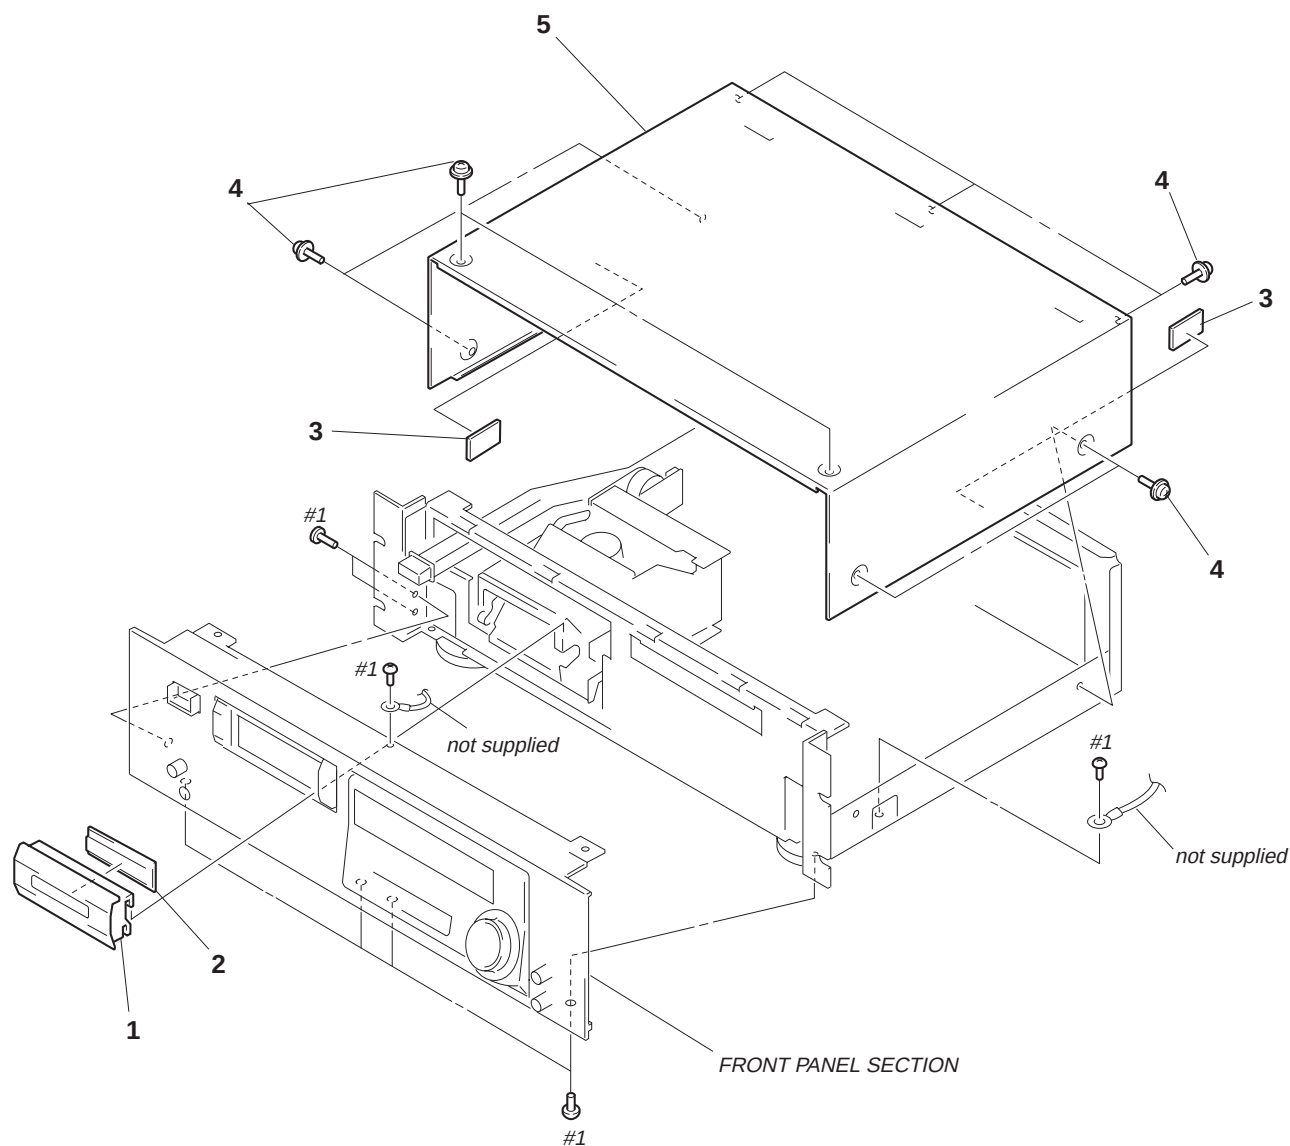


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-007-485-01	LID (CASSETTE COMPARTMENT)		4	3-704-366-21	SCREW (CASE) (M 3X10)	
2	3-007-486-01	WINDOW (CASSETTE COMPARTMENT)		* 5	4-986-210-01	COVER	
* 3	4-951-532-01	CUSHION					

[illegible]

– 89 –

(3) CHASSIS SECTION

- A: AUDIO board
- B: DIGITAL board

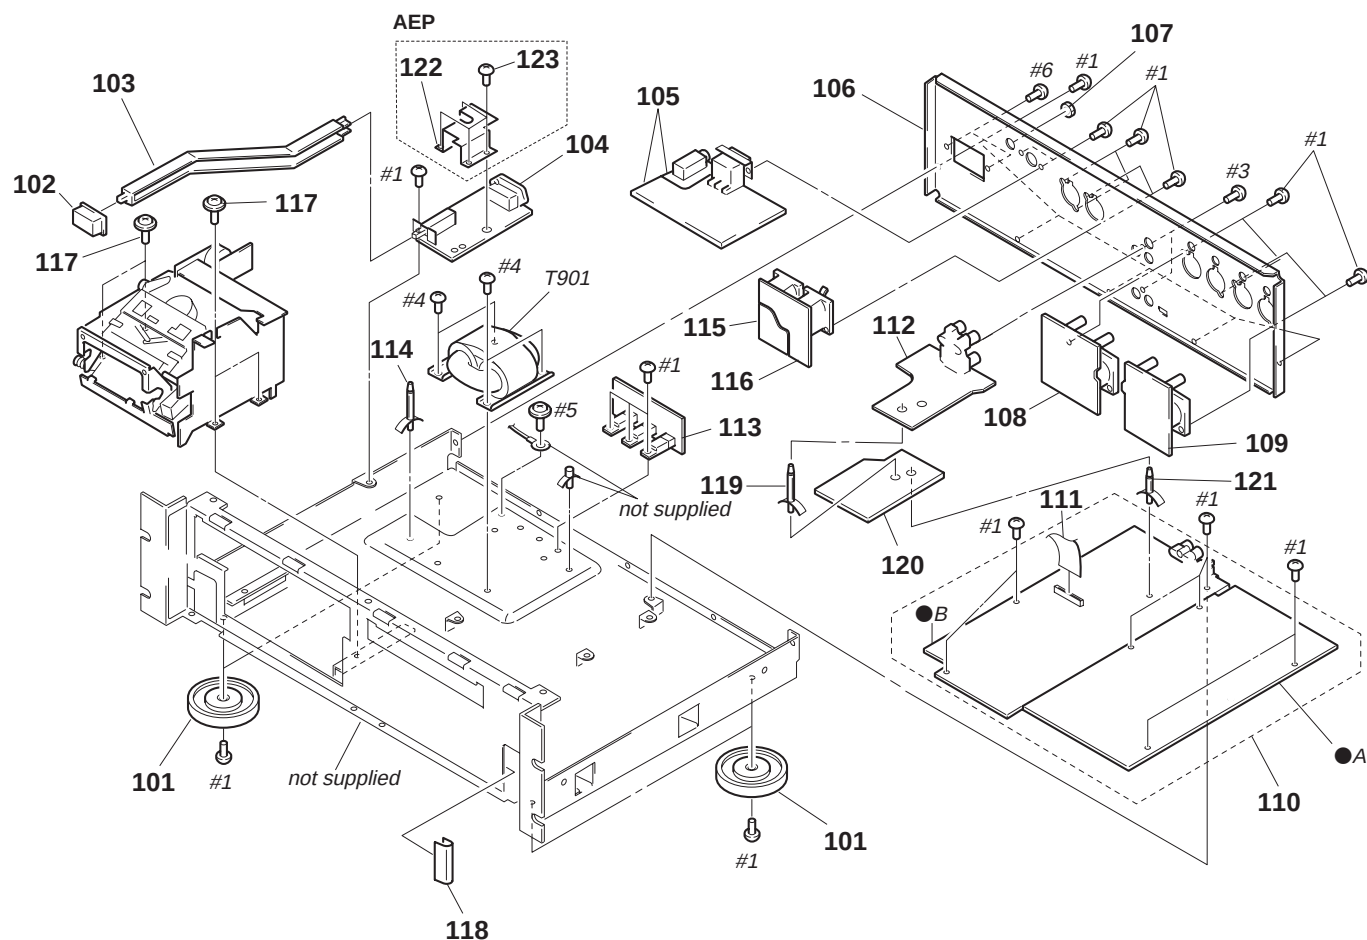


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-956-885-01	FOOT (F58175S2W)		* 113	1-664-490-11	REG BOARD	
102	4-923-520-71	KNOB, POWER (POWER)		114	4-924-098-81	HOLDER, PC BOARD	
* 103	4-986-225-01	LEVER (POW)		* 115	1-664-494-11	DIG OUT BOARD	
* 104	1-664-488-11	PRIMARY BOARD		* 116	A-2007-643-A	DIG IN BOARD, COMPLETE	
* 105	A-2007-645-A	REMOTE BOARD, COMPLETE		117	4-886-821-11	SCREW, S TIGHT, +PTTWH 3X6	
* 106	3-007-688-41	PANEL, BACK (US, Canadian)		118	3-846-068-00	SPACER	
* 106	3-007-688-51	PANEL, BACK (AEP, UK)		* 119	4-924-098-91	HOLDER, PC BOARD	
107	3-724-182-01	NUT (SMALL JACK), M 6		* 120	1-664-497-11	SP BOARD	
* 108	A-2007-642-A	ANA OUT BOARD, COMPLETE		* 121	4-954-051-41	HOLDER, PC BOARD	
* 109	A-2007-651-A	ANA IN BOARD, COMPLETE		122	4-988-365-01	COVER (D)	
* 110	A-2007-712-A	MAIN BOARD, COMPLETE		123	4-812-134-11	RIVET (DIA. 3.5), NYLON	
111	1-769-542-11	WIRE (FLAT TYPE) (31 CORE)		△ T901	1-431-064-11	TRANSFORMER, POWER (US, Canadian)	
* 112	A-2007-646-A	UNBAL BOARD, COMPLETE		△ T901	1-431-065-11	TRANSFORMER, POWER (AEP, UK)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(4) CASSETTE COMPARTMENT SECTION-1

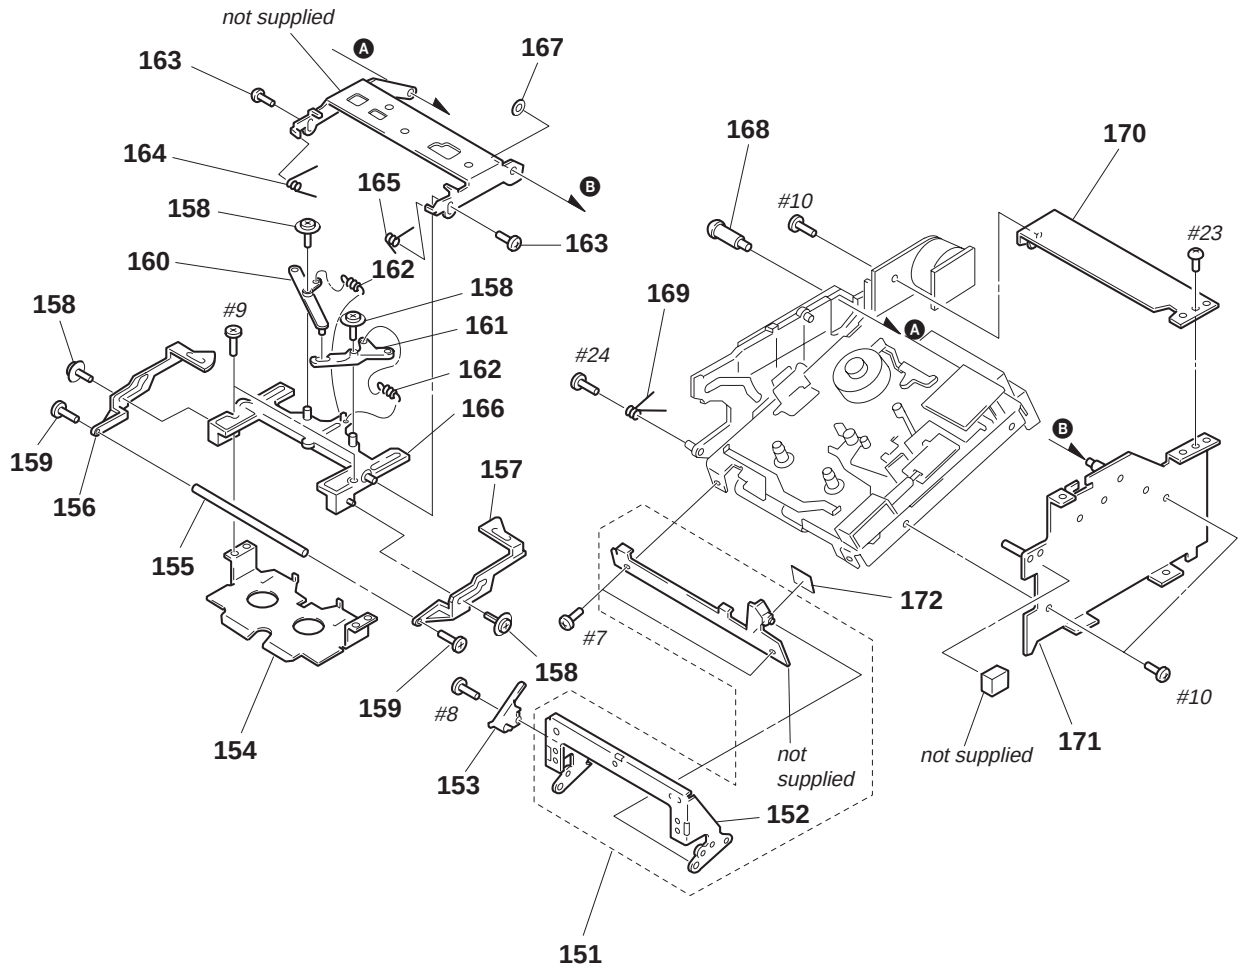


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 151	X-3371-758-1	PLATE ASSY, FULCRUM		162	3-632-859-00	SPRING, BRAKE LEVER RETURN	
152	3-373-225-01	HOLDER (WINDOW)		163	3-318-203-61	SCREW (B 1.7X4), TAPPING	
153	3-373-220-01	ARM (JOINT)		164	3-373-216-01	SPRING (L), TORSION	
154	3-373-224-01	HOLDER (LOWER)		165	3-373-215-01	SPRING (R), TORSION	
* 155	3-373-217-01	SHAFT (JOINT)		166	3-373-237-03	HOLDER (UPPER), CASSETTE	
156	3-373-223-01	SLIDER (L)		167	3-307-948-21	WASHER, NYLON	
157	3-373-222-01	SLIDER (R)		168	4-931-471-01	SCREW (STEP)	
158	3-318-201-11	SCREW (B) (1.4X3), TAPPING		169	3-373-212-01	SPRING (CASSETTE)	
159	3-345-648-61	SCREW (M 1.4), TOOTHED LOCK		* 170	3-909-720-11	REINFORCEMENT	
160	3-373-219-01	LEVER (L)		* 171	X-3371-759-1	PLATE (R) ASSY, SIDE	
161	3-373-218-01	LEVER (R)		172	3-908-780-01	SHEET	

(5) CASSETTE COMPARTMENT SECTION-2

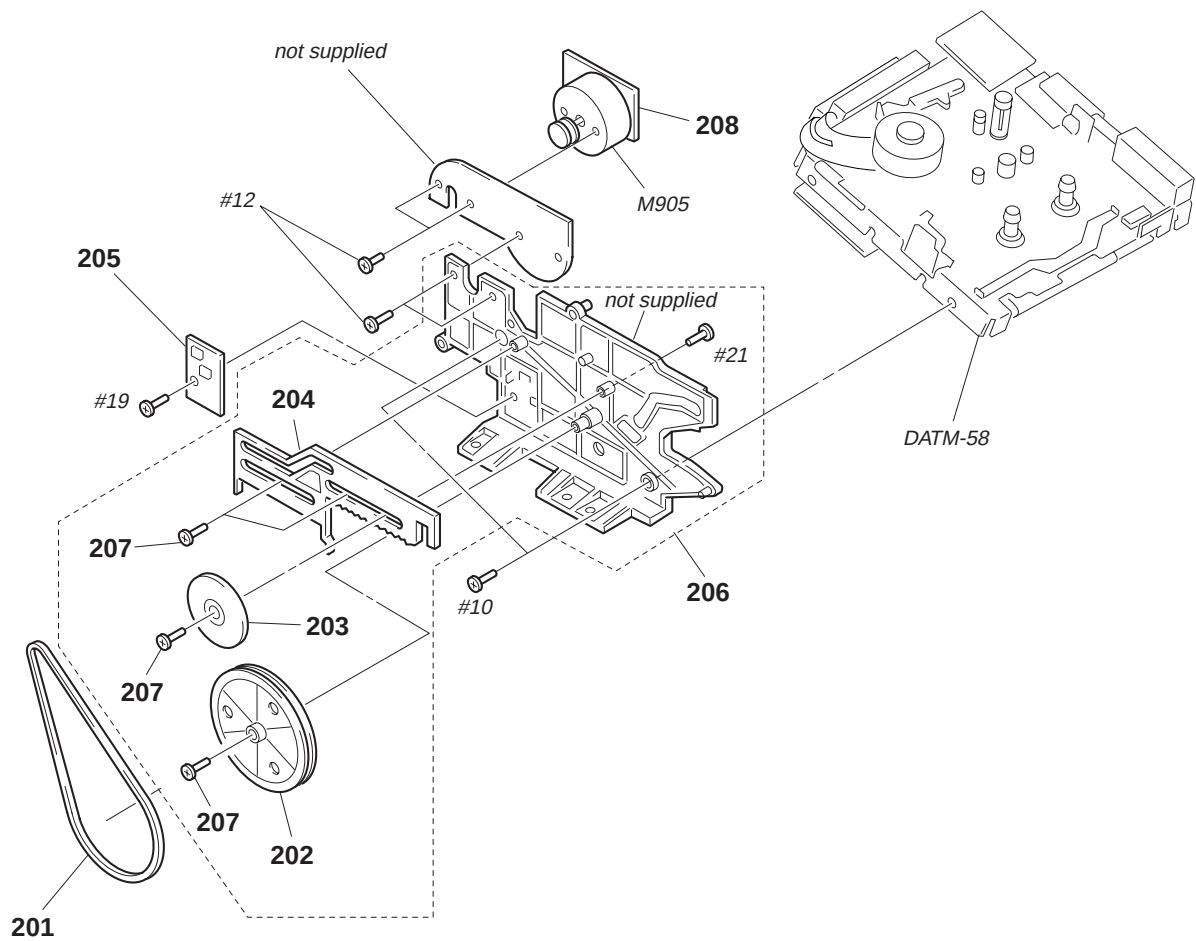

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-562-462-00	BELT, CAPSTAN		206	A-2003-907-I	CHASSIS (L) ASSY	
202	3-373-214-01	PULLEY		207	2-623-756-01	SCREW, (B 1.7X3), TAPPING	
203	3-373-213-01	GEAR, DRIVING		* 208	1-655-913-11	MOTOR BOARD	
* 204	X-3364-426-1	SLIDER ASSY		M905	X-3370-655-1	MOTOR ASSY (CASSETTE COMPARTMENT)	
* 205	1-655-916-11	SW BOARD					


**(6) MECHANISM DECK SECTION-1
(DATM-58)**

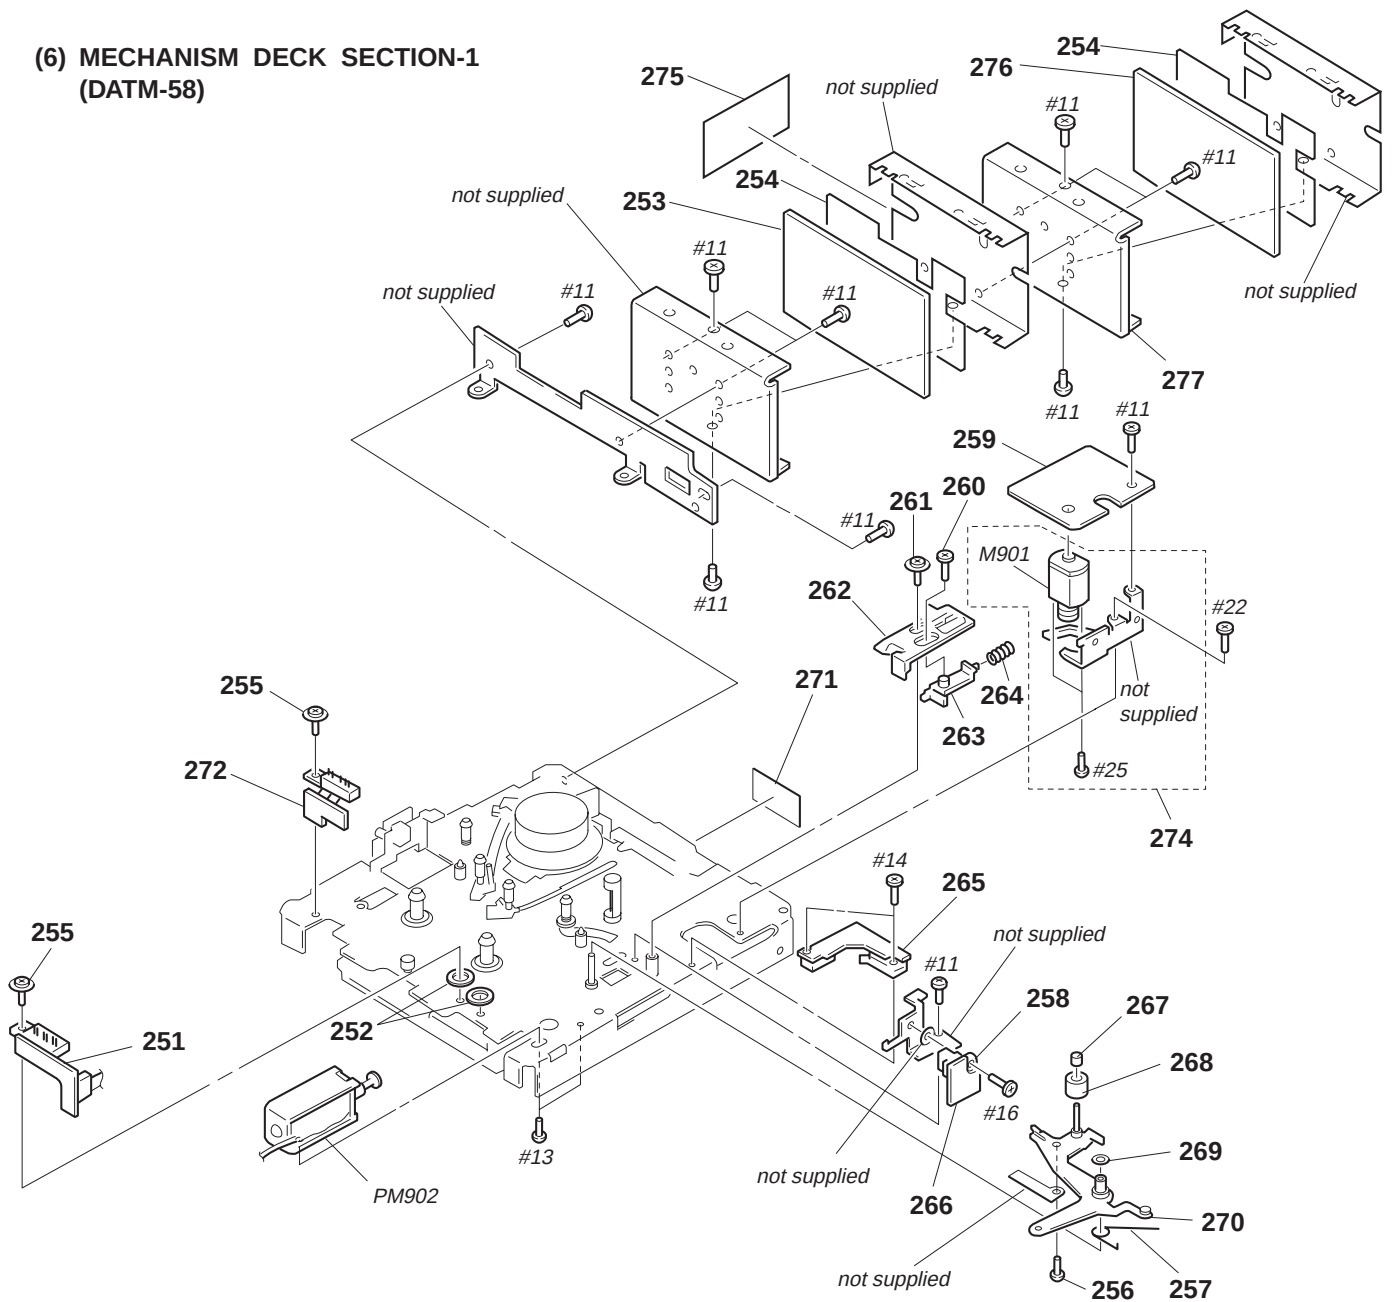

Ref. No.	Part No.	Description
* 251	1-654-393-11	REC EN BOARD
252	3-344-781-01	WASHER, POLYETHYLENE
* 253	A-2006-561-A	RF AMP BOARD, COMPLETE
* 254	3-362-537-01	SHEET (RF)
255	3-321-041-01	SCREW (M 1.7X3.5), TAPPING
256	3-704-244-01	SCREW (P 1.7X1.6)
257	3-931-541-01	SPRING (PINCH)
258	A-2004-299-A	DETECTION (R) ASSY, E
* 259	1-655-286-11	LOADING MOTOR BOARD
260	2-623-756-01	SCREW, (B 1.7X3), TAPPING
261	3-703-502-11	SCREW
262	3-362-148-01	SLIDER (PINCH)
263	3-362-149-01	SLIDER (LIMITTER)
264	3-564-035-01	SPRING, COMPRESSION


Ref. No.	Part No.	Description	Remark
* 265	1-655-285-11	LOAD SW BOARD	
* 266	1-654-391-11	T END BOARD	
267	3-337-626-01	CAP, PINCH ROLLER	
268	X-3337-610-1	PINCH ROLLER ASSY	
269	3-701-436-11	WASHER, STOPPER	
270	X-3362-021-1	LEVER (PINCH ROLLER) ASSY	
271	3-366-886-01	SHEET (RF BRACKET)	
* 272	1-654-394-12	THICK BOARD	
274	A-2004-301-A	MOTOR ASSY, CONTROL	
* 275	3-914-656-01	SHEET (RF FLEXIBLE)	
* 276	A-2006-207-A	AMPLIFIER BOARD, COMPLETE	
* 277	3-337-686-11	CASE (LOWER), SHIELD	
M901	A-2003-660-A	MOTOR ASSY (LOADING)	
PM902	1-454-522-11	SOLENOID, PLUNGER	

(7) MECHANISM DECK SECTION-2
(DATM-58)

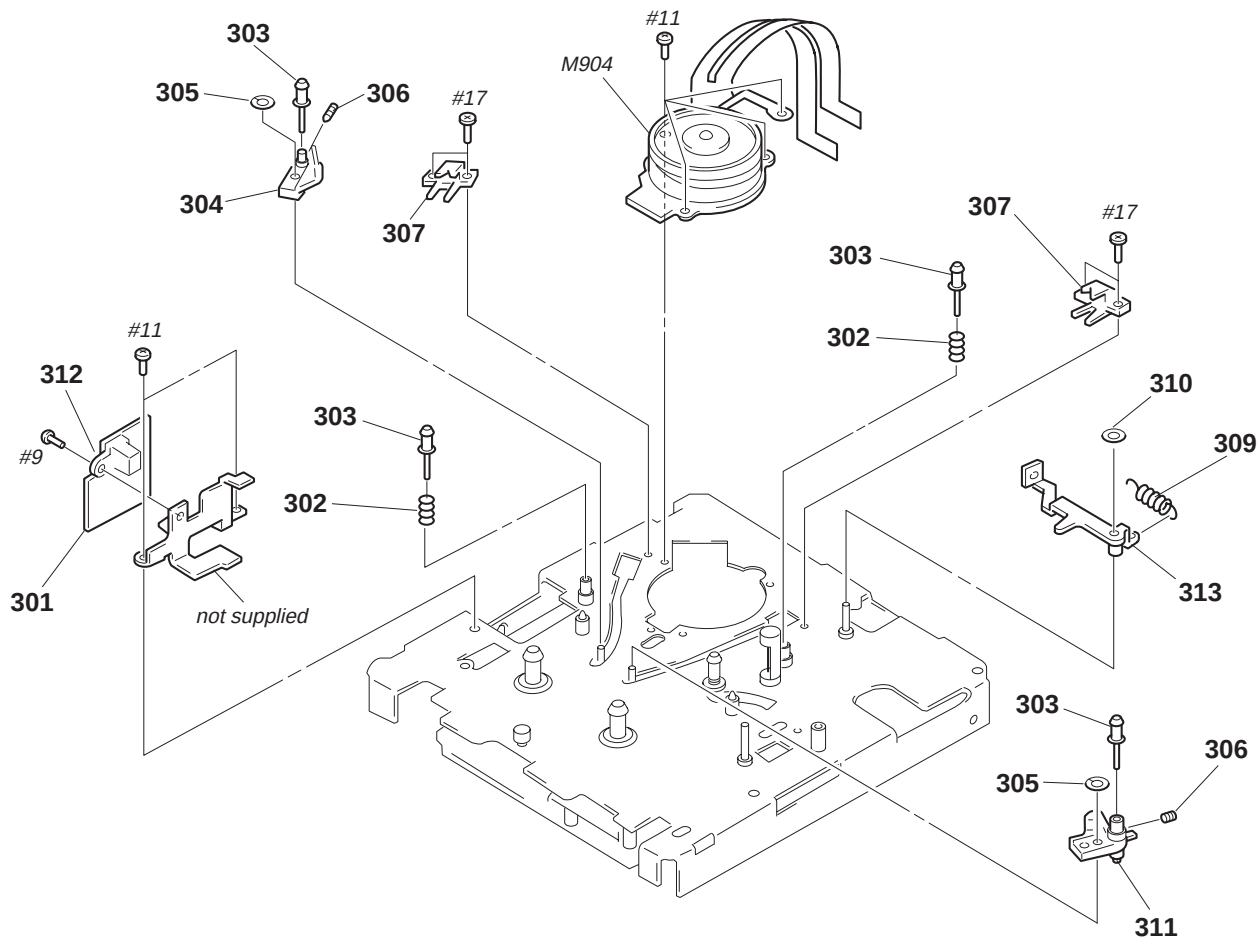

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 301	1-654-392-11	S END BOARD		309	3-929-804-01	SPRING, TENSION	
302	3-573-470-00	SPRING, COMPRESSION		310	3-701-436-11	WASHER, STOPPER	
303	X-3371-518-1	ROLLER GUIDE ASSY		311	X-3362-029-1	SLANT BLOCK (R2) ASSY	
304	X-3362-028-1	SLANT BLOCK (L2) ASSY		312	A-2004-550-A	DETECTION (L) ASSY, E	
305	3-341-752-11	WASHER, POLYETHYLENE		313	X-3371-230-1	LEVER (CLEANER) ASSY	
306	3-362-152-01	SCREW (RETURN GUIDE BOSS)		M904	8-848-549-11	DRUM ASSY DOU-15A	
307	3-912-011-01	CATCHER					

**(8) MECHANISM DECK SECTION-3
(DATM-58)**

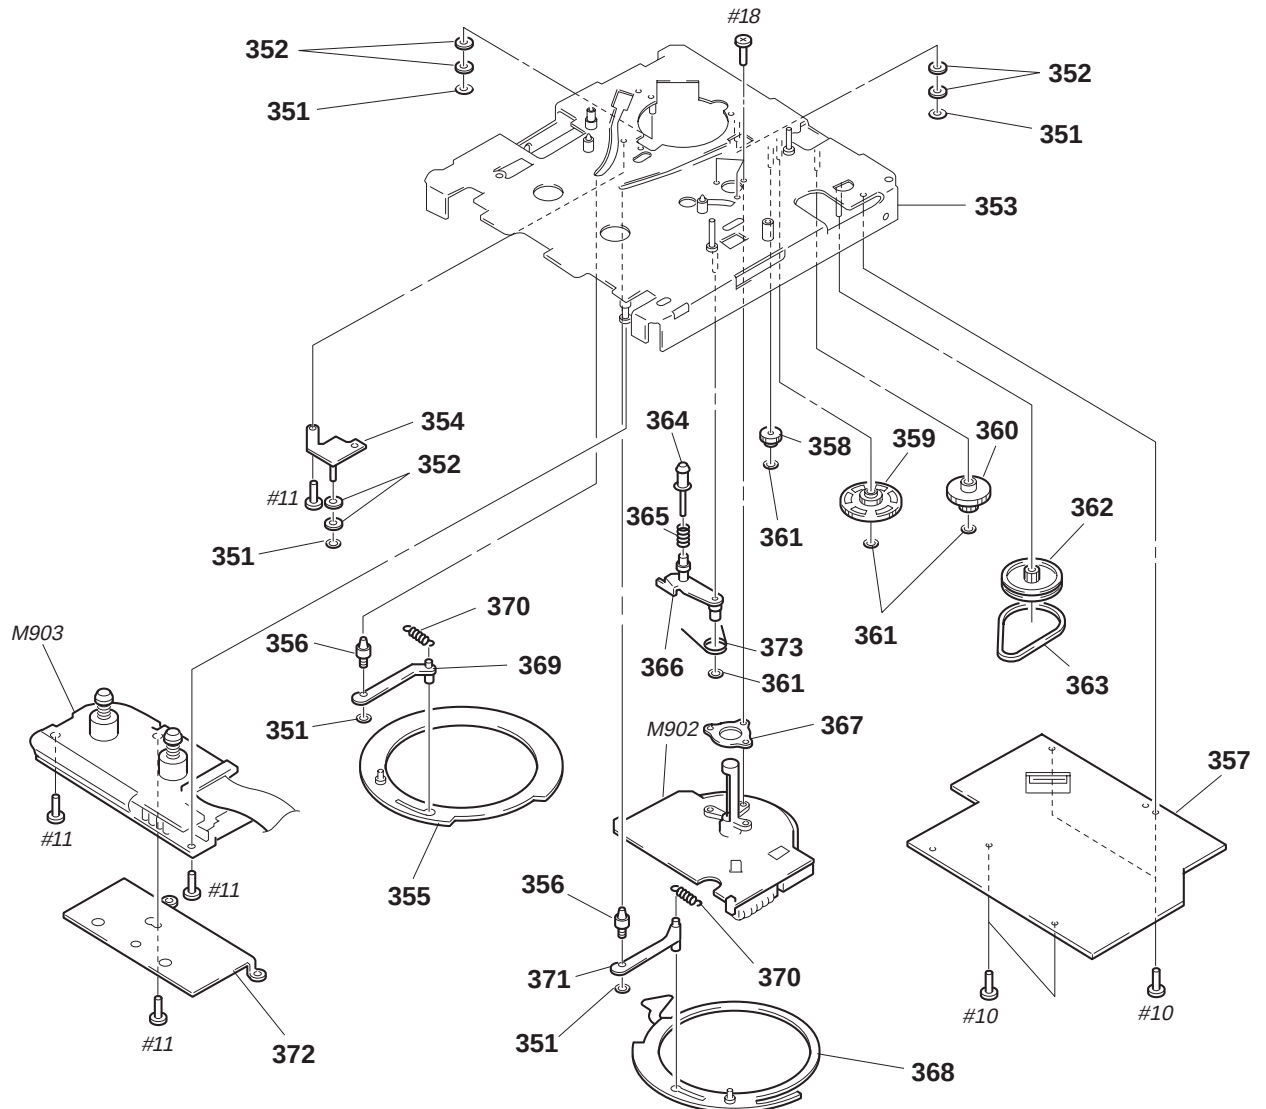

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
351	3-559-408-11	WASHER, POLYETHYLENE, DIA. 1.2		364	X-3371-518-1	ROLLER GUIDE ASSY	
352	3-337-622-01	ROLLER, RING		365	3-573-470-00	SPRING, COMPRESSION	
* 353	X-3362-030-7	CHASSIS ASSY		* 366	X-3362-020-1	LEVER (F GUIDE) ASSY	
354	X-3370-186-1	ARM (RING ROLLER) ASSY		* 367	3-362-156-01	BRACKET (CAPSTAN)	
355	X-3369-705-1	RING (L) ASSY, LOADING		368	X-3362-204-1	GEAR (LOAD) ASSY	
356	3-362-151-01	BOSS (GUIDE)		* 369	X-3362-024-1	LEVER (LOADING L) ASSY	
* 357	A-2007-321-A	DRUM DRIVE BOARD, COMPLETE		370	3-337-653-01	SPRING, TENSION	
358	3-372-619-01	GEAR		* 371	X-3362-025-1	LEVER (LOADING R) ASSY	
359	3-345-181-01	GEAR (LOADING A)		* 372	3-929-801-01	BRACKET (MD PC BOARD)	
360	3-362-155-01	GEAR (A)		373	3-375-034-01	SPRING (F GUIDE)	
361	3-701-436-11	WASHER, STOPPER		M902	8-835-306-01	MOTOR, DC U-17A (CAPSTAN)	
362	4-932-338-01	PULLEY (A)		M903	8-835-205-01	MOTOR, DC U-2A (REEL) (including PM901)	
363	4-913-325-01	BELT, TAKE-UP					

AMPLIFIER

ANA IN

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. .
uPB. . . : μ PB. . . uPC. . . : μ PC. .
uPD. . . : μ PD. .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-2006-207-A	AMPLIFIER BOARD, COMPLETE *****		Q52	8-729-421-19	TRANSISTOR UN2213	
		< CAPACITOR >		Q53	8-729-421-19	TRANSISTOR UN2213	
C51	1-124-779-00	ELECT CHIP 10uF 20% 16V		Q54	8-729-421-19	TRANSISTOR UN2213	
C52	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		Q55	8-729-421-19	TRANSISTOR UN2213	
C53	1-162-638-11	CERAMIC CHIP 1uF 16V				< RESISTOR >	
C54	1-164-299-11	CERAMIC CHIP 0.22uF 10% 25V		R51	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
C55	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		R52	1-216-077-00	METAL CHIP 15K 5% 1/10W	
				R53	1-216-077-00	METAL CHIP 15K 5% 1/10W	
C57	1-124-779-00	ELECT CHIP 10uF 20% 16V		R54	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
C58	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		R55	1-216-083-00	METAL CHIP 27K 5% 1/10W	
C59	1-164-299-11	CERAMIC CHIP 0.22uF 10% 25V					
C60	1-162-638-11	CERAMIC CHIP 1uF 16V		R56	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
C61	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		R57	1-216-084-00	METAL CHIP 30K 5% 1/10W	
				R58	1-216-085-00	METAL CHIP 33K 5% 1/10W	
C62	1-124-779-00	ELECT CHIP 10uF 20% 16V		R59	1-216-085-00	METAL CHIP 33K 5% 1/10W	
C63	1-163-005-11	CERAMIC CHIP 470PF 10% 50V		R60	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	
C64	1-163-005-11	CERAMIC CHIP 470PF 10% 50V					
C66	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V		R61	1-216-075-00	METAL CHIP 12K 5% 1/10W	
C69	1-124-779-00	ELECT CHIP 10uF 20% 16V		R62	1-216-077-00	METAL CHIP 15K 5% 1/10W	
				R63	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	

C71	1-164-005-11	CERAMIC CHIP 0.47uF 25V		*	A-2007-651-A	ANA IN BOARD, COMPLETE *****	
C72	1-163-038-91	CERAMIC CHIP 0.1uF 25V				< CAPACITOR >	
		< CONNECTOR >		C131	1-126-051-11	ELECT 47uF 20% 50V	
CN51	1-569-349-11	CONNECTOR, F.P.C 6P		C132	1-126-051-11	ELECT 47uF 20% 50V	
* CN52	1-564-725-11	PIN, CONNECTOR (SMALL TYPE) 9P		C133	1-107-597-11	CERAMIC 22PF 10% 500V	
		< IC >		C231	1-126-051-11	ELECT 47uF 20% 50V	
IC51	8-752-039-01	IC CXA1364R		C232	1-126-051-11	ELECT 47uF 20% 50V	
		< COIL >					
L51	1-408-781-00	INDUCTOR CHIP 22uH		C233	1-107-597-11	CERAMIC 22PF 10% 500V	
L52	1-408-789-21	INDUCTOR CHIP 100uH		C376	1-136-165-00	FILM 0.1uF 5% 50V	
L53	1-408-781-00	INDUCTOR CHIP 22uH		C377	1-136-165-00	FILM 0.1uF 5% 50V	
		< TRANSISTOR >				< CONNECTOR >	
Q51	8-729-421-19	TRANSISTOR UN2213		CN312	1-691-766-21	PLUG (MICRO CONNECTOR) 4P	

ANA IN

ANA OUT

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
< DIODE >							C139	1-126-024-11	ELECT	220uF	20%	25V	
D105	8-719-987-63	DIODE 1N4148M					C234	1-107-597-11	CERAMIC	22PF	10%	500V	
D106	8-719-987-63	DIODE 1N4148M					C235	1-126-051-11	ELECT	47uF	20%	50V	
D205	8-719-987-63	DIODE 1N4148M					C236	1-107-597-11	CERAMIC	22PF	10%	500V	
D206	8-719-987-63	DIODE 1N4148M					C237	1-107-597-11	CERAMIC	22PF	10%	500V	
< IC >							C238	1-126-024-11	ELECT	220uF	20%	25V	
IC323	8-759-981-96	IC RC4560D					C239	1-126-024-11	ELECT	220uF	20%	25V	
IC324	8-759-981-96	IC RC4560D					C378	1-136-165-00	FILM	0.1uF	5%	50V	
< JACK >							C379	1-136-165-00	FILM	0.1uF	5%	50V	
J305	1-750-786-11	CONNECTOR (XLR TYPE) 3P (ANALOG (BALANCE) IN)					< CONNECTOR >						
< RESISTOR >							CN311	1-691-766-41	PLUG (MICRO CONNECTOR) 4P				
R141	1-215-445-00	METAL	10K	1%	1/4W		< IC >						
R142	1-215-445-00	METAL	10K	1%	1/4W		IC103	8-759-981-96	IC RC4560D				
R143	1-215-453-00	METAL	22K	1%	1/4W		IC104	8-759-900-72	IC NE5532P				
R144	1-215-453-00	METAL	22K	1%	1/4W		IC203	8-759-981-96	IC RC4560D				
R145	1-215-445-00	METAL	10K	1%	1/4W		IC204	8-759-900-72	IC NE5532P				
R146	1-215-445-00	METAL	10K	1%	1/4W		< JACK >						
R147	1-215-413-00	METAL	470	1%	1/4W		J306	1-750-785-11	CONNECTOR (XLR TYPE) 3P (ANALOG (BALANCE) OUT)				
R148	1-215-433-00	METAL	3.3K	1%	1/4W		< RESISTOR >						
R149	1-215-397-00	METAL	100	1%	1/4W		R150	1-215-421-00	METAL	1K	1%	1/4W	
R241	1-215-445-00	METAL	10K	1%	1/4W		R151	1-215-429-00	METAL	2.2K	1%	1/4W	
R242	1-215-445-00	METAL	10K	1%	1/4W		R152	1-215-445-00	METAL	10K	1%	1/4W	
R243	1-215-453-00	METAL	22K	1%	1/4W		R153	1-215-445-00	METAL	10K	1%	1/4W	
R244	1-215-453-00	METAL	22K	1%	1/4W		R154	1-215-473-00	METAL	150K	1%	1/4W	
R245	1-215-445-00	METAL	10K	1%	1/4W		R156	1-215-453-00	METAL	22K	1%	1/4W	
R246	1-215-445-00	METAL	10K	1%	1/4W		R157	1-215-445-00	METAL	10K	1%	1/4W	
R247	1-215-413-00	METAL	470	1%	1/4W		R158	1-215-446-00	METAL	11K	1%	1/4W	
R248	1-215-433-00	METAL	3.3K	1%	1/4W		R160	1-215-457-00	METAL	33K	1%	1/4W	
R249	1-215-397-00	METAL	100	1%	1/4W		R161	1-215-445-00	METAL	10K	1%	1/4W	
< VARIABLE RESISTOR >							R162	1-215-389-00	METAL	47	1%	1/4W	
RV101	1-223-877-11	RES, VAR, CARBON 10K (ANALOG (BALANCE) IN CH-1 (L) LEVEL)					R163	1-215-389-00	METAL	47	1%	1/4W	
RV201	1-223-877-11	RES, VAR, CARBON 10K (ANALOG (BALANCE) IN CH-2 (R) LEVEL)					R164	1-215-445-00	METAL	10K	1%	1/4W	
*****							R165	1-215-445-00	METAL	10K	1%	1/4W	
*****							R166	1-215-469-00	METAL	100K	1%	1/4W	
*****							R167	1-215-469-00	METAL	100K	1%	1/4W	
*****							R250	1-215-421-00	METAL	1K	1%	1/4W	
*****							R251	1-215-429-00	METAL	2.2K	1%	1/4W	
*****							R253	1-215-445-00	METAL	10K	1%	1/4W	
*****							R254	1-215-473-00	METAL	150K	1%	1/4W	
*****							R256	1-215-453-00	METAL	22K	1%	1/4W	
*****							R257	1-215-445-00	METAL	10K	1%	1/4W	
C134	1-107-597-11	CERAMIC	22PF	10%	500V		R258	1-215-446-00	METAL	11K	1%	1/4W	
C135	1-126-051-11	ELECT	47uF	20%	50V		R260	1-215-457-00	METAL	33K	1%	1/4W	
C136	1-107-597-11	CERAMIC	22PF	10%	500V		R261	1-215-445-00	METAL	10K	1%	1/4W	
C137	1-107-597-11	CERAMIC	22PF	10%	500V		R262	1-215-389-00	METAL	47	1%	1/4W	
C138	1-126-024-11	ELECT	220uF	20%	25V		< CAPACITOR >						

ANA OUT

DIG IN

DIG OUT

DISPLAY

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R263	1-215-389-00	METAL	47	1%	1/4W	*	1-664-494-11	DIG OUT BOARD			
R264	1-215-445-00	METAL	10K	1%	1/4W		*****				
R265	1-215-445-00	METAL	10K	1%	1/4W						
R266	1-215-469-00	METAL	100K	1%	1/4W		< CAPACITOR >				
R267	1-215-469-00	METAL	100K	1%	1/4W	C807	1-136-169-00	FILM	0.22uF	5%	50V
		< VARIABLE RESISTOR >				C808	1-162-215-31	CERAMIC	47PF	5%	50V
RV102	1-223-877-11	RES, VAR, CARBON 10K (ANALOG (BALANCE) OUT CH-1 (L) LEVEL)				C809	1-162-215-31	CERAMIC	47PF	5%	50V
RV202	1-223-877-11	RES, VAR, CARBON 10K (ANALOG (BALANCE) OUT CH-2 (R) LEVEL)				C810	1-162-215-31	CERAMIC	47PF	5%	50V
*****								< JACK >			
*	A-2007-643-A	DIG IN BOARD, COMPLETE				J802	1-750-787-11	CONNECTOR (XLR TYPE) 3P (DIGITAL IN/OUT AES/EBU IN)			
		*****				*****					
		< CAPACITOR >									
C801	1-162-215-31	CERAMIC	47PF	5%	50V	*	A-2007-710-A	DISPLAY BOARD, COMPLETE			
C802	1-162-215-31	CERAMIC	47PF	5%	50V		*****				
C803	1-136-169-00	FILM	0.22uF	5%	50V						
C804	1-136-169-00	FILM	0.22uF	5%	50V		3-362-478-01	HOLDER (T), LED			
C805	1-164-159-11	CERAMIC	0.1uF		50V	*	4-932-810-11	CUSHION (FL)			
						*	4-947-170-01	HOLDER			
								< CAPACITOR >			
C806	1-136-169-00	FILM	0.22uF	5%	50V	C701	1-126-177-11	ELECT	100uF	20%	10V
		< CONNECTOR >				C702	1-162-294-31	CERAMIC	0.001uF	10%	50V
CN806	1-564-510-11	PLUG (MICRO CONNECTOR) 6P				C703	1-164-159-11	CERAMIC	0.1uF		50V
		< IC >				C704	1-164-159-11	CERAMIC	0.1uF		50V
IC801	8-759-077-32	IC SN75ALS181N				C705	1-164-159-11	CERAMIC	0.1uF		50V
		< JACK >				C706	1-164-159-11	CERAMIC	0.1uF		50V
J801	1-750-788-11	CONNECTOR (XLR TYPE) 3P (DIGITAL IN/OUT AES/EBU OUT)				C707	1-164-159-11	CERAMIC	0.1uF		50V
		< RESISTOR >				C708	1-164-159-11	CERAMIC	0.1uF		50V
R801	1-249-409-11	CARBON	220	5%	1/4W	C709	1-164-159-11	CERAMIC	0.1uF		50V
R802	1-249-409-11	CARBON	220	5%	1/4W	C710	1-164-159-11	CERAMIC	0.1uF		50V
R803	1-247-807-31	CARBON	100	5%	1/4W	C711	1-164-159-11	CERAMIC	0.1uF		50V
R804	1-247-807-31	CARBON	100	5%	1/4W	C712	1-164-159-11	CERAMIC	0.1uF		50V
R805	1-249-427-11	CARBON	6.8K	5%	1/4W	C713	1-164-159-11	CERAMIC	0.1uF		50V
						C714	1-164-159-11	CERAMIC	0.1uF		50V
R806	1-249-393-11	CARBON	10	5%	1/4W	C715	1-164-159-11	CERAMIC	0.1uF		50V
R807	1-249-393-11	CARBON	10	5%	1/4W	C716	1-164-159-11	CERAMIC	0.1uF		50V
		< TRANSFORMER >						< CONNECTOR >			
T801	1-437-194-21	TRANSFORMER, PULSE				CN701	1-568-860-11	SOCKET, CONNECTOR 17P			
T802	1-437-194-21	TRANSFORMER, PULSE				* CN702	1-564-500-11	PIN, CONNECTOR 7P			
*****								< DIODE >			
						D701	8-719-303-02	LED SEL2510C-D (PLAY ▶)			
						D702	8-719-301-52	LED SEL2810A-C (PAUSE ⏸)			
						D703	8-719-301-39	LED SEL2210S (REC ●)			
						D704	8-719-301-52	LED SEL2810A-C (MENU)			
								< FLUORESCEN INDICATOR YUBE >			
						FL701	1-517-382-11	INDICATOR TUBE. FLUORESCENT			

DISPLAY

Ref. No.	Part No.	Description					Remark	Ref. No.	Part No.	Description					Remark
< IC >								R743	1-249-427-11	CARBON	6.8K	5%	1/4W		
IC701	8-752-882-29	IC CXP82320-077Q						R746	1-249-415-11	CARBON	680	5%	1/4W		
IC702	8-759-995-09	IC MSM6338RS						R747	1-249-417-11	CARBON	1K	5%	1/4W		
IC703	8-759-916-54	IC SN74HC174AN						R748	1-249-425-11	CARBON	4.7K	5%	1/4W		
IC704	8-759-916-12	IC SN74HC00AN						R751	1-249-421-11	CARBON	2.2K	5%	1/4W		
IC705	8-759-373-49	IC NJL54H400						R752	1-249-421-11	CARBON	2.2K	5%	1/4W		
< TRANSISTOR >								R753	1-249-421-11	CARBON	2.2K	5%	1/4W		
								R754	1-249-421-11	CARBON	2.2K	5%	1/4W		
Q701	8-729-620-05	TRANSISTOR 2SC2603-EF						R755	1-249-421-11	CARBON	2.2K	5%	1/4W		
Q702	8-729-620-05	TRANSISTOR 2SC2603-EF						R756	1-249-421-11	CARBON	2.2K	5%	1/4W		
Q703	8-729-620-05	TRANSISTOR 2SC2603-EF						R763	1-249-407-11	CARBON	150	5%	1/4W		
Q704	8-729-900-80	TRANSISTOR DTC114ES													
Q705	8-729-900-80	TRANSISTOR DTC114ES						R764	1-249-407-11	CARBON	150	5%	1/4W		
								R765	1-249-407-11	CARBON	150	5%	1/4W		
Q706	8-729-900-80	TRANSISTOR DTC114ES						R766	1-249-407-11	CARBON	150	5%	1/4W		
Q707	8-729-900-80	TRANSISTOR DTC114ES						R769	1-249-429-11	CARBON	10K	5%	1/4W		
								R770	1-249-429-11	CARBON	10K	5%	1/4W		
< RESISTOR >								R771	1-249-429-11	CARBON	10K	5%	1/4W		
R701	1-249-427-11	CARBON	6.8K	5%	1/4W		R772	1-249-429-11	CARBON	10K	5%	1/4W			
R702	1-249-427-11	CARBON	6.8K	5%	1/4W		R773	1-249-417-11	CARBON	1K	5%	1/4W			
R703	1-249-427-11	CARBON	6.8K	5%	1/4W		R774	1-249-429-11	CARBON	10K	5%	1/4W			
R704	1-249-427-11	CARBON	6.8K	5%	1/4W		R775	1-249-429-11	CARBON	10K	5%	1/4W			
R705	1-249-427-11	CARBON	6.8K	5%	1/4W										
								R776	1-249-435-11	CARBON	33K	5%	1/4W		
R706	1-249-427-11	CARBON	6.8K	5%	1/4W		R777	1-249-417-11	CARBON	1K	5%	1/4W			
R707	1-249-427-11	CARBON	6.8K	5%	1/4W		R778	1-249-435-11	CARBON	33K	5%	1/4W			
R708	1-249-427-11	CARBON	6.8K	5%	1/4W		R951	1-249-441-11	CARBON	100K	5%	1/4W			
R709	1-249-415-11	CARBON	680	5%	1/4W		R952	1-249-441-11	CARBON	100K	5%	1/4W			
R710	1-249-417-11	CARBON	1K	5%	1/4W										
								R953	1-249-441-11	CARBON	100K	5%	1/4W		
R711	1-249-419-11	CARBON	1.5K	5%	1/4W		R954	1-249-441-11	CARBON	100K	5%	1/4W			
R712	1-247-843-11	CARBON	3.3K	5%	1/4W		R955	1-249-441-11	CARBON	100K	5%	1/4W			
R713	1-249-425-11	CARBON	4.7K	5%	1/4W		R956	1-249-441-11	CARBON	100K	5%	1/4W			
R714	1-249-429-11	CARBON	10K	5%	1/4W		R957	1-249-441-11	CARBON	100K	5%	1/4W			
R715	1-249-435-11	CARBON	33K	5%	1/4W										
								R958	1-249-441-11	CARBON	100K	5%	1/4W		
R716	1-249-415-11	CARBON	680	5%	1/4W		R959	1-249-441-11	CARBON	100K	5%	1/4W			
R717	1-249-417-11	CARBON	1K	5%	1/4W		R960	1-249-441-11	CARBON	100K	5%	1/4W			
R718	1-249-419-11	CARBON	1.5K	5%	1/4W		R961	1-249-441-11	CARBON	100K	5%	1/4W			
R719	1-247-843-11	CARBON	3.3K	5%	1/4W		R962	1-249-441-11	CARBON	100K	5%	1/4W			
R720	1-249-425-11	CARBON	4.7K	5%	1/4W										
								R963	1-249-441-11	CARBON	100K	5%	1/4W		
R721	1-249-429-11	CARBON	10K	5%	1/4W		R964	1-249-441-11	CARBON	100K	5%	1/4W			
R722	1-249-435-11	CARBON	33K	5%	1/4W		R965	1-249-441-11	CARBON	100K	5%	1/4W			
R723	1-249-415-11	CARBON	680	5%	1/4W		R966	1-249-441-11	CARBON	100K	5%	1/4W			
R724	1-249-417-11	CARBON	1K	5%	1/4W		R967	1-249-441-11	CARBON	100K	5%	1/4W			
R725	1-249-419-11	CARBON	1.5K	5%	1/4W										
								R968	1-249-441-11	CARBON	100K	5%	1/4W		
R726	1-247-843-11	CARBON	3.3K	5%	1/4W		R969	1-249-441-11	CARBON	100K	5%	1/4W			
R727	1-249-425-11	CARBON	4.7K	5%	1/4W		R970	1-249-441-11	CARBON	100K	5%	1/4W			
R730	1-249-415-11	CARBON	680	5%	1/4W		R971	1-249-441-11	CARBON	100K	5%	1/4W			
R731	1-249-417-11	CARBON	1K	5%	1/4W		R972	1-249-441-11	CARBON	100K	5%	1/4W			
R732	1-249-419-11	CARBON	1.5K	5%	1/4W										
								R973	1-249-441-11	CARBON	100K	5%	1/4W		
R733	1-247-843-11	CARBON	3.3K	5%	1/4W		R974	1-249-441-11	CARBON	100K	5%	1/4W			
R734	1-249-425-11	CARBON	4.7K	5%	1/4W		R975	1-249-441-11	CARBON	100K	5%	1/4W			
R737	1-249-427-11	CARBON	6.8K	5%	1/4W		R976	1-249-441-11	CARBON	100K	5%	1/4W			
R740	1-249-427-11	CARBON	6.8K	5%	1/4W		R977	1-249-441-11	CARBON	100K	5%	1/4W			

DISPLAY

DRUM DRIVE

Ref. No.	Part No.	Description	Remark
R978	1-249-441-11	CARBON 100K 5% 1/4W	
R979	1-249-441-11	CARBON 100K 5% 1/4W	
R980	1-249-441-11	CARBON 100K 5% 1/4W	
R981	1-249-441-11	CARBON 100K 5% 1/4W	
R982	1-249-441-11	CARBON 100K 5% 1/4W	
R983	1-249-441-11	CARBON 100K 5% 1/4W	
R984	1-249-441-11	CARBON 100K 5% 1/4W	
R985	1-249-441-11	CARBON 100K 5% 1/4W	
R986	1-249-441-11	CARBON 100K 5% 1/4W	
R987	1-249-441-11	CARBON 100K 5% 1/4W	
R988	1-249-441-11	CARBON 100K 5% 1/4W	
R989	1-249-441-11	CARBON 100K 5% 1/4W	
R990	1-249-441-11	CARBON 100K 5% 1/4W	
< SWITCH >			
S701	1-554-937-11	SWITCH, KEY BOARD (REW ◀◀)	
S702	1-554-937-11	SWITCH, KEY BOARD (FF ▶▶)	
S703	1-554-937-11	SWITCH, KEY BOARD (REC ●)	
S704	1-554-937-11	SWITCH, KEY BOARD (PAUSE ■■)	
S705	1-554-937-11	SWITCH, KEY BOARD (REC MUTE ○)	
S706	1-554-937-11	SWITCH, KEY BOARD (MENU)	
S707	1-554-937-11	SWITCH, KEY BOARD (SET)	
S708	1-554-937-11	SWITCH, KEY BOARD (OPEN/CLOSE ▲)	
S709	1-554-937-11	SWITCH, KEY BOARD (STOP ■)	
S710	1-554-937-11	SWITCH, KEY BOARD (PLAY ▶)	
S711	1-554-937-11	SWITCH, KEY BOARD (AMS PREVIOUS ◀◀)	
S712	1-554-937-11	SWITCH, KEY BOARD (AMS NEXT ▶▶)	
S713	1-554-937-11	SWITCH, KEY BOARD (MARK)	
S714	1-554-937-11	SWITCH, KEY BOARD (SKIP PLAY)	
S715	1-554-937-11	SWITCH, KEY BOARD (LOCATE)	
S716	1-554-937-11	SWITCH, KEY BOARD (REPEAT)	
S717	1-554-937-11	SWITCH, KEY BOARD (START-ID/ERASE)	
S718	1-554-937-11	SWITCH, KEY BOARD (START-ID/WRITE)	
S719	1-554-937-11	SWITCH, KEY BOARD (START-ID/REHEARSAL)	
S720	1-554-937-11	SWITCH, KEY BOARD (START-ID/AUTO)	
S721	1-554-937-11	SWITCH, KEY BOARD (FADER)	
S722	1-554-937-11	SWITCH, KEY BOARD (INPUT MONITOR)	
S723	1-554-937-11	SWITCH, KEY BOARD (SKIP-ID/ERASE)	
S724	1-554-937-11	SWITCH, KEY BOARD (SKIP-ID/WRITE)	
S725	1-554-937-11	SWITCH, KEY BOARD (SKIP-ID/REHEARSAL)	
S726	1-554-937-11	SWITCH, KEY BOARD (RENUMBER)	
S727	1-554-937-11	SWITCH, KEY BOARD (MODE)	
S728	1-554-937-11	SWITCH, KEY BOARD (COUNTER RESET)	
S729	1-554-937-11	SWITCH, KEY BOARD (MAGIN RESET)	
< VIBRATOR >			
X701	1-577-359-21	VIBRATOR, CERAMIC (4.19MHZ)	

Ref. No.	Part No.	Description	Remark
*	A-2007-321-A	DRUM DRIVE BOARD, COMPLETE *****	
< CAPACITOR >			
C1	1-124-257-00	ELECT 2.2uF 20% 50V	
C3	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C5	1-126-923-11	ELECT 220uF 20% 10V	
C6	1-126-923-11	ELECT 220uF 20% 10V	
C7	1-126-923-11	ELECT 220uF 20% 10V	
C8	1-162-302-11	CERAMIC 0.0022uF 30% 16V	
C9	1-162-302-11	CERAMIC 0.0022uF 30% 16V	
C10	1-162-286-31	CERAMIC 220PF 10% 50V	
C11	1-162-302-11	CERAMIC 0.0022uF 30% 16V	
C12	1-162-302-11	CERAMIC 0.0022uF 30% 16V	
C13	1-126-096-11	ELECT 10uF 20% 35V	
C14	1-126-923-11	ELECT 220uF 20% 10V	
C15	1-162-306-11	CERAMIC 0.01uF 20% 16V	
< CONNECTOR >			
* CN1	1-568-845-11	SOCKET, CONNECTOR 31P	
CN2	1-691-461-11	PIN, CONNECTOR (PC BOARD) 5P	
CN3	1-564-505-11	PLUG, CONNECTOR 2P	
CN3	1-764-325-11	PIN, CONNECTOR (PCB)(V TYPE)2P	
* CN4	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P	
* CN5	1-564-515-11	PLUG, CONNECTOR 12P	
* CN6	1-691-465-11	PIN, CONNECTOR (PC BOARD) 9P	
* CN7	1-568-369-11	HOUSING,CONNECTOR(PC BOARD) 8P	
* CN8	1-506-503-11	PIN, CONNECTOR 9P	
* CN9	1-564-337-00	PIN, CONNECTOR 3P	
* CN11	1-564-337-61	PIN, CONNECTOR 3P	
* CN12	1-564-336-00	PIN, CONNECTOR 2P	
< DIODE >			
D2	8-719-200-82	DIODE 11ES2	
D3	8-719-200-82	DIODE 11ES2	
< IC >			
IC1	8-759-135-80	IC uPC358C	
IC2	8-759-633-65	IC M54641L	
IC3	8-752-060-73	IC CX20115A-T4	
< GROUND TERMINAL >			
LUG1	1-537-770-21	TERMINAL BOARD, GROUND	
< TRANSISTOR >			
Q1	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q2	8-729-801-84	TRANSISTOR 2SB1013-4	
Q3	8-729-801-93	TRANSISTOR 2SD1387	

DRUM DRIVE

HP

INPUT SW

LOAD SW

LOADING MOTOR

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark	
< RESISTOR >							< COIL >							
R1	1-247-843-11	CARBON	3.3K	5%	1/4W		L101	1-410-396-41	INDUCTOR	0.45uH				
R2	1-249-429-11	CARBON	10K	5%	1/4W		L201	1-410-396-41	INDUCTOR	0.45uH				
R3	1-249-407-11	CARBON	150	5%	1/4W		< RESISTOR >							
R4	1-247-843-11	CARBON	3.3K	5%	1/4W		R132	1-249-435-11	CARBON	33K	5%	1/4W		
R5	1-249-421-11	CARBON	2.2K	5%	1/4W		R133	1-249-433-11	CARBON	22K	5%	1/4W		
R6	1-249-435-11	CARBON	33K	5%	1/4W		R134	1-249-425-11	CARBON	4.7K	5%	1/4W		
R7	1-247-807-31	CARBON	100	5%	1/4W		R135	1-247-807-31	CARBON	100	5%	1/4W		
R8	1-249-417-11	CARBON	1K	5%	1/4W		R232	1-249-435-11	CARBON	33K	5%	1/4W		
R9	1-249-429-11	CARBON	10K	5%	1/4W		R233	1-249-433-11	CARBON	22K	5%	1/4W		
R11	1-249-429-11	CARBON	10K	5%	1/4W		R234	1-249-425-11	CARBON	4.7K	5%	1/4W		
R12	1-249-417-11	CARBON	1K	5%	1/4W		R235	1-247-807-31	CARBON	100	5%	1/4W		
R14	1-249-441-11	CARBON	100K	5%	1/4W		< VARIABLE RESISTOR >							
R15	1-249-441-11	CARBON	100K	5%	1/4W		RV302	1-225-374-11	RES, VAR, CARBON 20K/20K (PHONE LEVEL)					
R16	1-249-441-11	CARBON	100K	5%	1/4W		*****							
R17	1-249-441-11	CARBON	100K	5%	1/4W		* 1-664-484-11	INPUT SW BOARD						
R18	1-249-409-11	CARBON	220	5%	1/4W		*****							
R19	1-249-409-11	CARBON	220	5%	1/4W		< CONNECTOR >							
R20	1-249-401-11	CARBON	47	5%	1/4W		* CN704	1-564-339-00	PIN, CONNECTOR 5P					
R21	1-249-429-11	CARBON	10K	5%	1/4W		< RESISTOR >							
R22	1-249-433-11	CARBON	22K	5%	1/4W		R738	1-249-431-11	CARBON	15K	5%	1/4W		
R23	1-249-403-11	CARBON	68	5%	1/4W		R741	1-249-431-11	CARBON	15K	5%	1/4W		
R24	1-249-403-11	CARBON	68	5%	1/4W		R742	1-249-435-11	CARBON	33K	5%	1/4W		
R25	1-247-843-11	CARBON	3.3K	5%	1/4W		R744	1-249-431-11	CARBON	15K	5%	1/4W		
R26	1-247-843-11	CARBON	3.3K	5%	1/4W		R749	1-249-431-11	CARBON	15K	5%	1/4W		
R27	1-249-419-11	CARBON	1.5K	5%	1/4W		< SWITCH >							
*****							S732	1-572-269-11	SWITCH, SLIDE (INPUT)					
* 1-664-486-11	HP BOARD	*****					S733	1-572-269-11	SWITCH, SLIDE (ANALOG IN)					
< CAPACITOR >							S734	1-572-268-11	SWITCH, SLIDE (REC MODE)					
C122	1-102-114-00	CERAMIC	470PF	10%	50V		S735	1-572-269-11	SWITCH, SLIDE (SBM)					
C222	1-102-114-00	CERAMIC	470PF	10%	50V		*****							
C374	1-126-024-11	ELECT	220uF	20%	25V		* 1-655-285-11	LOAD SW BOARD						
C375	1-126-024-11	ELECT	220uF	20%	25V		*****							
< CONNECTOR >							< SWITCH >							
CN320	1-691-768-11	PLUG (MICRO CONNECTOR) 6P					S902	1-571-489-11	SWITCH, SLIDE (UNLOAD)					
< FUSIBLE >							S903	1-571-489-11	SWITCH, SLIDE (LOAD)					
△FR301	1-212-857-00	FUSIBLE	10	5%	1/4W F		*****							
△FR302	1-212-857-00	FUSIBLE	10	5%	1/4W F		* 1-655-286-11	LOADING MOTOR BOARD						
< IC >							*****							
IC321	8-759-981-96	IC RC4560D					< CAPACITOR >							
< JACK >							C999	1-136-165-00	FILM	0.1uF	5%	50V		
J304	1-565-327-11	JACK, LARGE TYPE 1P (PHONES)												

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

LOADING MOTOR

MAIN

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
< CONNECTOR >							C223	1-126-023-11	ELECT	100uF	20%	25V	
* CN919	1-564-496-11	PIN, CONNECTOR 3P					C240	1-126-024-11	ELECT	220uF	20%	25V	
* CN920	1-564-497-11	PIN, CONNECTOR 4P					C301	1-124-997-11	ELECT	470uF	20%	10V	
*****							C302	1-124-997-11	ELECT	470uF	20%	10V	
* A-2007-712-A	MAIN BOARD, COMPLETE (Including AUDIO BOARD and DIGITAL BOARD) *****						C303	1-136-165-00	FILM	0.1uF	5%	50V	
							C304	1-136-165-00	FILM	0.1uF	5%	50V	
							C305	1-136-165-00	FILM	0.1uF	5%	50V	
							C306	1-126-023-11	ELECT	100uF	20%	25V	
							C307	1-136-165-00	FILM	0.1uF	5%	50V	
	1-533-293-11	FUSE HOLDER											
	1-550-414-21	HOLDER, BATTERY					C308	1-126-023-11	ELECT	100uF	20%	25V	
	2-259-121-01	SCREW, TR					C309	1-162-294-31	CERAMIC	0.001uF	10%	50V	
* 3-309-144-21	HEAT SINK						C310	1-162-294-31	CERAMIC	0.001uF	10%	50V	
	7-685-871-01	SCREW +BVTT 3X6 (S)					C311	1-164-159-11	CERAMIC	0.1uF		50V	
							C312	1-124-997-11	ELECT	470uF	20%	10V	
< CAPACITOR >													
C102	1-126-023-11	ELECT	100uF	20%	25V		C313	1-136-165-00	FILM	0.1uF	5%	50V	
C104	1-130-481-00	MYLAR	0.0068uF	5%	50V		C314	1-164-159-11	CERAMIC	0.1uF		50V	
C105	1-126-023-11	ELECT	100uF	20%	25V		C315	1-162-195-31	CERAMIC	4.7PF	10%	50V	
C106	1-136-165-00	FILM	0.1uF	5%	50V		C316	1-162-195-31	CERAMIC	4.7PF	10%	50V	
C107	1-136-165-00	FILM	0.1uF	5%	50V		C317	1-162-196-31	CERAMIC	5.6PF	10%	50V	
C108	1-136-165-00	FILM	0.1uF	5%	50V		C318	1-162-196-31	CERAMIC	5.6PF	10%	50V	
C109	1-136-165-00	FILM	0.1uF	5%	50V		C319	1-164-159-11	CERAMIC	0.1uF		50V	
C110	1-106-343-00	MYLAR	1000PF	5%	200V		C320	1-124-564-11	ELECT	4700uF	20%	25V	
C111	1-130-467-00	MYLAR	470PF	5%	50V		C321	1-124-564-11	ELECT	4700uF	20%	25V	
C112	1-130-467-00	MYLAR	470PF	5%	50V		C322	1-136-165-00	FILM	0.1uF	5%	50V	
C113	1-110-339-11	MYLAR	220PF	5%	50V		C323	1-136-165-00	FILM	0.1uF	5%	50V	
C114	1-110-339-11	MYLAR	220PF	5%	50V		C324	1-126-027-11	ELECT	1000uF	20%	25V	
C115	1-106-359-00	MYLAR	4700PF	5%	200V		C325	1-126-027-11	ELECT	1000uF	20%	25V	
C116	1-106-343-00	MYLAR	1000PF	5%	200V		C326	1-124-997-11	ELECT	470uF	20%	10V	
C117	1-126-023-11	ELECT	100uF	20%	25V		C327	1-136-165-00	FILM	0.1uF	5%	50V	
C118	1-136-165-00	FILM	0.1uF	5%	50V		C328	1-126-023-11	ELECT	100uF	20%	25V	
C119	1-136-165-00	FILM	0.1uF	5%	50V		C329	1-136-165-00	FILM	0.1uF	5%	50V	
C123	1-126-023-11	ELECT	100uF	20%	25V		C330	1-126-023-11	ELECT	100uF	20%	25V	
C140	1-126-024-11	ELECT	220uF	20%	25V		C331	1-136-165-00	FILM	0.1uF	5%	50V	
C202	1-126-023-11	ELECT	100uF	20%	25V		C332	1-136-165-00	FILM	0.1uF	5%	50V	
C204	1-130-481-00	MYLAR	0.0068uF	5%	50V		C333	1-126-013-11	ELECT	1000uF	20%	16V	
C205	1-126-023-11	ELECT	100uF	20%	25V		C334	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C206	1-136-165-00	FILM	0.1uF	5%	50V		C335	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C207	1-136-165-00	FILM	0.1uF	5%	50V		C337	1-164-159-11	CERAMIC	0.1uF		50V	
C208	1-136-165-00	FILM	0.1uF	5%	50V		C338	1-126-023-11	ELECT	100uF	20%	25V	
C209	1-136-165-00	FILM	0.1uF	5%	50V		C339	1-164-159-11	CERAMIC	0.1uF		50V	
C210	1-106-343-00	MYLAR	1000PF	5%	200V		C340	1-136-169-00	FILM	0.22uF	5%	50V	
C211	1-130-467-00	MYLAR	470PF	5%	50V		C341	1-136-153-00	FILM	0.01uF	5%	50V	
C212	1-130-467-00	MYLAR	470PF	5%	50V		C342	1-162-219-31	CERAMIC	68PF	5%	50V	
C213	1-110-339-11	MYLAR	220PF	5%	50V		C343	1-162-199-31	CERAMIC	10PF	5%	50V	
C214	1-110-339-11	MYLAR	220PF	5%	50V		C344	1-162-199-31	CERAMIC	10PF	5%	50V	
C215	1-106-359-00	MYLAR	4700PF	5%	200V		C345	1-126-048-81	ELECT	10uF	20%	50V	
C216	1-106-343-00	MYLAR	1000PF	5%	200V		C346	1-164-159-11	CERAMIC	0.1uF		50V	
C217	1-126-023-11	ELECT	100uF	20%	25V		C347	1-162-215-31	CERAMIC	47PF	5%	50V	
C218	1-136-165-00	FILM	0.1uF	5%	50V		C348	1-136-161-00	FILM	0.047uF	5%	50V	
C219	1-136-165-00	FILM	0.1uF	5%	50V		C350	1-126-026-11	ELECT	470uF	20%	25V	
							C351	1-126-026-11	ELECT	470uF	20%	25V	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C352	1-164-159-11	CERAMIC	0.1uF		50V	C542	1-164-159-11	CERAMIC	0.1uF		50V
C353	1-164-159-11	CERAMIC	0.1uF		50V	C543	1-126-925-11	ELECT	470uF	20%	10V
C356	1-164-159-11	CERAMIC	0.1uF		50V						
C359	1-126-025-11	ELECT	330uF	20%	16V	C544	1-162-294-31	CERAMIC	0.001uF	10%	50V
C360	1-126-025-11	ELECT	330uF	20%	16V	C545	1-162-294-31	CERAMIC	0.001uF	10%	50V
C364	1-164-159-11	CERAMIC	0.1uF		50V	C546	1-162-294-31	CERAMIC	0.001uF	10%	50V
C369	1-164-159-11	CERAMIC	0.1uF		50V	C547	1-162-294-31	CERAMIC	0.001uF	10%	50V
C370	1-164-159-11	CERAMIC	0.1uF		50V	C548	1-162-294-31	CERAMIC	0.001uF	10%	50V
C371	1-164-159-11	CERAMIC	0.1uF		50V	C549	1-162-294-31	CERAMIC	0.001uF	10%	50V
C372	1-164-159-11	CERAMIC	0.1uF		50V	C550	1-164-159-11	CERAMIC	0.1uF		50V
C501	1-126-017-11	ELECT	6800uF	20%	16V	C552	1-162-207-31	CERAMIC	22PF	5%	50V
C502	1-126-946-11	ELECT	6800uF	20%	25V	C553	1-162-207-31	CERAMIC	22PF	5%	50V
C503	1-126-927-11	ELECT	2200uF	20%	10V	C554	1-162-203-31	CERAMIC	15PF	5%	50V
C504	1-126-926-11	ELECT	1000uF	20%	10V	C555	1-162-203-31	CERAMIC	15PF	5%	50V
C505	1-126-925-11	ELECT	470uF	20%	10V	C556	1-164-159-11	CERAMIC	0.1uF		50V
C506	1-126-925-11	ELECT	470uF	20%	10V	C557	1-164-159-11	CERAMIC	0.1uF		50V
C507	1-164-159-11	CERAMIC	0.1uF		50V	C558	1-164-159-11	CERAMIC	0.1uF		50V
C508	1-128-553-11	ELECT	220uF	20%	63V	C559	1-136-153-00	FILM	0.01uF	5%	50V
C509	1-126-968-11	ELECT	100uF	20%	50V	C560	1-164-159-11	CERAMIC	0.1uF		50V
C510	1-164-159-11	CERAMIC	0.1uF		50V	C561	1-162-211-31	CERAMIC	33PF	5%	50V
C511	1-164-159-11	CERAMIC	0.1uF		50V	C562	1-136-153-00	FILM	0.01uF	5%	50V
C512	1-162-294-31	CERAMIC	0.001uF	10%	50V	C563	1-126-965-11	ELECT	22uF	20%	50V
C513	1-162-302-11	CERAMIC	0.0022uF	30%	16V	C564	1-136-153-00	FILM	0.01uF	5%	50V
C514	1-162-286-31	CERAMIC	220PF	10%	50V	C565	1-162-282-31	CERAMIC	100PF	10%	50V
C515	1-162-294-31	CERAMIC	0.001uF	10%	50V	C566	1-164-159-11	CERAMIC	0.1uF		50V
C516	1-162-302-11	CERAMIC	0.0022uF	30%	16V	C568	1-164-159-11	CERAMIC	0.1uF		50V
C517	1-162-286-31	CERAMIC	220PF	10%	50V	C573	1-162-179-11	CERAMIC	0.1uF		50V
C518	1-162-306-11	CERAMIC	0.01uF	20%	16V	C575	1-164-159-11	CERAMIC	0.1uF		50V
C519	1-162-306-11	CERAMIC	0.01uF	20%	16V	C576	1-164-159-11	CERAMIC	0.1uF		50V
C520	1-162-290-31	CERAMIC	470PF	10%	50V	C578	1-164-159-11	CERAMIC	0.1uF		50V
C521	1-162-306-11	CERAMIC	0.01uF	20%	16V	C579	1-164-159-11	CERAMIC	0.1uF		50V
C522	1-126-965-11	ELECT	22uF	20%	50V	C580	1-162-203-31	CERAMIC	15PF	5%	50V
C523	1-162-306-11	CERAMIC	0.01uF	20%	16V	C581	1-162-205-31	CERAMIC	18PF	5%	50V
C524	1-162-290-31	CERAMIC	470PF	10%	50V	C582	1-164-159-11	CERAMIC	0.1uF		50V
C525	1-162-306-11	CERAMIC	0.01uF	20%	16V	C583	1-162-600-11	CERAMIC	0.0047uF	20%	16V
C526	1-126-965-11	ELECT	22uF	20%	50V	C584	1-162-600-11	CERAMIC	0.0047uF	20%	16V
C527	1-164-159-11	CERAMIC	0.1uF		50V	C585	1-162-294-31	CERAMIC	0.001uF	10%	50V
C528	1-164-159-11	CERAMIC	0.1uF		50V						
								< CONNECTOR >			
C529	1-126-925-11	ELECT	470uF	20%	10V	CN302	1-691-766-31	PLUG (MICRO CONNECTOR) 4P			
C530	1-162-294-31	CERAMIC	0.001uF	10%	50V	CN303	1-691-766-11	PLUG (MICRO CONNECTOR) 4P			
C531	1-126-961-11	ELECT	2.2uF	20%	50V	CN304	1-691-768-11	PLUG (MICRO CONNECTOR) 6P			
C532	1-164-159-11	CERAMIC	0.1uF		50V	CN305	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
C533	1-162-203-31	CERAMIC	15PF	5%	50V	CN307	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
C534	1-162-203-31	CERAMIC	15PF	5%	50V	CN308	1-691-765-21	PLUG (MICRO CONNECTOR) 3P			
C535	1-164-159-11	CERAMIC	0.1uF		50V	CN501	1-691-767-11	PLUG (MICRO CONNECTOR) 5P			
C536	1-136-165-00	FILM	0.1uF	5%	50V	CN502	1-691-766-11	PLUG (MICRO CONNECTOR) 4P			
C537	1-126-925-11	ELECT	470uF	20%	10V	* CN504	1-568-845-11	SOCKET, CONNECTOR 31P			
C538	1-164-159-11	CERAMIC	0.1uF		50V	* CN505	1-568-836-11	SOCKET, CONNECTOR 17P			
C539	1-162-306-11	CERAMIC	0.01uF	20%	16V	CN506	1-770-164-11	PIN, CONNECTOR (PC BOARD) 15P			
C540	1-162-294-31	CERAMIC	0.001uF	10%	50V	CN507	1-691-461-11	PIN, CONNECTOR (PC BOARD) 5P			
C541	1-162-284-31	CERAMIC	150PF	10%	50V	* CN508	1-564-339-00	PIN, CONNECTOR 5P			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN509	1-691-765-31	PLUG (MICRO CONNECTOR) 3P		IC201	8-759-900-72	IC NE5532P	
CN510	1-691-765-41	PLUG (MICRO CONNECTOR) 3P		IC202	8-759-900-72	IC NE5532P	
CN511	1-691-765-21	PLUG (MICRO CONNECTOR) 3P		IC301	8-759-231-58	IC TA7812S	
CN512	1-691-768-31	PLUG (MICRO CONNECTOR) 6P		IC302	8-759-245-86	IC TA7912S	
* CN517	1-691-007-11	CONNECTOR, PC BOARD (PLUG) 4P		IC303	8-759-602-83	IC M5238P	
CN518	1-764-187-11	PIN, CONNECTOR 8P		IC304	8-759-602-83	IC M5238P	
CN519	1-764-187-11	PIN, CONNECTOR 8P		IC305	8-759-602-67	IC M5278L05	
< DIODE >				IC306	8-759-189-33	IC M5279L05-TP	
D101	8-719-987-63	DIODE 1N4148M		IC307	8-759-330-53	IC CXD8493M-E1	
D102	8-719-987-63	DIODE 1N4148M		IC308	8-759-196-21	IC CXD8482Q	
D103	8-719-987-63	DIODE 1N4148M		IC309	8-759-925-90	IC SN74HC74ANS	
D104	8-719-987-63	DIODE 1N4148M		IC310	8-759-269-92	IC SN74HCU04ANS-E20	
D201	8-719-987-63	DIODE 1N4148M		IC311	8-759-269-92	IC SN74HCU04ANS-E20	
D202	8-719-987-63	DIODE 1N4148M		IC312	8-759-926-95	IC SN74HC4020NS	
D203	8-719-987-63	DIODE 1N4148M		IC313	8-759-270-50	IC SN74HC368ANS-E20	
D204	8-719-987-63	DIODE 1N4148M		IC314	8-759-370-62	IC CXD8505BQ	
D301	8-719-230-02	DIODE 30DF2		IC315	8-759-250-81	IC TC5081AP	
D302	8-719-230-02	DIODE 30DF2		IC316	8-759-094-53	IC TA7805S	
D303	8-719-230-02	DIODE 30DF2		IC317	8-759-094-53	IC TA7805S	
D304	8-719-230-02	DIODE 30DF2		IC318	8-759-602-67	IC M5278L05	
D305	8-719-987-63	DIODE 1N4148M		IC319	8-759-231-58	IC TA7812S	
D306	8-719-987-63	DIODE 1N4148M		IC320	8-759-245-86	IC TA7912S	
D307	8-719-987-63	DIODE 1N4148M		IC325	8-759-242-72	IC TC7W00F	
D308	8-719-976-30	DIODE KV1560N		IC501	8-752-885-46	IC CXP87540-037Q	
D313	8-719-987-63	DIODE 1N4148M		IC502	8-752-878-83	IC CXP87532-039Q	
D314	8-719-987-63	DIODE 1N4148M		IC503	8-752-355-55	IC CXD2605Q	
D317	8-719-987-63	DIODE 1N4148M		IC504	8-752-364-91	IC CXK58257BM-10LL-T6	
D501	8-719-312-47	DIODE RBA-406B		IC505	8-759-281-29	IC YM3412B-F	
D502	8-719-312-47	DIODE RBA-406B		IC508	8-759-927-46	IC SN74HC00ANS	
D503	8-719-200-77	DIODE 10E2N		IC509	8-759-701-01	IC NJM2904M	
D504	8-719-015-13	DIODE UZP-9.1BC-TP		IC510	8-759-927-46	IC SN74HC00ANS	
D505	8-719-200-77	DIODE 10E2N		IC511	8-759-926-17	IC SN74HC153ANS	
D506	8-719-200-77	DIODE 10E2N		IC512	8-759-007-80	IC MC74HC175F	
D507	8-719-985-57	DIODE HZS4BLL-TA		IC513	8-759-269-92	IC SN74HCU04ANS-E20	
D508	8-719-987-63	DIODE 1N4148M		IC514	8-759-927-46	IC SN74HC00ANS	
D509	8-719-987-63	DIODE 1N4148M		IC515	8-759-927-46	IC SN74HC00ANS	
D510	8-719-200-77	DIODE 10E2N		IC516	8-759-634-43	IC M51953BFP	
D511	8-719-911-06	DIODE 1SS106		IC517	8-759-426-52	IC AT24C01A-10SC-TP-B	
D512	8-719-911-06	DIODE 1SS106		IC518	8-759-333-82	IC MSM6782-01MS-K-R1	
D513	8-719-045-72	DIODE KV1550NT		IC519	8-759-925-90	IC SN74HC74ANS	
< FUSIBLE >				IC520	8-759-701-01	IC NJM2904M	
△ FR304	1-219-139-11	FUSIBLE	0.68	10%	1/4W	F	
△ FR305	1-219-139-11	FUSIBLE	0.68	10%	1/4W	F	
△ FR501	1-219-136-11	FUSIBLE	0.22	10%	1/4W	F	
△ FR502	1-212-873-11	FUSIBLE	47	5%	1/4W	F	
< IC >				IC521	8-759-701-01	IC NJM2904M	
IC101	8-759-900-72	IC NE5532P		IC522	8-759-701-01	IC NJM2904M	
IC102	8-759-900-72	IC NE5532P		IC523	8-759-633-65	IC M54641L	
< JACK >				J501	1-770-162-11	JACK, PIN 2P (DIGITAL IN/OUT)	
< COIL >				L301	1-410-509-11	INDUCTOR 10uH	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
L302	1-410-509-11	INDUCTOR 10uH		Q516	8-729-119-76	TRANSISTOR 2SA1175-HFE	
L303	1-410-509-11	INDUCTOR 10uH		Q517	8-729-620-05	TRANSISTOR 2SC2603-EF	
L304	1-410-509-11	INDUCTOR 10uH		Q518	8-729-620-05	TRANSISTOR 2SC2603-EF	
L305	1-410-509-11	INDUCTOR 10uH					
L306	1-410-509-11	INDUCTOR 10uH		Q519	8-729-620-05	TRANSISTOR 2SC2603-EF	
L307	1-426-850-11	COIL (RF) 0.4uH		Q520	8-729-900-80	TRANSISTOR DTC114ES	
L308	1-410-397-21	FERRITE BEAD INDUCTOR		Q521	8-729-620-05	TRANSISTOR 2SC2603-EF	
L309	1-410-397-21	FERRITE BEAD INDUCTOR		Q522	8-729-900-80	TRANSISTOR DTC114ES	
L310	1-410-509-11	INDUCTOR 10uH		Q523	8-729-900-80	TRANSISTOR DTC114ES	
L311	1-410-509-11	INDUCTOR 10uH		Q524	8-729-900-80	TRANSISTOR DTC114ES	
L312	1-410-509-11	INDUCTOR 10uH					
L501	1-410-509-11	INDUCTOR 10uH				< RESISTOR >	
L502	1-410-509-11	INDUCTOR 10uH		R102	1-249-441-11	CARBON 100K 5%	1/4W
L503	1-410-509-11	INDUCTOR 10uH		R106	1-249-429-11	CARBON 10K 5%	1/4W
L504	1-410-498-11	INDUCTOR 1.2uH		R107	1-249-433-11	CARBON 22K 5%	1/4W
L506	1-410-509-11	INDUCTOR 10uH		R108	1-249-425-11	CARBON 4.7K 5%	1/4W
				R109	1-249-425-11	CARBON 4.7K 5%	1/4W
		< GROUND TERMINAL >					
LUG301	1-537-770-21	TERMINAL BOARD, GROUND		R110	1-249-401-11	CARBON 47 5%	1/4W
LUG302	1-537-770-21	TERMINAL BOARD, GROUND		R111	1-249-401-11	CARBON 47 5%	1/4W
LUG304	1-537-770-21	TERMINAL BOARD, GROUND		R112	1-259-444-11	CARBON 4.7K 1%	1/6W
LUG503	1-537-770-21	TERMINAL BOARD, GROUND		R113	1-259-444-11	CARBON 4.7K 1%	1/6W
				R114	1-259-444-11	CARBON 4.7K 1%	1/6W
		< TRANSISTOR >					
Q102	8-729-107-85	TRANSISTOR 2SC3623A-K		R115	1-259-444-11	CARBON 4.7K 1%	1/6W
Q202	8-729-107-85	TRANSISTOR 2SC3623A-K		R116	1-259-432-11	CARBON 1.5K 1%	1/6W
Q303	8-729-900-80	TRANSISTOR DTC114ES		R117	1-259-432-11	CARBON 1.5K 1%	1/6W
Q304	8-729-620-05	TRANSISTOR 2SC2603-EF		R118	1-259-444-11	CARBON 4.7K 1%	1/6W
Q305	8-729-620-05	TRANSISTOR 2SC2603-EF		R119	1-259-444-11	CARBON 4.7K 1%	1/6W
Q306	8-729-620-05	TRANSISTOR 2SC2603-EF		R120	1-259-436-11	CARBON 2.2K 1%	1/6W
Q307	8-729-200-56	TRANSISTOR 2SK241-GR		R121	1-259-436-11	CARBON 2.2K 1%	1/6W
Q308	8-729-200-56	TRANSISTOR 2SK241-GR		R122	1-259-436-11	CARBON 2.2K 1%	1/6W
Q309	8-729-422-57	TRANSISTOR UN4111		R123	1-259-436-11	CARBON 2.2K 1%	1/6W
Q310	8-729-900-80	TRANSISTOR DTC114ES		R124	1-249-419-11	CARBON 1.5K 5%	1/4W
Q311	8-729-900-80	TRANSISTOR DTC114ES		R125	1-249-419-11	CARBON 1.5K 5%	1/4W
Q312	8-729-900-80	TRANSISTOR DTC114ES		R126	1-249-441-11	CARBON 100K 5%	1/4W
Q501	8-729-620-05	TRANSISTOR 2SC2603-EF		R127	1-249-407-11	CARBON 150 5%	1/4W
Q502	8-729-119-76	TRANSISTOR 2SA1175-HFE		R128	1-249-407-11	CARBON 150 5%	1/4W
Q503	8-729-140-97	TRANSISTOR 2SB734-34		R129	1-249-429-11	CARBON 10K 5%	1/4W
Q504	8-729-927-11	TRANSISTOR 2SA1585SQR		R202	1-249-441-11	CARBON 100K 5%	1/4W
Q505	8-729-927-12	TRANSISTOR 2SC4115SQR		R206	1-249-429-11	CARBON 10K 5%	1/4W
Q506	8-729-927-11	TRANSISTOR 2SA1585SQR		R207	1-249-433-11	CARBON 22K 5%	1/4W
Q507	8-729-927-12	TRANSISTOR 2SC4115SQR		R208	1-249-425-11	CARBON 4.7K 5%	1/4W
Q508	8-729-900-80	TRANSISTOR DTC114ES		R209	1-249-425-11	CARBON 4.7K 5%	1/4W
Q509	8-729-900-80	TRANSISTOR DTC114ES		R210	1-249-401-11	CARBON 47 5%	1/4W
Q510	8-729-900-80	TRANSISTOR DTC114ES		R211	1-249-401-11	CARBON 47 5%	1/4W
Q511	8-729-900-80	TRANSISTOR DTC114ES		R212	1-259-444-11	CARBON 4.7K 1%	1/6W
Q512	8-729-141-83	TRANSISTOR 2SB1094-LK		R213	1-259-444-11	CARBON 4.7K 1%	1/6W
Q513	8-729-119-76	TRANSISTOR 2SA1175-HFE		R214	1-259-444-11	CARBON 4.7K 1%	1/6W
Q514	8-729-620-05	TRANSISTOR 2SC2603-EF		R215	1-259-444-11	CARBON 4.7K 1%	1/6W
Q515	8-729-141-83	TRANSISTOR 2SB1094-LK		R216	1-259-432-11	CARBON 1.5K 1%	1/6W
				R217	1-259-432-11	CARBON 1.5K 1%	1/6W
				R218	1-259-444-11	CARBON 4.7K 1%	1/6W
				R219	1-259-444-11	CARBON 4.7K 1%	1/6W

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R220	1-259-436-11	CARBON	2.2K	1%	1/6W	R349	1-249-409-11	CARBON	220	5%	1/4W
R221	1-259-436-11	CARBON	2.2K	1%	1/6W	R350	1-249-411-11	CARBON	330	5%	1/4W
R222	1-259-436-11	CARBON	2.2K	1%	1/6W	R351	1-249-413-11	CARBON	470	5%	1/4W
R223	1-259-436-11	CARBON	2.2K	1%	1/6W	R352	1-249-417-11	CARBON	1K	5%	1/4W
R224	1-249-419-11	CARBON	1.5K	5%	1/4W						
R225	1-249-419-11	CARBON	1.5K	5%	1/4W	R353	1-249-417-11	CARBON	1K	5%	1/4W
R226	1-249-441-11	CARBON	100K	5%	1/4W	R354	1-249-417-11	CARBON	1K	5%	1/4W
R227	1-249-407-11	CARBON	150	5%	1/4W	R501	1-249-425-11	CARBON	4.7K	5%	1/4W
R228	1-249-407-11	CARBON	150	5%	1/4W	R502	1-249-429-11	CARBON	10K	5%	1/4W
R229	1-249-429-11	CARBON	10K	5%	1/4W	R503	1-249-421-11	CARBON	2.2K	5%	1/4W
R303	1-249-429-11	CARBON	10K	5%	1/4W	R504	1-249-433-11	CARBON	22K	5%	1/4W
R304	1-249-413-11	CARBON	470	5%	1/4W	R505	1-247-843-11	CARBON	3.3K	5%	1/4W
R305	1-249-413-11	CARBON	470	5%	1/4W	R506	1-249-413-11	CARBON	470	5%	1/4W
R306	1-249-417-11	CARBON	1K	5%	1/4W	R507	1-249-429-11	CARBON	10K	5%	1/4W
R307	1-249-417-11	CARBON	1K	5%	1/4W	R508	1-249-409-11	CARBON	220	5%	1/4W
R308	1-249-417-11	CARBON	1K	5%	1/4W	R509	1-249-409-11	CARBON	220	5%	1/4W
R309	1-249-413-11	CARBON	470	5%	1/4W	R510	1-249-409-11	CARBON	220	5%	1/4W
R310	1-249-441-11	CARBON	100K	5%	1/4W	R511	1-249-409-11	CARBON	220	5%	1/4W
R311	1-249-417-11	CARBON	1K	5%	1/4W	R512	1-249-441-11	CARBON	100K	5%	1/4W
R312	1-247-903-00	CARBON	1M	5%	1/4W	R513	1-249-441-11	CARBON	100K	5%	1/4W
R313	1-249-407-11	CARBON	150	5%	1/4W	R514	1-249-441-11	CARBON	100K	5%	1/4W
R314	1-249-441-11	CARBON	100K	5%	1/4W	R515	1-249-441-11	CARBON	100K	5%	1/4W
R315	1-249-417-11	CARBON	1K	5%	1/4W	R516	1-249-441-11	CARBON	100K	5%	1/4W
R316	1-247-903-00	CARBON	1M	5%	1/4W	R517	1-249-441-11	CARBON	100K	5%	1/4W
R317	1-249-407-11	CARBON	150	5%	1/4W	R518	1-249-441-11	CARBON	100K	5%	1/4W
R320	1-249-411-11	CARBON	330	5%	1/4W	R519	1-249-441-11	CARBON	100K	5%	1/4W
R321	1-249-417-11	CARBON	1K	5%	1/4W	R520	1-249-441-11	CARBON	100K	5%	1/4W
R322	1-249-441-11	CARBON	100K	5%	1/4W	R522	1-249-441-11	CARBON	100K	5%	1/4W
R323	1-249-409-11	CARBON	220	5%	1/4W	R523	1-249-441-11	CARBON	100K	5%	1/4W
R324	1-249-409-11	CARBON	220	5%	1/4W	R524	1-249-429-11	CARBON	10K	5%	1/4W
R325	1-249-413-11	CARBON	470	5%	1/4W	R525	1-249-417-11	CARBON	1K	5%	1/4W
R326	1-249-413-11	CARBON	470	5%	1/4W	R526	1-249-429-11	CARBON	10K	5%	1/4W
R327	1-249-413-11	CARBON	470	5%	1/4W	R527	1-247-807-31	CARBON	100	5%	1/4W
R328	1-249-425-11	CARBON	4.7K	5%	1/4W	R528	1-249-417-11	CARBON	1K	5%	1/4W
R329	1-249-417-11	CARBON	1K	5%	1/4W	R529	1-249-409-11	CARBON	220	5%	1/4W
R330	1-249-401-11	CARBON	47	5%	1/4W	R530	1-249-441-11	CARBON	100K	5%	1/4W
R331	1-249-417-11	CARBON	1K	5%	1/4W	R531	1-249-441-11	CARBON	100K	5%	1/4W
R332	1-249-429-11	CARBON	10K	5%	1/4W	R532	1-249-429-11	CARBON	10K	5%	1/4W
R333	1-249-421-11	CARBON	2.2K	5%	1/4W	R533	1-249-417-11	CARBON	1K	5%	1/4W
R334	1-249-429-11	CARBON	10K	5%	1/4W	R534	1-249-429-11	CARBON	10K	5%	1/4W
R335	1-249-429-11	CARBON	10K	5%	1/4W	R535	1-247-807-31	CARBON	100	5%	1/4W
R336	1-249-428-11	CARBON	8.2K	5%	1/4W	R536	1-249-417-11	CARBON	1K	5%	1/4W
R337	1-249-441-11	CARBON	100K	5%	1/4W	R537	1-249-409-11	CARBON	220	5%	1/4W
R338	1-249-417-11	CARBON	1K	5%	1/4W	R539	1-249-409-11	CARBON	220	5%	1/4W
R339	1-249-417-11	CARBON	1K	5%	1/4W	R540	1-249-409-11	CARBON	220	5%	1/4W
R340	1-249-417-11	CARBON	1K	5%	1/4W	R541	1-249-441-11	CARBON	100K	5%	1/4W
R341	1-247-895-00	CARBON	470K	5%	1/4W	R544	1-249-441-11	CARBON	100K	5%	1/4W
R342	1-249-437-11	CARBON	47K	5%	1/4W	R545	1-249-429-11	CARBON	10K	5%	1/4W
R343	1-249-441-11	CARBON	100K	5%	1/4W	R546	1-249-429-11	CARBON	10K	5%	1/4W
R345	1-249-429-11	CARBON	10K	5%	1/4W	R547	1-249-429-11	CARBON	10K	5%	1/4W
R348	1-249-409-11	CARBON	220	5%	1/4W	R548	1-249-441-11	CARBON	100K	5%	1/4W
						R549	1-249-441-11	CARBON	100K	5%	1/4W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R550	1-249-441-11	CARBON	100K	5%	1/4W	R606	1-249-409-11	CARBON	220	5%	1/4W
R551	1-249-441-11	CARBON	100K	5%	1/4W						
R552	1-249-429-11	CARBON	10K	5%	1/4W	R607	1-249-427-11	CARBON	6.8K	5%	1/4W
						R608	1-249-417-11	CARBON	1K	5%	1/4W
R553	1-249-425-11	CARBON	4.7K	5%	1/4W	R610	1-249-441-11	CARBON	100K	5%	1/4W
R554	1-249-425-11	CARBON	4.7K	5%	1/4W	R611	1-249-411-11	CARBON	330	5%	1/4W
R555	1-249-429-11	CARBON	10K	5%	1/4W	R612	1-249-437-11	CARBON	47K	5%	1/4W
R556	1-249-429-11	CARBON	10K	5%	1/4W						
R557	1-249-441-11	CARBON	100K	5%	1/4W	R613	1-249-429-11	CARBON	10K	5%	1/4W
						R614	1-249-429-11	CARBON	10K	5%	1/4W
R558	1-249-441-11	CARBON	100K	5%	1/4W	R615	1-247-807-31	CARBON	100	5%	1/4W
R559	1-249-441-11	CARBON	100K	5%	1/4W	R616	1-249-429-11	CARBON	10K	5%	1/4W
R560	1-249-441-11	CARBON	100K	5%	1/4W	R617	1-249-435-11	CARBON	33K	5%	1/4W
R561	1-249-441-11	CARBON	100K	5%	1/4W						
R562	1-249-441-11	CARBON	100K	5%	1/4W	R618	1-249-421-11	CARBON	2.2K	5%	1/4W
						R619	1-249-421-11	CARBON	2.2K	5%	1/4W
R563	1-249-429-11	CARBON	10K	5%	1/4W	R620	1-247-807-31	CARBON	100	5%	1/4W
R564	1-249-429-11	CARBON	10K	5%	1/4W	R621	1-247-804-11	CARBON	75	5%	1/4W
R565	1-249-429-11	CARBON	10K	5%	1/4W	R622	1-249-429-11	CARBON	10K	5%	1/4W
R566	1-249-417-11	CARBON	1K	5%	1/4W						
R567	1-249-429-11	CARBON	10K	5%	1/4W	R623	1-249-429-11	CARBON	10K	5%	1/4W
						R625	1-249-429-11	CARBON	10K	5%	1/4W
R568	1-249-429-11	CARBON	10K	5%	1/4W	R626	1-249-429-11	CARBON	10K	5%	1/4W
R569	1-249-429-11	CARBON	10K	5%	1/4W	R627	1-249-429-11	CARBON	10K	5%	1/4W
R570	1-249-429-11	CARBON	10K	5%	1/4W	R628	1-249-429-11	CARBON	10K	5%	1/4W
R571	1-247-807-31	CARBON	100	5%	1/4W						
R572	1-249-413-11	CARBON	470	5%	1/4W	R629	1-249-429-11	CARBON	10K	5%	1/4W
						R630	1-249-429-11	CARBON	10K	5%	1/4W
R573	1-247-807-31	CARBON	100	5%	1/4W	R634	1-247-843-11	CARBON	3.3K	5%	1/4W
R574	1-249-441-11	CARBON	100K	5%	1/4W	R635	1-247-843-11	CARBON	3.3K	5%	1/4W
R575	1-249-429-11	CARBON	10K	5%	1/4W	R636	1-247-843-11	CARBON	3.3K	5%	1/4W
R576	1-249-429-11	CARBON	10K	5%	1/4W						
R577	1-249-429-11	CARBON	10K	5%	1/4W	R637	1-249-429-11	CARBON	10K	5%	1/4W
						R638	1-249-429-11	CARBON	10K	5%	1/4W
R578	1-249-429-11	CARBON	10K	5%	1/4W	R639	1-247-804-11	CARBON	75	5%	1/4W
R581	1-249-441-11	CARBON	100K	5%	1/4W	R645	1-249-413-11	CARBON	470	5%	1/4W
R583	1-249-425-11	CARBON	4.7K	5%	1/4W						
R584	1-249-441-11	CARBON	100K	5%	1/4W	< VARIABLE RESISTOR >					
R585	1-249-441-11	CARBON	100K	5%	1/4W						
						RV501	1-241-763-11	RES, ADJ, CARBON 4.7K (T-END)			
R586	1-249-441-11	CARBON	100K	5%	1/4W	RV502	1-241-763-11	RES, ADJ, CARBON 4.7K (S-END)			
R587	1-249-441-11	CARBON	100K	5%	1/4W						
R588	1-249-441-11	CARBON	100K	5%	1/4W	< RELAY >					
R589	1-249-441-11	CARBON	100K	5%	1/4W						
R590	1-249-441-11	CARBON	100K	5%	1/4W	RY301	1-515-726-11	RELAY			
R591	1-249-441-11	CARBON	100K	5%	1/4W	< SWITCH >					
R593	1-249-417-11	CARBON	1K	5%	1/4W						
R594	1-249-421-11	CARBON	2.2K	5%	1/4W	S501	1-572-622-11	SWITCH, SLIDE (DIGITAL IN/OUT)			
R595	1-249-417-11	CARBON	1K	5%	1/4W						
R596	1-249-429-11	CARBON	10K	5%	1/4W	< TRANSFORMER >					
R597	1-249-441-11	CARBON	100K	5%	1/4W	T501	1-409-594-11	COIL (WITH CORE)			
R598	1-249-441-11	CARBON	100K	5%	1/4W						
R599	1-249-429-11	CARBON	10K	5%	1/4W	< VIBRATOR >					
R600	1-249-425-11	CARBON	4.7K	5%	1/4W						
R601	1-249-425-11	CARBON	4.7K	5%	1/4W	X301	1-567-814-11	VIBRATOR, CRYSTAL (24.576MHz)			
						X302	1-567-815-11	VIBRATOR, CRYSTAL (22.5792MHz)			
R602	1-249-425-11	CARBON	4.7K	5%	1/4W	X501	1-567-814-11	VIBRATOR, CRYSTAL (24.576MHz)			
R603	1-249-413-11	CARBON	470	5%	1/4W	X502	1-567-816-11	VIBRATOR, CRYSTAL (18.816MHz)			
R604	1-249-433-11	CARBON	22K	5%	1/4W	X503	1-567-098-61	VIBRATOR, CRYSTAL (32.768MHz)			
R605	1-249-433-11	CARBON	22K	5%	1/4W	*****					

MOTOR	PRIMARY	REC VOL	REC EN	REG	REM SW	REMOTE
--------------	----------------	----------------	---------------	------------	---------------	---------------

Ref. No.	Part No.	Description	Remark			
*	1-655-913-11	MOTOR BOARD *****				
		< CAPACITOR >				
C1	1-161-772-11	CERAMIC	0.1uF	10%	25V	
		< CONNECTOR >				
* CN1	1-564-498-11	PIN, CONNECTOR 5P				
* CN2	1-564-337-00	PIN, CONNECTOR 3P				

*	1-664-488-11	PRIMARY BOARD *****				
		< CAPACITOR >				
△ C901	1-113-916-11	CERAMIC	0.01uF	20%	250V	
△ C902	1-113-916-11	CERAMIC	0.01uF	20%	250V	
△ C903	1-113-920-11	CERAMIC	0.0022uF	20%	250V	
△ C904	1-113-920-11	CERAMIC	0.0022uF	20%	250V	
△ C905	1-113-920-11	CERAMIC	0.0022uF	20%	250V	
		< CONNECTOR >				
CN901	1-564-321-00	PIN, CONNECTOR 2P				
		< AC INLET >				
△ IL901	1-251-234-11	INLET, AC (∼AC IN)				
		< COIL >				
△ L901	1-424-485-11	FILTER, LINE				
		< GROUND TERMINAL >				
* LUG901	3-346-266-12	PLATE, GROUND				
		< SWITCH >				
△ S901	1-554-920-51	SWITCH, PUSH (AC POWER)(1 KEY) (POWER)				

*	1-664-485-11	REC VOL BOARD *****				
		< CONNECTOR >				
* CN306	1-564-519-11	PLUG, CONNECTOR 4P				
		< RESISTOR >				
R201	1-249-421-11	CARBON	2.2K	5%	1/4W	
		< VARIABLE RESISTOR >				
RV103	1-225-400-11	RES, VAR, CARBON 10K (REC LEVEL CH-1 (L))				
RV203	1-225-400-11	RES, VAR, CARBON 10K (REC LEVEL CH-2 (R))				

Ref. No.	Part No.	Description	Remark			
*	1-654-393-11	REC EN BOARD *****				
< SWITCH >						
S901	1-572-459-11	SWITCH, PUSH (CASSETTE IN)	*****			
*	1-664-490-11	REG BOARD *****				
< CAPACITOR >						
C907	1-136-165-00	FILM	0.1uF	5%	50V	
C908	1-136-165-00	FILM	0.1uF	5%	50V	
C909	1-136-177-00	FILM	1uF	5%	50V	
C910	1-136-177-00	FILM	1uF	5%	50V	
C911	1-162-294-31	CERAMIC	0.001uF	10%	50V	
< IC >						
IC901	8-759-450-47	IC BA05T				
IC902	8-759-390-48	IC uPC2406AHF				
< TRANSISTOR >						
Q901	8-729-209-15	TRANSISTOR 2SD2012	*****			
*	1-664-483-11	REM SW BOARD *****				
< CONNECTOR >						
* CN703	1-564-337-00	PIN, CONNECTOR 3P				
< RESISTOR >						
R728	1-249-429-11	CARBON	10K	5%	1/4W	
R729	1-249-435-11	CARBON	33K	5%	1/4W	
R735	1-249-429-11	CARBON	10K	5%	1/4W	
< SWITCH >						
S730	1-572-268-11	SWITCH, SLIDE (REMOTE)				
S731	1-572-269-11	SWITCH, SLIDE (KEY PROTECT)	*****			
*	A-2007-645-A	REMOTE BOARD, COMPLETE *****				
< CAPACITOR >						
C811	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C812	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C813	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C814	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C815	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C816	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C817	1-164-159-11	CERAMIC	0.1uF		50V	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REMOTE

RF AMP

Ref. No.	Part No.	Description	Remark		
C818	1-162-294-31	CERAMIC	0.001uF	10%	50V
C819	1-162-294-31	CERAMIC	0.001uF	10%	50V
< CONNECTOR >					
CN801	1-691-768-11	PLUG (MICRO CONNECTOR) 6P			
< CONPOSITION CIRCUIT BLOCK >					
CP801	1-233-930-11	CIRCUIT BLOCK, COMPOSITION 10Kx6			
< IC >					
IC802	8-759-916-20	IC SN74HC14AN			
< JACK >					
J803	1-770-355-11	CONNECTOR (DIN) 8P (REMOTE 1)			
J804	1-507-743-00	JACK, STEREO MINIATURE (REMOTE 2)			
< TRANSISTOR >					
Q801	8-729-900-80	TRANSISTOR DTC114ES			
Q802	8-729-900-80	TRANSISTOR DTC114ES			
Q803	8-729-900-80	TRANSISTOR DTC114ES			
Q804	8-729-900-80	TRANSISTOR DTC114ES			
Q805	8-729-900-80	TRANSISTOR DTC114ES			
Q806	8-729-900-80	TRANSISTOR DTC114ES			
Q807	8-729-422-57	TRANSISTOR UN4111			
Q808	8-729-422-57	TRANSISTOR UN4111			
< RESISTOR >					
R811	1-249-417-11	CARBON	1K	5%	1/4W
R812	1-249-417-11	CARBON	1K	5%	1/4W
R813	1-249-417-11	CARBON	1K	5%	1/4W
R814	1-249-417-11	CARBON	1K	5%	1/4W
R815	1-249-417-11	CARBON	1K	5%	1/4W
R816	1-249-417-11	CARBON	1K	5%	1/4W
R817	1-249-419-11	CARBON	1.5K	5%	1/4W
R818	1-247-843-11	CARBON	3.3K	5%	1/4W
R819	1-249-425-11	CARBON	4.7K	5%	1/4W
R820	1-249-429-11	CARBON	10K	5%	1/4W
R821	1-249-435-11	CARBON	33K	5%	1/4W
R822	1-249-409-11	CARBON	220	5%	1/4W
R823	1-249-409-11	CARBON	220	5%	1/4W

*	A-2006-561-A	RF AMP BOARD, COMPLETE			

< CAPACITOR >					
C1	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C2	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C3	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C4	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C5	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

Ref. No.	Part No.	Description	Remark		
C6	1-162-637-11	CERAMIC CHIP	0.47uF		16V
C7	1-164-299-11	CERAMIC CHIP	0.22uF	10%	25V
C8	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C9	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C10	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C11	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C12	1-162-638-11	CERAMIC CHIP	1uF		16V
C13	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C14	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C15	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C16	1-164-299-11	CERAMIC CHIP	0.22uF	10%	25V
C17	1-162-637-11	CERAMIC CHIP	0.47uF		16V
C18	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C19	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C20	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C21	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C22	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C23	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C24	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C25	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C26	1-163-007-11	CERAMIC CHIP	680PF	10%	50V
C27	1-164-337-11	CERAMIC CHIP	2.2uF		16V
C28	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
< CONNECTOR >					
CN1	1-569-349-11	CONNECTOR, F.P.C 6P			
* CN2	1-566-194-11	PIN, CONNECTOR (PC BOARD) 15P			
< IC >					
IC1	8-752-039-01	IC CXA1364R			
< COIL >					
L1	1-408-781-00	INDUCTOR CHIP	22uH		
L2	1-408-781-00	INDUCTOR CHIP	22uH		
L3	1-408-777-00	INDUCTOR CHIP	10uH		
L4	1-408-789-21	INDUCTOR CHIP	100uH		
< TRANSISTOR >					
Q1	8-729-903-82	TRANSISTOR FMW2			
Q2	8-729-905-35	TRANSISTOR 2SC4081T106R			
Q3	8-729-903-82	TRANSISTOR FMW2			
Q4	8-729-903-82	TRANSISTOR FMW2			
Q5	8-729-903-82	TRANSISTOR FMW2			
< RESISTOR >					
R1	1-216-025-00	METAL GLAZE	100	5%	1/10W
R2	1-216-073-00	METAL CHIP	10K	5%	1/10W
R3	1-216-076-00	METAL CHIP	13K	5%	1/10W
R4	1-216-076-00	METAL CHIP	13K	5%	1/10W
R5	1-216-096-00	METAL GLAZE	91K	5%	1/10W
R6	1-216-096-00	METAL GLAZE	91K	5%	1/10W

RF AMP

S END

SHUTTLE

SP

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description			Remark			
R7	1-216-066-00	METAL CHIP	5.1K	5%	1/10W	*	1-664-497-11	SP BOARD							
R8	1-216-066-00	METAL CHIP	5.1K	5%	1/10W			*****							
R9	1-216-077-00	METAL CHIP	15K	5%	1/10W										
R10	1-216-077-00	METAL CHIP	15K	5%	1/10W			< CAPACITOR >							
R11	1-216-077-00	METAL CHIP	15K	5%	1/10W	C820	1-126-925-11	ELECT	470uF	20%	10V				
R12	1-216-079-00	METAL CHIP	18K	5%	1/10W	C821	1-164-159-11	CERAMIC	0.1uF		50V				
R13	1-216-075-00	METAL CHIP	12K	5%	1/10W	C822	1-164-159-11	CERAMIC	0.1uF		50V				
R14	1-216-079-00	METAL CHIP	18K	5%	1/10W	C823	1-126-925-11	ELECT	470uF	20%	10V				
R15	1-216-077-00	METAL CHIP	15K	5%	1/10W	C824	1-162-294-31	CERAMIC	0.001uF	10%	50V				
R16	1-216-077-00	METAL CHIP	15K	5%	1/10W	C825	1-162-294-31	CERAMIC	0.001uF	10%	50V				
R17	1-216-077-00	METAL CHIP	15K	5%	1/10W	C826	1-162-294-31	CERAMIC	0.001uF	10%	50V				
R18	1-216-044-00	METAL CHIP	620	5%	1/10W	C827	1-164-159-11	CERAMIC	0.1uF		50V				
R19	1-216-083-00	METAL CHIP	27K	5%	1/10W	C828	1-164-159-11	CERAMIC	0.1uF		50V				
R20	1-216-078-00	METAL GLAZE	16K	5%	1/10W	< CONNECTOR >									
R21	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	* CN802	1-691-465-11	PIN, CONNECTOR (PC BOARD) 9P							
R22	1-216-096-00	METAL GLAZE	91K	5%	1/10W		CN803	1-573-105-11	CONNECTOR, PC BOARD 4P						
R23	1-216-078-00	METAL GLAZE	16K	5%	1/10W		* CN804	1-695-808-11	CONNECTOR, PC BOARD 8P						
R24	1-216-083-00	METAL CHIP	27K	5%	1/10W		* CN805	1-695-808-11	CONNECTOR, PC BOARD 8P						
< VARIABLE RESISTOR >						< IC >									
RV1	1-238-181-11	RES, ADJ, CERMET 4.7K				IC803	8-752-355-55	IC	CXD2605Q						
RV2	1-238-181-11	RES, ADJ, CERMET 4.7K							CXK58257BM-10LL-T6						
RV3	1-238-238-11	RES, ADJ, CERMET 22K							SN74HC00AN						
RV4	1-238-238-11	RES, ADJ, CERMET 22K													

< COIL >															
*	1-654-392-11	S END BOARD				L801	1-410-509-11	INDUCTOR	10uH						
		*****							10uH						
< TRANSISTOR >						< TRANSISTOR >									
Q950	1-808-957-11	TRANSISTOR PHOTO SENSOR				Q810	8-729-620-05	TRANSISTOR	2SC2603-EF						

*	1-664-487-11	SHUTTLE BOARD				< RESISTOR >									

R757	1-249-413-11	CARBON	470	5%	1/4W	R101	1-249-421-11	CARBON	2.2K	5%	1/4W				
						R825	1-249-425-11	CARBON	4.7K	5%	1/4W				
						R826	1-249-425-11	CARBON	4.7K	5%	1/4W				
						R827	1-249-413-11	CARBON	470	5%	1/4W				
						R828	1-249-433-11	CARBON	22K	5%	1/4W				
						R829	1-249-433-11	CARBON	22K	5%	1/4W				
R758	1-249-413-11	CARBON	470	5%	1/4W	R830	1-249-441-11	CARBON	100K	5%	1/4W				
R759	1-249-413-11	CARBON	470	5%	1/4W	R831	1-249-409-11	CARBON	220	5%	1/4W				
R760	1-249-413-11	CARBON	470	5%	1/4W	R832	1-247-807-31	CARBON	100	5%	1/4W				
R761	1-249-413-11	CARBON	470	5%	1/4W	R833	1-249-413-11	CARBON	470	5%	1/4W				
R762	1-249-413-11	CARBON	470	5%	1/4W	< SWITCH >									
S736	1-692-722-11	SWITCH, ROTARY (ENCODER) (SHUTTLE/DATA)				R834	1-249-413-11	CARBON	470	5%	1/4W				
						R835	1-249-409-11	CARBON	220	5%	1/4W				

SW

T END

THICK

UNBAL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	1-655-916-11	SW BOARD *****				< TRANSISTOR >	
		< SWITCH >		Q316	8-729-900-80	TRANSISTOR DTC114ES	
						< RESISTOR >	
S1	1-571-958-11	SWITCH, PUSH (1 KEY) (CASSETTE TABLE OUT)		R174	1-247-887-00	CARBON 220K 5% 1/4W	
S2	1-571-958-11	SWITCH, PUSH (1 KEY) (CASSETTE TABLE IN)		R175	1-249-431-11	CARBON 15K 5% 1/4W	
*****				R176	1-249-437-11	CARBON 47K 5% 1/4W	
*	1-654-391-11	T END BOARD *****		R177	1-249-437-11	CARBON 47K 5% 1/4W	
		< TRANSISTOR >		R178	1-249-437-11	CARBON 47K 5% 1/4W	
Q951	1-808-957-11	TRANSISTOR PHOTO SENSOR		R179	1-247-807-31	CARBON 100 5% 1/4W	
*****				R180	1-249-415-11	CARBON 680 5% 1/4W	
*	1-654-394-12	THICK BOARD *****		R274	1-247-887-00	CARBON 220K 5% 1/4W	
		< SWITCH >		R275	1-249-431-11	CARBON 15K 5% 1/4W	
S904	1-572-458-11	SWITCH, PUSH (THICK)		R276	1-249-437-11	CARBON 47K 5% 1/4W	
*****				R277	1-249-437-11	CARBON 47K 5% 1/4W	
*	A-2007-646-A	UNBAL BOARD, COMPLETE *****		R278	1-249-437-11	CARBON 47K 5% 1/4W	
		< CAPACITOR >		R279	1-247-807-31	CARBON 100 5% 1/4W	
C148	1-126-023-11	ELECT 100uF 20% 25V		R280	1-249-415-11	CARBON 680 5% 1/4W	
C149	1-107-597-11	CERAMIC 22PF 10% 500V				< RELAY >	
C248	1-126-023-11	ELECT 100uF 20% 25V		RY305	1-515-726-11	RELAY	
C249	1-107-597-11	CERAMIC 22PF 10% 500V		*****			
C380	1-126-023-11	ELECT 100uF 20% 25V				MISCELLANEOUS	
C381	1-164-159-11	CERAMIC 0.1uF 50V				*****	
C382	1-164-159-11	CERAMIC 0.1uF 50V		58	1-769-541-11	WIRE (FLAT TYPE) (17 CORE)	
		< CONNECTOR >		111	1-769-542-11	WIRE (FLAT TYPE) (31 CORE)	
CN314	1-691-766-21	PLUG (MICRO CONNECTOR) 4P		M901	A-2003-660-A	MOTOR ASSY (LOADING)	
CN315	1-691-766-31	PLUG (MICRO CONNECTOR) 4P		M902	8-835-306-01	MOTOR, DC U-17A (CAPSTAN)	
CN316	1-691-766-11	PLUG (MICRO CONNECTOR) 4P		M903	8-835-205-01	MOTOR, DC U-2A (REEL) (including PM901)	
CN317	1-691-766-41	PLUG (MICRO CONNECTOR) 4P		M904	8-848-549-11	DRUM ASSY DOU-15A	
CN319	1-564-505-11	PLUG, CONNECTOR 2P		M905	X-3370-655-1	MOTOR ASSY (CASSETTE COMPARTMENT)	
		< DIODE >		PM901	1-454-522-11	SOLENOID, PLUNGER	
D316	8-719-987-63	DIODE 1N4148M		△ T901	1-431-064-11	TRANSFORMER, POWER (US, Canadian)	
		< IC >		△ T901	1-431-065-11	TRANSFORMER, POWER (AEP, UK)	
IC326	8-759-981-96	IC RC4560D		*****			
		< JACK >				*****	
J307	1-770-163-11	JACK, PIN 4P (ANALOG (UNBALANCE))				HARDWARE LIST	

				#1	7-685-872-09	SCREW +BVTT 3X8 (S)	
				#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
				#4	7-685-881-09	SCREW +BVTT 4X8 (S)	
				#5	7-682-660-09	SCREW +PS 4X6	
				#6	7-685-660-29	SCREW +BVTP 4X10 TYPE2 SLIT	
				#7	7-621-772-18	SCREW +B 2X4	
				#8	7-682-550-09	SCREW +B 3X12	
				#9	7-621-772-20	SCREW +B 2X5	
				#10	7-621-773-86	SCREW +B 2.6X4	
				#11	7-621-772-08	SCREW +B 2X3	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

PCM-R700

Ref. No.	Part No.	Description	Remark
#12	7-627-556-17	SCREW, PRECISION +P 2.6X3 TYPE1	
#13	7-621-775-08	SCREW +B 2.6X3	
#14	7-627-553-67	SCREW, PRECISION +P 2X5	
#15	7-685-862-09	SCREW +BVTT 2.6X6 (S)	
#16	7-621-772-30	SCREW +B 2X6	
#17	7-627-852-48	PRECISION SCREW +P 1.7X3.5 TYPE3	
#18	7-627-552-47	SCREW, PRECISION +P 1.7X4	
#19	7-685-102-19	SCREW +P 2X4 TYPE2 NON-SLIT	
#21	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S	
#22	7-628-253-00	SCREW +PS 2X4	
#23	7-685-871-01	SCREW +BVTT 3X6 (S)	
#24	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3	
#25	7-627-553-27	SCREW, PRECISION +P 2X2.5	

ACCESSORIES & PACKING MATERIALS

	1-473-921-11	REMOTE COMMANDER (RM-D757)	
⚠	1-551-812-11	CORD, POWER (US, Canadian)	
⚠	1-590-910-11	CORD SET, POWER (AEP, UK)	
	2-297-913-00	WASHER (DIA.5), ORNAMENTAL	
		(for RACK MOUNT)	
	3-859-278-12	MANUAL, INSTRUCTION	
		(ENGLISH, FRENCH, GERMAN)	
	4-981-643-01	COVER, BATTERY (for RM-D757)	
	7-682-276-04	SCREW +RK 5X12 (for RACK MOUNT)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Printing Method for Large Sized Documents Such As Circuit Diagrams

Printing the page that exceeds A4-size two pages (or letter size) is possible by specifying the print range. (Acrobat Reader Version 4.0 or later)


1. The enlarged print is made, if a smaller range than A4 size is specified and the A4 size is selected as a print paper.
2. Almost real sized print is made, if the range is specified, meeting the print paper size.
3. The reduced print is made, if a larger range than the print paper size is specified.

Printing by Specifying a Range


In printing out the drawings such as a schematic diagram and a printed wiring board larger than the printed paper size, they can be printed by specifying the range. (Acrobat Reader Version 4.0 or later)

1. Display the page to be printed.
2. From the File menu, select [Page Setup] and set the paper size.
3. From the Command bar, select [Graphic Select Tool].

(Keep pressing  , select )

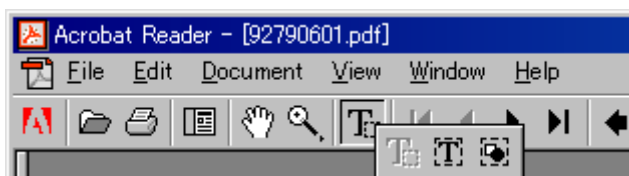

4. Dragging the cursor, enclose the range on the page to be printed.
5. From the File menu, select [Print] and make sure that the [Selected Graphic] is already checked. Also, if [Fit to page] is checked, the selected range is enlarged or reduced (and rotated as necessary) meeting the paper size.

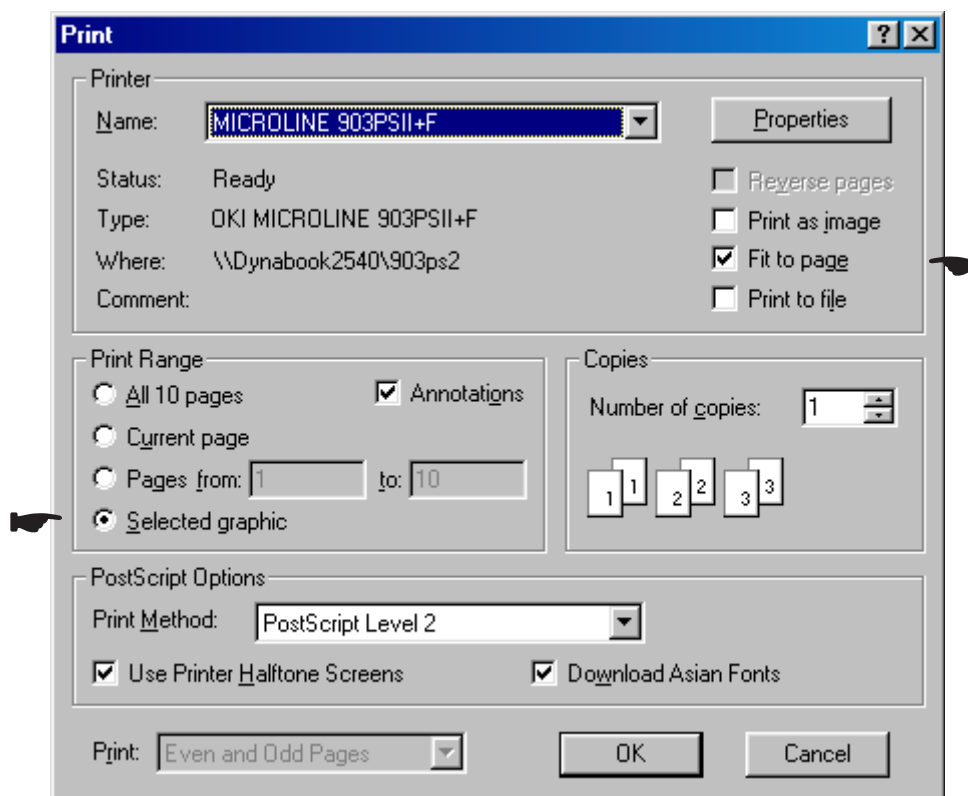

6. To cancel the printed range, click an arbitrary position on the screen.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]