


 
## SECTION 6

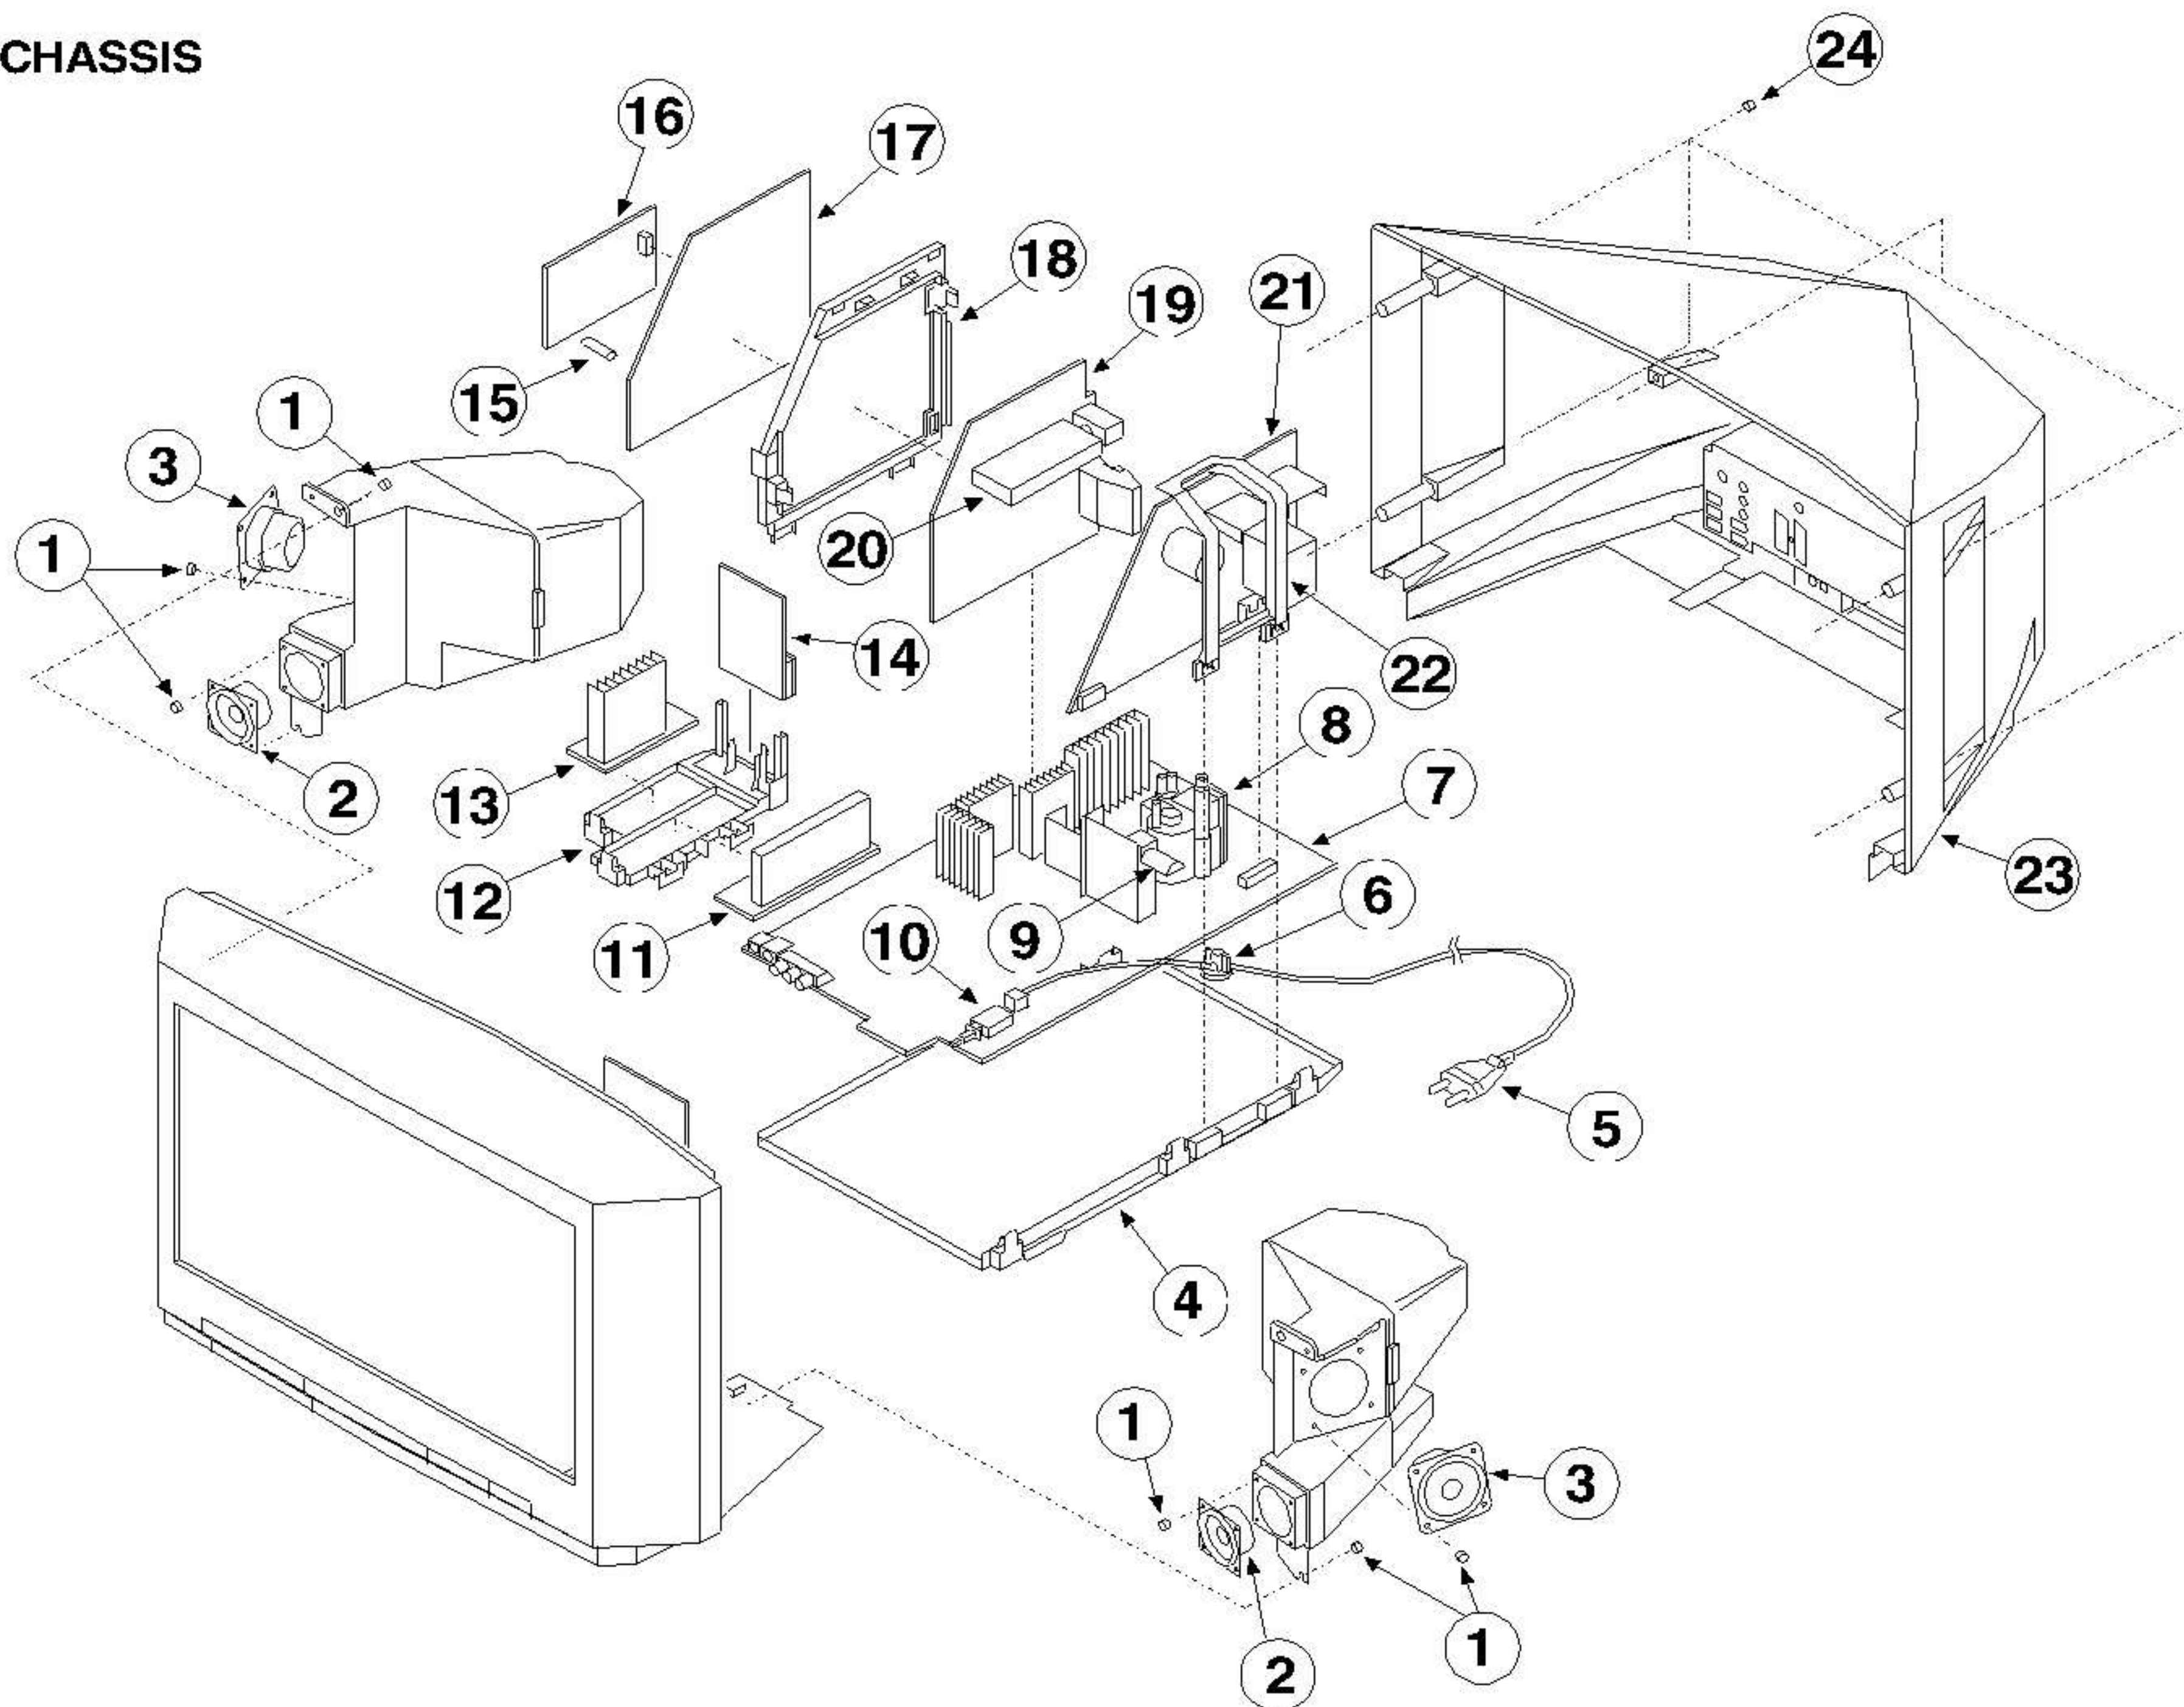
### EXPLODED VIEWS





**NOTE :**

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked  are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par une trame et une marque  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

**6-1. CHASSIS**

REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
1	4-039-355-11	SCREW(4X12), (+) BV TAPPING		15	*4-203-568-01	HOLDER, PCB	
2	1-505-154-11	SPEAKER (6.5CM)				(KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)	
3	1-505-155-11	SPEAKER (10CM)		16	*A-1626-007-A	Q BOARD, COMPLETE	
4	*4-203-457-01	BRACKET, MAIN				(KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)	
5	 1-751-680-11	CORD, POWER (WITH NOISE FILTER) 2.5A/250V		17	*A-1620-077-A	B BOARD, COMPLETE	
6	 *4-202-531-01	AC CORD LOCK (SC)				(KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)	
7	*A-1640-244-A	D BOARD, COMPLETE			*A-1620-084-A	B BOARD, COMPLETE (KV-28WS4B)	
8	 1-453-222-11	TRANSFORMER ASSY, FLYBACK (NX-4003/U2B4)		18	*4-203-612-01	BRACKET, A-B	
9	*4-203-609-01	HOLDER, G		19	*A-1632-563-A	A BOARD, COMPLETE (KV-28WS4A)	
10	 1-571-433-21	SWITCH, PUSH (AC POWER)			*A-1632-562-A	A BOARD, COMPLETE (KV-28WS4B)	
11	*A-1652-042-A	T BOARD, COMPLETE (KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)			*A-1632-493-A	A BOARD, COMPLETE (KV-28WS4D)	
	*A-1652-044-A	T BOARD, COMPLETE (KV-28WS4B)			*A-1632-564-A	A BOARD, COMPLETE (KV-28WS4E)	
12	*4-203-537-01	BRACKET, J-K-T			*A-1632-565-A	A BOARD, COMPLETE (KV-28WS4K)	
13	*A-1649-015-A	K BOARD, COMPLETE			*A-1632-566-A	A BOARD, COMPLETE (KV-28WS4R)	
14	*A-1651-083-A	J1 BOARD, COMPLETE (KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)		20	1-693-338-21	TUNER/VIF (AEP) (KV-28WS4A/28WS4D/28WS4E/28WS4K/28WS4R)	
	*A-1651-089-A	J1 BOARD, COMPLETE (KV-28WS4B)			1-693-340-21	TUNER/VIF (FR) (KV-28WS4B)	
				21	*A-1636-018-A	G BOARD, COMPLETE	
				22	*4-203-613-01	SUPPORTER, G	
				23	4-203-543-11	COVER, REAR	
				24	4-039-358-01	SCREW (4X16), (+) BV TAPPING	