

SECTION 4 EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

(1) BEZEL

- : TA, BV3 x 12
- ▲ : TA, BV4 x 12

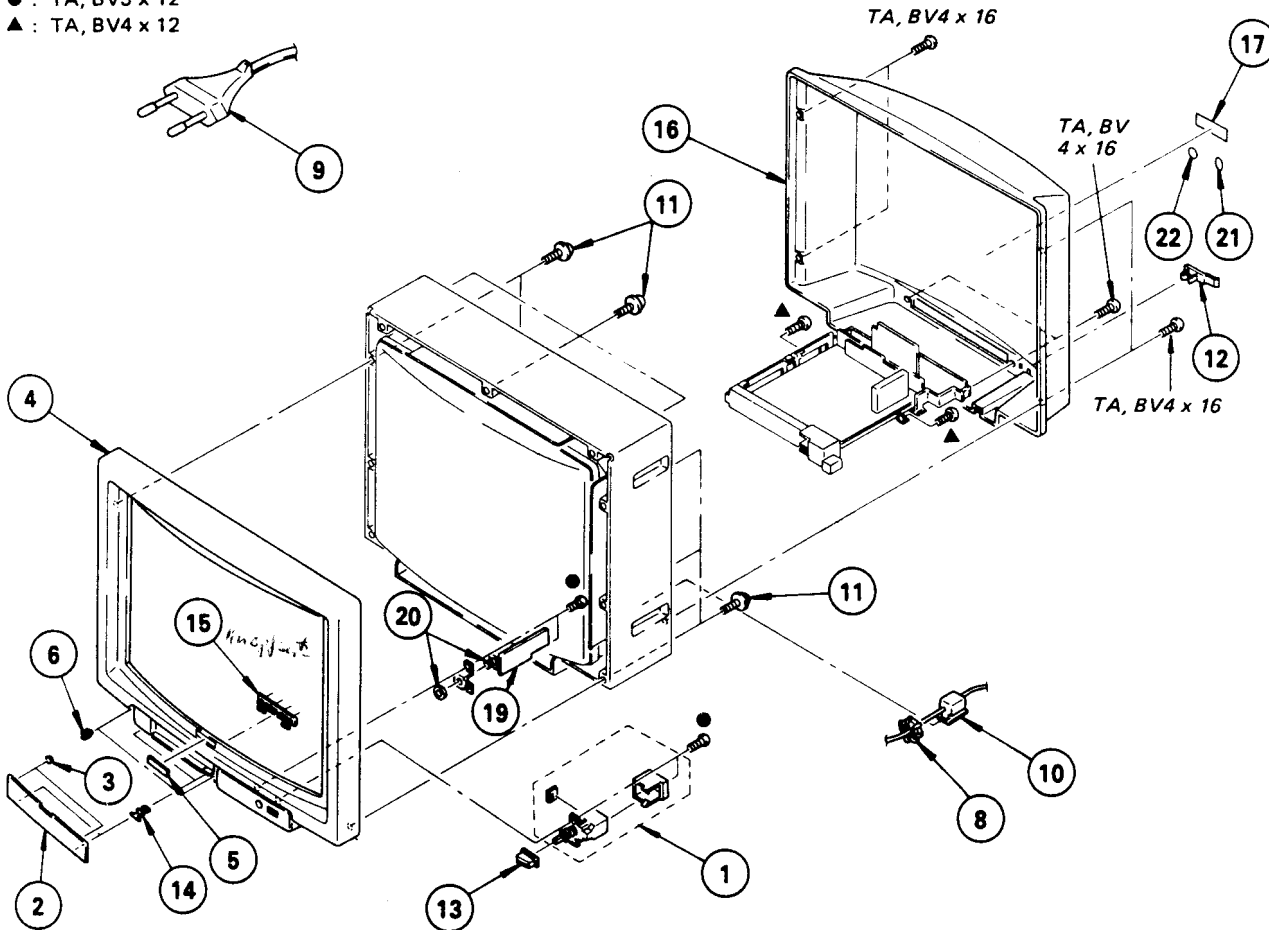

No.	Part No.	Description
1	▲1-553-225-00	SWITCH, PUSH
2	X-4361-901-0	DOOR ASSY
3	4-314-871-00	CUSHION
4	X-4361-902-0	BEZEL ASSY
5	3-701-912-00	EMBLEM, SONY, (LARGE)
6	4-342-511-00	RETAINER, DOOR
8	1-543-179-00	CORE, RING
9	▲1-551-270-00	CORD, POWER
10	▲4-022-115-00	HOLDER, AC CORD
11	4-304-494-11	SCREW, TAPPING, +PW4X16

Remark	No.	Part No.	Description	Remark
	12	4-329-127-00	CLAMP, CORD	
	13	4-361-901-00	BUTTON, POWER	
3	14	▲4-361-905-00	SHAFT, DOOR	
5,6	15	4-361-917-00	BUTTON, MULTI <i>Knoppf.</i>	
	16	4-361-927-00	COVER, BACK	
	17	▲4-361-967-00	LABEL, MODEL NUMBER	
	19	▲1-608-366-00	J2 BOARD	
	20	1-507-657-00	JACK	
	21	3-703-269-00	LABEL, SEV	
	22	4-310-380-00	LABEL, DEMKO	